EZ-ZONE® RM Scanner Module
User's Guide

RM Scanner Module

TOTAL CUSTOMER SATISFACTION
3 Year Warranty

ISO 9001
Registered Company
Winona, Minnesota USA

1241 Bundy Boulevard., Winona, Minnesota USA 55987
Phone: +1 (507) 454-5300, Fax: +1 (507) 452-4507 http://www.watlow.com

0600-0071-0000 Rev. B

Made in the U.S.A.

May 2011

Safety Information

We use note, caution and warning symbols throughout this book to draw your attention to important operational and safety information.

A "NOTE" marks a short message to alert you to an important detail.

A "CAUTION" safety alert appears with information that is important for protecting your equipment and performance. Be especially careful to read and follow all cautions that apply to your application.

A "WARNING" safety alert appears with information that is important for protecting you, others and equipment from damage. Pay very close attention to all warnings that apply to your application.

The safety alert symbol, ⚠ (an exclamation point in a triangle) precedes a general CAUTION or WARNING statement.

The electrical hazard symbol, ⚠ (a lightning bolt in a triangle) precedes an electric shock hazard CAUTION or WARNING safety statement. Further explanations follow:

Symbol	Explanation
	CAUTION – Warning or Hazard that needs further explanation than label on unit can provide. Consult User's Guide for further information.
	ESD Sensitive product, use proper grounding and handling techniques when installing or servicing product.
	Unit protected by double/reinforced insulation for shock hazard prevention.
	Do not throw in trash, use proper recycling techniques or consult manufacturer for proper disposal.
	Enclosure made of Polycarbonate material. Use proper recycling techniques or consult manufacturer for proper disposal.
	Unit can be powered with either alternating current (ac) voltage or direct current (dc) voltage.
	Unit is a Listed device per Underwriters Laboratories®. It has been evaluated to United States and Canadian requirements for Process Control Equipment. UL 61010 and CSA C22.2 No. 61010. File E185611 QUYX, QUYX7. See: www.ul.com
	Unit is a Listed device per Underwriters Laboratories®. It has been evaluated to United States and Canadian requirements for Hazardous Locations Class 1 Division II Groups A, B, C and D. ANSI/ISA 12.12.01-2007. File E184390 QUZW, QUZW7. See: www.ul.com
	Unit is compliant with European Union directives. See Declaration of Conformity for further details on Directives and Standards used for Compliance.
	Unit has been reviewed and approved by CSA International for use as Temperature Indicating-Regulating Equipment per CSA C22.2 No. 24. See: www.csa-international.org

Warranty

The EZ-ZONE® RM Scanner module is manufactured by ISO 9001-registered processes and is backed by a three-year warranty to the first purchaser for use, providing that the units have not been misapplied. Since Watlow has no control over their use, and sometimes misuse, we cannot guarantee against failure. Watlows' obligations hereunder, at Watlows' option, are limited to replacement, repair or refund of purchase price, and parts which upon examination prove to be defective within the warranty period specified. This warranty does not apply to damage resulting from transportation, alteration, misuse or abuse. The purchaser must use Watlow parts to maintain all listed ratings.

Technical Assistance

If you encounter a problem with your Watlow controller, review your configuration information to verify that your selections are consistent with your application: inputs, outputs, alarms, limits, etc. If the problem persists, you can get technical assistance from your local Watlow representative (see back cover), by e-mailing your questions to wintechsupport@watlow.com or by dialing +1 (507) 494-5656 between 7 a.m. and 5 p.m., Central Standard Time (CST). Ask for for an Applications Engineer. Please have the following information available when calling:

- Complete model number
- All configuration information
- User's Guide
- Factory Page

Return Material Authorization (RMA)

1. Call Watlow Customer Service, (507) 454-5300, for a Return Material Authorization (RMA) number before returning any item for repair. If you do not know why the product failed, contact an Application Engineer or Product Manager. All RMA's require:
   - Ship-to address
   - Bill-to address
   - Contact name
   - Phone number
   - Method of return shipment
   - Your P.O. number
   - Detailed description of the problem
   - Any special instructions
   - Name and phone number of person returning the product.
2. Prior approval and an Return Merchandise Authorization number from the Customer Service Department is required when returning any product for credit, repair or evaluation. Make sure the Return Merchandise Authorization number is on the outside of the carton and on all paperwork returned. Ship on a Freight Prepaid basis.
3. After we receive your return, we will examine it and try to

verify the reason for returning it.

4. In cases of manufacturing defect, we will enter a repair order, replacement order or issue credit for material returned. In cases of customer misuse, we will provide repair costs and request a purchase order to proceed with the repair work.
5. To return products that are not defective, goods must be in new condition, in the original boxes and they must be returned within 120 days of receipt. A 20 percent restocking charge is applied for all returned stock controls and accessories.
6. If the unit cannot be repaired, you will receive a letter of explanation and be given the option to have the unit returned to you at your expense or to have us scrap the unit.
7. Watlow reserves the right to charge for no trouble found (NTF) returns.

This EZ-ZONE® RM Scanner User's Guide is copyrighted by Watlow Electric, Inc., © May 2011 with all rights reserved.

EZ-ZONE RM is covered by U.S. Patent No. 6,005,577 and Patents Pending

TC Table of Contents

Chapter 1: Overview 3

A Conceptual View of the RMS 4

Getting Started Quickly 7

Dimensions 13

Chapter 2: Install and Wire 13

Power Supplies 15

RMS Installation and Removal on a DIN Rail 16

Wiring 18

Conventions Used in the Menu Pages 31

Chapter 3: Operations Pages 33

Analog Input Menu 34

Process Value Menu 34

Digital Input/Output Menu 35

Action Menu 36

Alarm Menu 36

Linearization Menu 37

Compare Menu 38

Timer Menu 38

Counter Menu 39

Logic Menu 40

Math Menu 41

Chapter 4: Setup Pages 43

Analog Input Menu 45

Process Value Menu 47

Digital Input/Output Menu 50

Action Menu 52

Output Menu 54

Alarm Menu 55

Linearization Menu 57

Compare Menu 60

Timer Menu 61

Counter Menu 64

Logic Menu 66

Math Menu 74

TC Table of Contents (cont.)

Variable Menu 78
Global Menu 78
Communications Menu 79

Chapter 5: Factory Pages 80

Custom Setup Menu 81
Security Setting Menu 81
Security Setting Menu 82
Diagnostics Menu 83
Calibration Menu 83

Chapter 6: Features 84

Saving and Restoring User Settings 85
Inputs 85
Using Lockout to Hide Pages and Menus 88
Using Password Security 89
Modbus - Using Programmable Memory Blocks 90
Software Configuration 91
Function Block Descriptions 94

Chapter 7: Appendix 121

Modbus - Programmable Memory Blocks 121
RMS Specifications 124
EZ-ZONE Rail-Mount Scanner Module Ordering Information 126
Index 127
How to Reach Us 131

1 Chapter 1: Overview

The EZ-ZONE® RM Scanner (RMS) is capable of monitoring from 1 to 16 inputs. As is the case with all of the RM family modules the RMS can be used as a standalone device or it can be used as part of a larger system of interconnected RM modules. The RMS takes the pain out of solving your need for high density monitoring requirements as either a standalone module or in applications that require distributed control.

It just got a whole lot easier to solve the thermal requirements of your system. The RMS module is provided in a space-saving, rail-mount package and is highly scalable where you only pay for what you need. For those applications that require the ability to configure/monitor the module over a network, Modbus RTU communications is an option. Other communications protocols are also available (e.g., EtherNet/IP, DeviceNet, Modbus TCP and Profibus DP) when used in conjunction with an RMA module or when using a Remote User Interface/ Gateway (RUI/GTW).

Standard Features and Benefits

Communication Capabilities

- Supports network connectivity to a PC or PLC
- Watlow Standard Bus or Modbus® RTU
- Provides plug and play capabilities with basic Remote User Interface (RUI's)
- SpecView for Watlow used over standard bus communications
- Free standard bus communications port and free PC software (EZ-ZONE Configurator)

Additional Control Integration Options

- Includes programmable timer functions
- Includes programmable counter functions
- Allows for simple math and logic programming options

Integrated Thermal Loop Diagnostics

- Users can easily tell that the entire thermal system is functioning properly
- Provides complete system diagnostics that are far superior to simple discrete level diagnostics
- Allows for flexible synergistic use of hardware, such as using one loop's sensor as a backup to another loop in the event of sensor failure.
- Helps prevent load loss or allow for maintenance to be scheduled when more convenient.
- Provides notification of system problems to help reduce maintenance and service costs

Off-the-Shelf Designed System Solution

- Improves system reliability with a factory integrated solution that minimizes inter-module connections and potential problems at screw termination points.
- Reduces installation cost
- Eliminates compatibility headaches often encountered with using many different components and brands

Scanner Handles High Ambient Temperatures

- Operates in an unprecedented temperature range of -18 to 65°C (0 to 149°F) for cabinets and panel enclosures with elevated temperature levels

Memory for Saving and Restoring User-Defined Parameter Default Settings

- Allows customers to save and restore their own defined defaults for machine parameter settings
- Reduces service calls and downtime due to inadvertent end user parameter adjustments

Synergistic Module Control

- Allows outputs selected for control (heat/cool), alarms or events to be located in any physical module, regardless of which module is connected to the input sensor

Split-Rail Control

- Allows modules to be mounted together or mounted remotely from one another
- Shares control operation via Synergistic Module Control capability
- Allows individual modules to be mounted closer to the physical input and output devices to which they are wired
- Improves system reliability and lowers wiring costs

Agency Approvals: UL® listed, CE, RoHS, W.E.E.E. SEMI F47-0200, Class 1 Div. 2 Rating on Selected Models

- Assures prompt product acceptance
- Reduces panel builder's documentation and agency costs

Removable Connectors

- Assures reliable wiring and reduces service calls
- Simplifies installation

Three-Year Warranty

- Demonstrates Watlow's reliability and product support

A Conceptual View of the RMS

The flexibility of the RMS's software and hardware allows for variation in configurations. Acquiring a better understanding of its functionality and capabilities while at the same time planning out how the controller can be used will deliver maximum effectiveness in your application.

It is useful to think of the scanner in three parts: inputs, procedures and outputs. Information flows from an input to a procedure to an output when the scanner is properly configured. An RMS module can carry out several procedures at the same time, e.g., monitoring inputs for several different alarm situations, monitoring and acting upon digital inputs, and outputs can be configured to drive devices such as heaters, audible alarms, lights. Each process needs to be thought out carefully and the scanner's inputs, procedures and outputs set up properly.

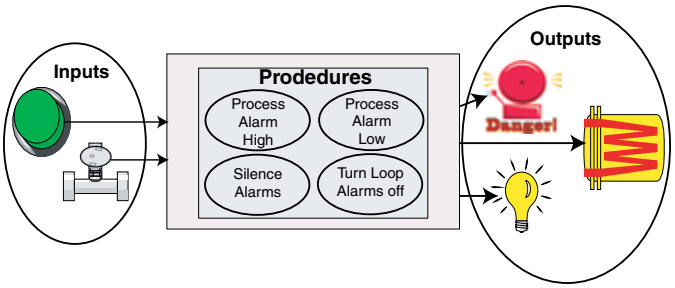

Inputs

The inputs provide the information that any given programmed procedure can act upon. Simply stated, this information may come from an operator pushing a button or from a sensor monitoring the temperature of a part being heated or cooled.

Each analog input typically uses a thermocouple, RTD or thermistor to read the process temperature. It can also read volts, current or resistance, allowing it to use various devices to read humidity, air pressure, operator inputs and others values. Each analog input must be configured to match the device connected to that input (see: Analog Input Menu, Setup Page).

Each digital input reads whether a device is active or inactive. An RMS module equipped with digital input/output hardware includes two sets of terminals where each of which can be used as either an input or an output. Each pair of terminals must be configured to function as either an input or an output with the direction parameter (see: Digital Input/Output Menu, Setup Page).

Functions

Functions use input signals to calculate a value. A function may be as simple as reading a digital input to set a state to true or false, or reading a temperature to set an alarm state to on or off.

To set up a function, it's important to tell it what source, or instance, to use. For example, if the scanner is equipped with digital inputs they can be used to silence an individual alarm or all alarms. The RMS module can be equipped with up to 12 digital inputs, instance 1 - 6 and 7 - 12.

Note:
Alarms will reset automatically when the condition that caused the alarm goes back to a non-alarm state if the alarm latching prompt is set to non-latching (Setup Page, Alarm Menu).

Keep in mind that a function is a user-programmed internal process that does not execute any action outside of the controller. To have any affect outside of the controller, an output must be configured to respond to a function.

Outputs

Outputs can perform various functions or actions in response to information provided by a function, such as removal of the control voltage to a contactor; driving a heater; turning a light on or off; unlocking a door; or turning on an audible alarm.

Assign an output to a function in the Output Menu or Digital Input/Output Menu. Then select which instance of that function will drive the selected output. For example, in using an RMS module, an output can be configured to respond to the output of the PID algorithm from another RM module to drive a heater.

You can assign more than one output to respond to a single instance of a function. For example, alarm 2 could be used to trigger a light connected to output 1 and a siren connected to digital output 5.

Actions

Based on a given input (Digital I/O, Event output, Logic function, etc..) the Action function can cause other functions to occur. To name a few, set alarms to off, silencing alarms and restoring user memory.

A Conceptual View of RM Hardware Configurations

Due to the scalability and flexibility in the RM system a user has several options available in the way that the hardware can be connected. Listed below are a few examples.

RMS Connected to a Remote User Interface (RUI) and a Personal Computer (PC)

In this configuration the RUI and PC are connected to the RMS module via Watlow's Standard Bus where both will be able to talk directly to the RMS module.

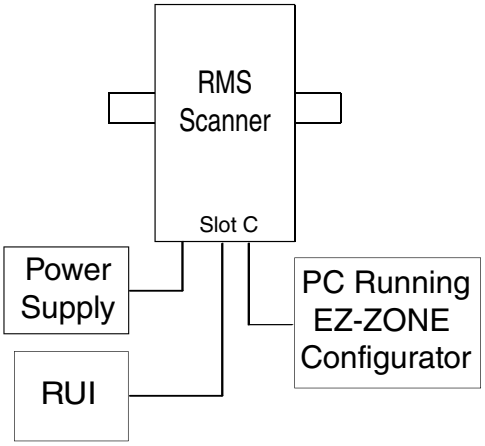

In the graphic above the PC running EZ-ZONE Configurator software and or the RUI can be used to configure and then monitor the RMS and other modules connected to it.

RMS Module Connected to a Programmable Logic Controller (PLC) on a DIN Rail

In this configuration the PLC can be connected to the RMS module using the Modbus RTU protocol:

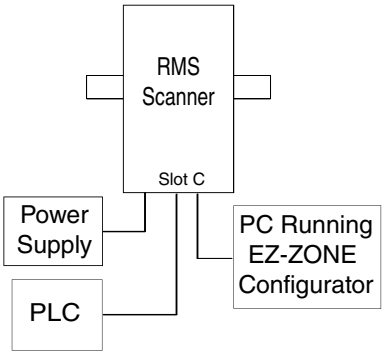

In this example, the RMS module and the PLC must be equipped with the Modbus RTU protocol.

Note:
If it is intended to use an RUI or a PC using EZ-ZONE Configurator software it will be necessary to switch the protocol on the RMS to Watlow's Standard Bus to successfully communicate; follow the steps below to switch the RMS to the Standard bus protocol.

1. Disconnect all Modbus devices from the network
2. Push and hold the orange button on the face of the module for approximately 6 seconds
3. When the LED display (above the orange button) changes to P [P] momentarily release the orange button and then push it again where [S] will appear (symbol for Standard Bus), release the orange button
4. Push the orange button again for approximately 3 seconds (LED display will become brighter) to change the Standard Bus address if needed

RMS Module Connected to an Operator Interface Terminal (OIT) through an RMA

In this configuration the RMS can be connected to the OIT through the RMA running any of a number of available protocols. The RMA and the OIT must be using the same protocol while the communications from RMA to the RMS module is accomplished over the backplane using Watlow's Standard Bus protocol. Available protocols in the RMA follow:

1. EtherNet/IP and or Modbus TCP
2. DeviceNet
3. Modbus RTU
4. Profibus DP

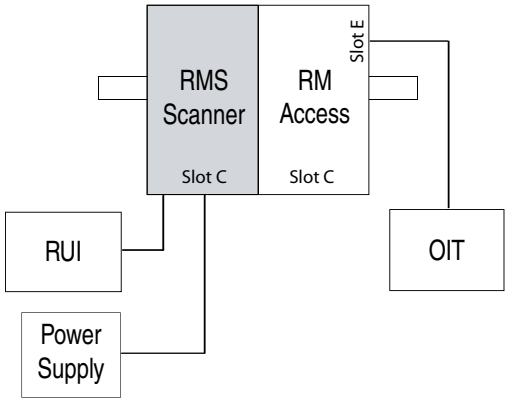

Notice that in the example above that there is an *optional* RUI connected to the RMS along with the OIT. OITs' are not generally used to configure a control but are used more for run-time information. As an alternative for configuration the RUI could be used to configure and monitor in a remote location.

One advantage in using an RMA module when communicating on a network is that protocol switching is not needed on the RMS module if using an RUI or EZ-ZONE Configurator software. The protocol of choice used with the RMA can run simultaneously with the Standard Bus protocol.

RMS Connected to a Split Rail with OIT

In this configuration both the inter-module bus (backplane communications) and Standard Bus are

connected between rails to allow for remote capabilities. It is recommended that the split rail connection not exceed 100 feet. In this configuration the OIT can communicate with all modules (maximum 16 modules any combination with one Access module).

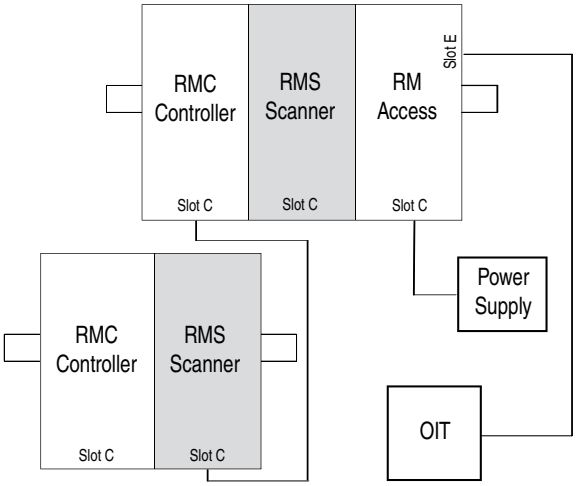

Module Orientation

The picture that follows represents one of several different RM modules. All of them will have four slots on the face (slot A, B, D, and E) and one on the bottom (slot C) not shown. All of these slots are not always used on all modules. On the face of the module there is a button (orange circle) under the zone address (5). When pushed and held it has the following functions:

1. For any module, push and hold the orange button for approximately 3 seconds to change the zone address. Valid addresses for Modbus and Standard bus range from 1 -16 (1 - 9, A is 10, b is 11, C is 12, d is 13, E is 14, F is 15, and h is 16). The RMA (Access) module is shipped at address J or 17 and is the only module that can have its address set above 16.
2. When a module is equipped with the Modbus protocol (RMxxxxxxxxx1xx) pushing and holding the orange button for approximately 6 seconds will cause the LED display to return P for protocol. Releasing the button and then pushing it again (within 6 seconds) the display will toggle between n (Modbus) and 5 (Standard Bus).

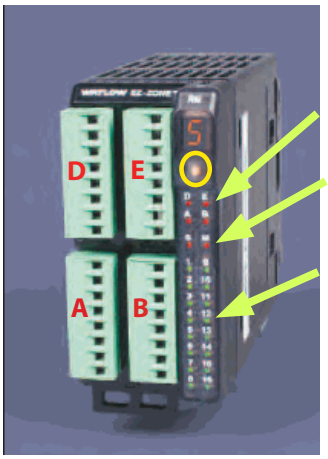

Module Status (Slot A, B, D, or E)

Protocol (Standard Bus - red or Modbus - green)

Module outputs 1 through 16, all may or may not be used depending on module type

Getting Started Quickly

Consider taking the following steps to quickly commission your control:

- Wire and connect the power source to the control
- Wire and connect input and output devices to the control
- Power up the control and navigate to the Setup Page to configure inputs, outputs, adjust set points, alarms, etc...

The RMS controller has a page and menu structure that is listed below along with a brief description of its purpose. The menu structure can be easily seen and navigated using EZ-ZONE Configurator software or the Remote User Interface (RUI).

Note:
The menu navigation as described below applies when the RMS is connected to the RUI which is optional equipment.

Setup Page Using the RUI, push and hold the up and down keys (▲ ▼) for 6 seconds to enter. (See the Setup Page for further information)	A user would want to setup their control prior to operation. As an example, define the input type, alarm sides (high and or low) or set the output function.
Operations Page Using the RUI push and hold the up and down keys (▲ ▼) for 3 seconds to enter. (See the Operations Page for further information)	After setting up the control to reflect your equipment, the Operations Page would be used to monitor or change runtime settings. As an example, the user may want to see the current status (on or off) of an event in the Action Menu.
Factory Page Using the RUI push and hold the Infinity and the green Advance keys (∞ ↻) for 6 seconds to enter. (See the Factory Page for further information)	For the most part the Factory Page has no bearing on the control when running. A user may want to enable password protection, view the control part number or perhaps create a custom Home Page.
Home Page When using the RUI, the control is at the Home Page when initially powered up where it will display the value of Analog Input 1 in the upper display and the value of Analog Input 2 in the lower display. **Note:** The Home Page is visible only when using the RUI.	Pushing the green Advance Key ↻ will cause the display to show the value of Analog Input 1 in the upper display and Analog Input 2 in the lower display. With each successive push of the green advance key the display will sequentially show the value of all remaining analog inputs in the upper display and the lower display will show the corresponding LED display. (e.g., A In3 for input 3)

The default RMS loop configuration out of the box is shown below:

- All Analog Input functions are set to thermocouple, type J (to change go to the Setup Page, Analog Input Menu)
- All Process Value functions are set to off (to change go to the Setup Page, Process Value Menu)
- All outputs are set to off (to change go to the Setup Page, Output Menu)

Once the scanner has been wired and setup, power up the control. If using an RUI the upper display will show the value of Analog Input 1 and the lower display will show the value of Analog Input 2.

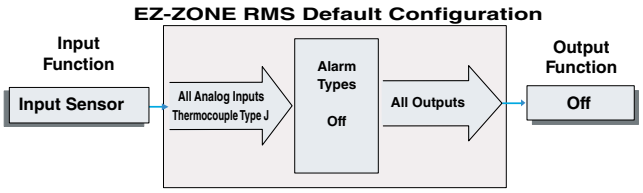

EZ-ZONE RMS Module - System Diagram

16 Scanner Channels - Slots A, B, D and E

R M S x - [R,P] [R,P] [R,P] [R,P] - A A A A

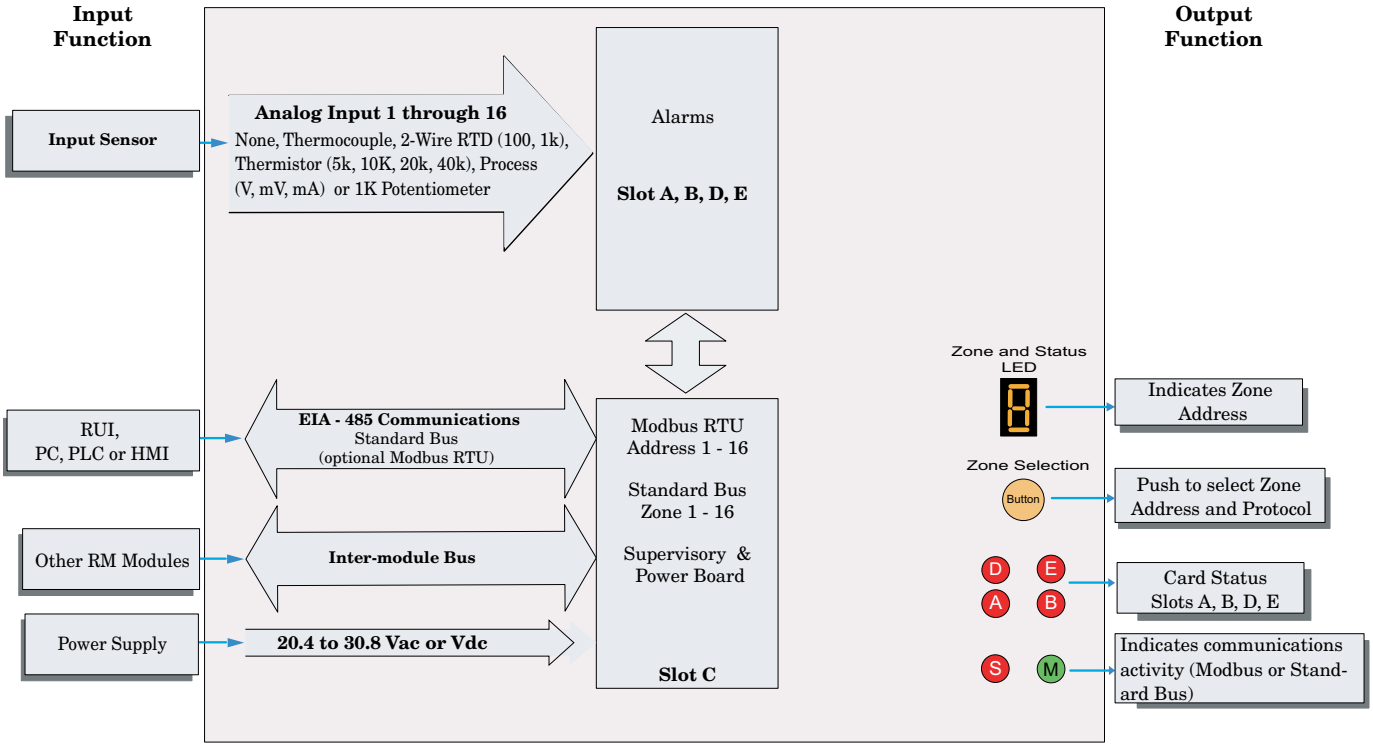

EZ-ZONE RMS Module - System Diagram

8 Scanner Channels - Slots A, B
4 - Form A Mechanical Relays - Slot D
6 - Digital I/O - Slot E

R M S x - [R,P] [R,P] J C - A A A A

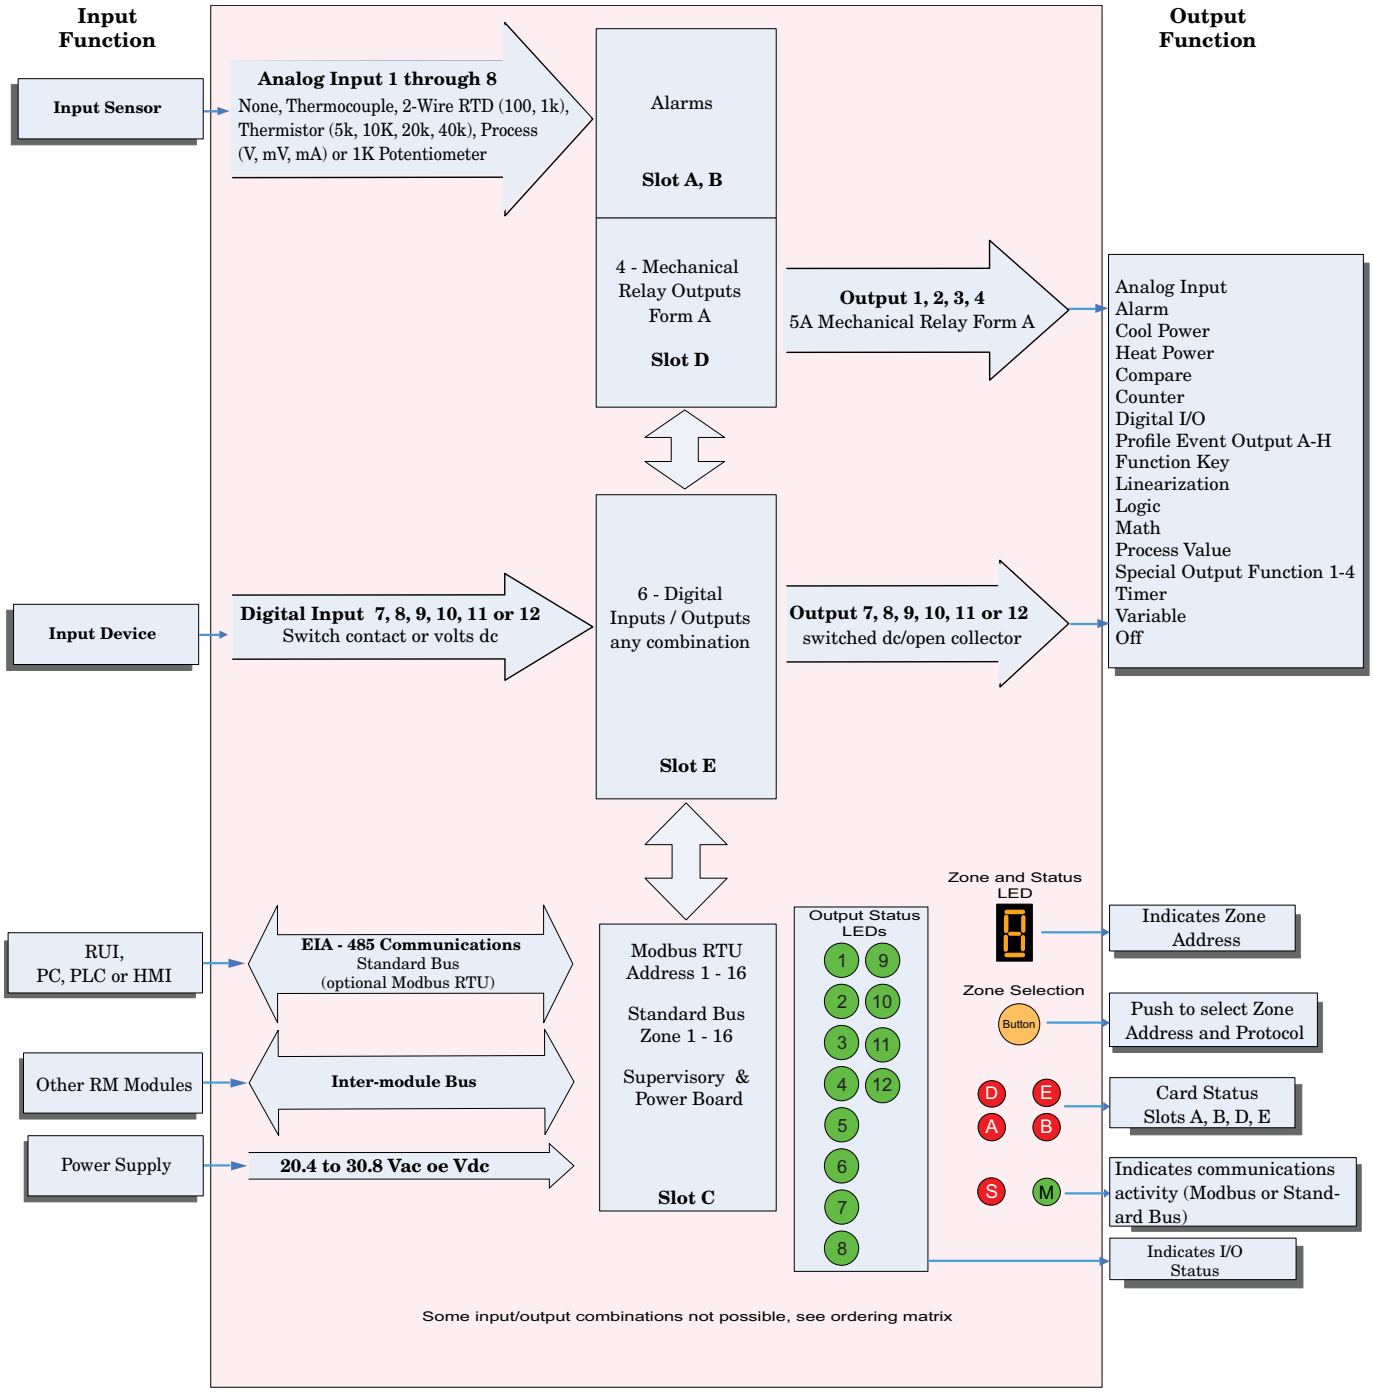

EZ-ZONE RMS Module - System Diagram

8 Scanner Channels - Slots A, B

6 - Digital I/O - Slot D

4 - Form A Mechanical Relays - Slot E

R M S x - [1,2] [1,2] C J - A A A A

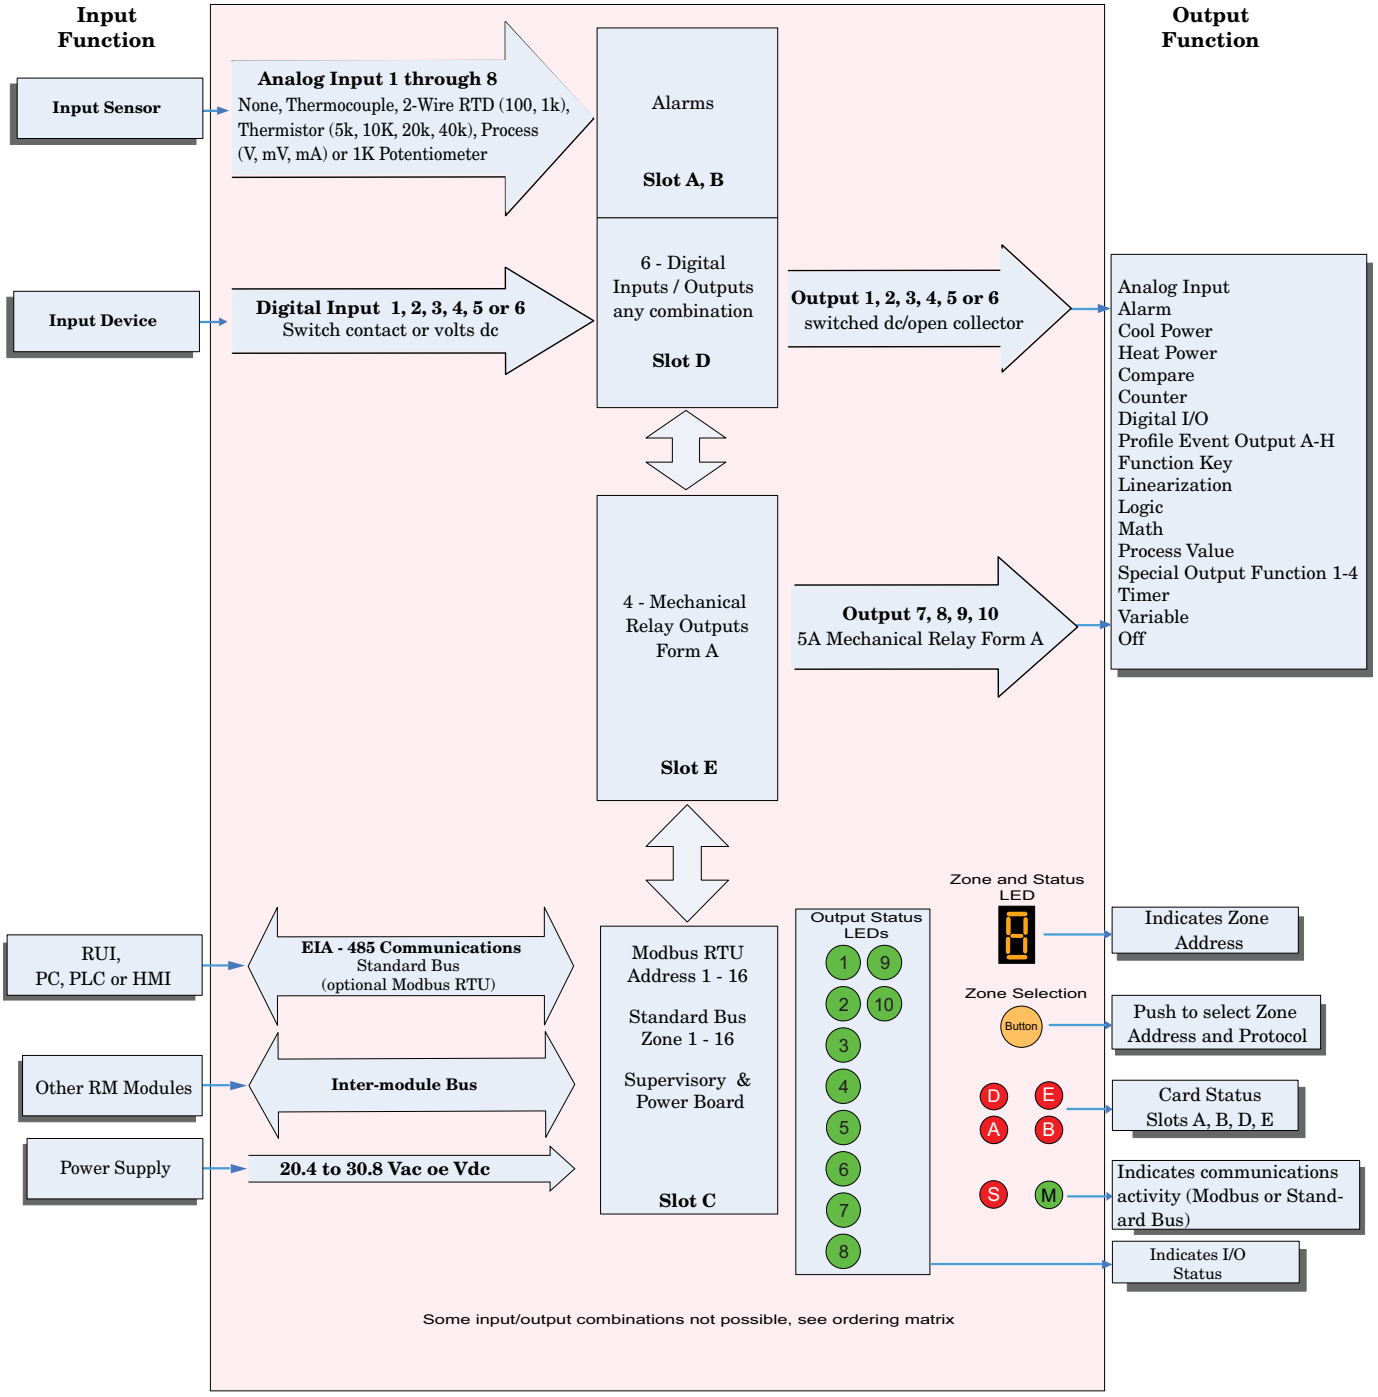

EZ-ZONE RMS Module - System Diagram

8 Scanner Channels - Slots A, B
6 - Digital I/O - Slot D
6 - Digital I/O - Slot E
R M S x - [1,2] [1,2] C C - A A A A

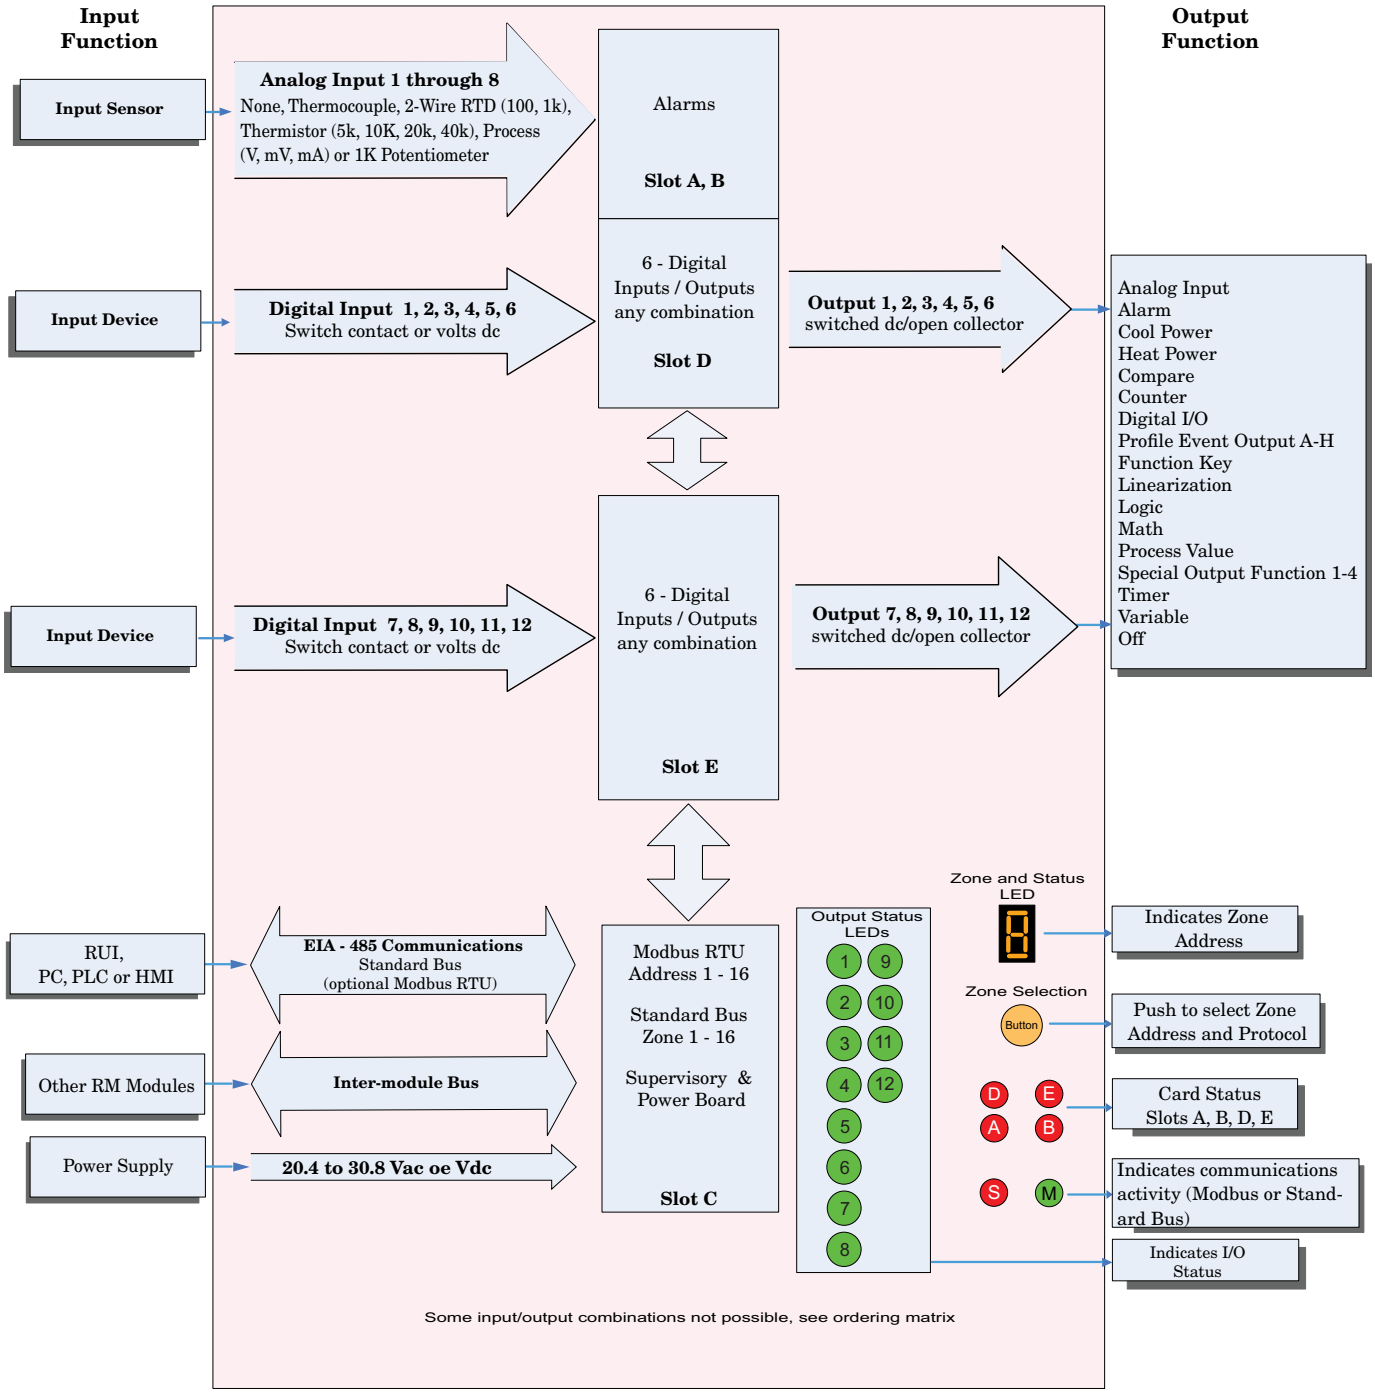

EZ-ZONE RMS Module - System Diagram

8 Scanner Channels - Slots A, B
6 - Digital I/O - Slot D
1 - Digital Input/2 Mechanical Relays - Slot E
R M S x - [1,2] [1,2] C B - A A A A

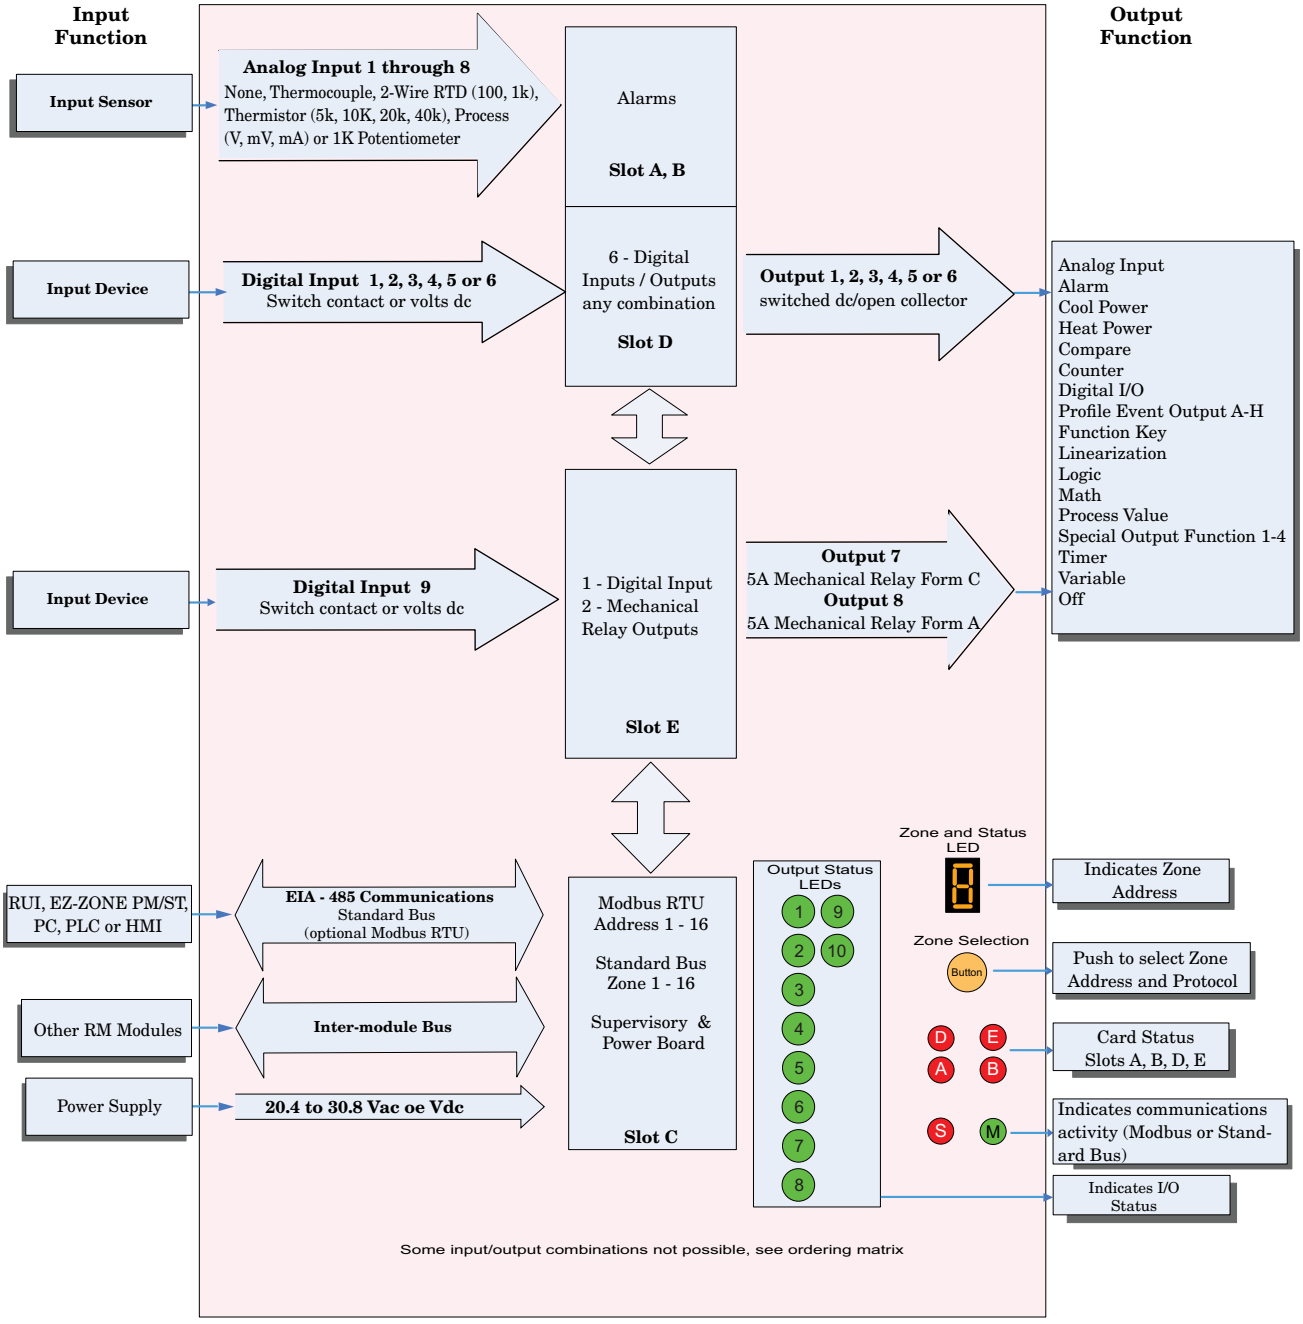

2 Chapter 2: Install and Wire

Dimensions

As can be seen below the dimensions of the RM system will change slightly based on the type of connector used.

Module Removal Clearance

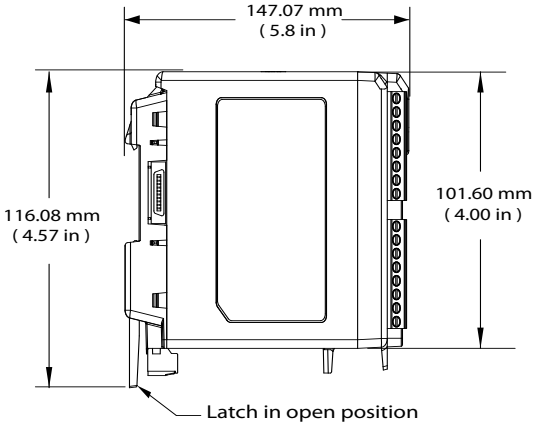

Standard Connectors

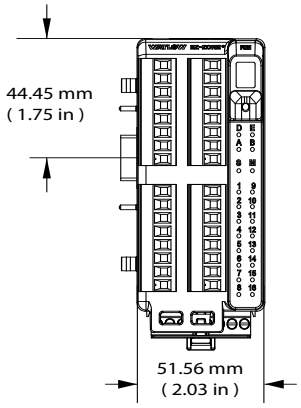

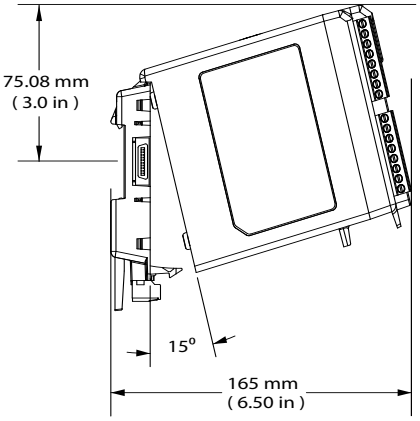

Module Removal Displacement

Module Removal Clearance

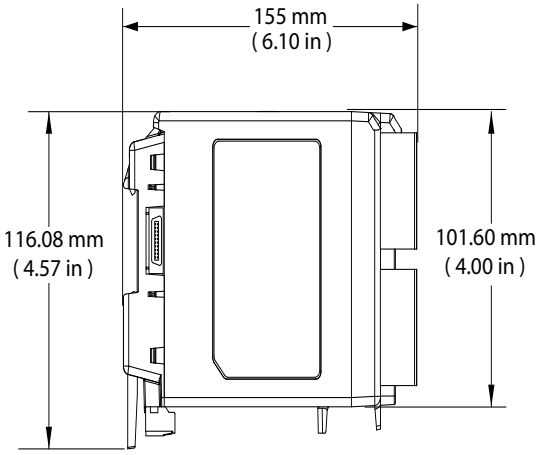

Straight Connectors

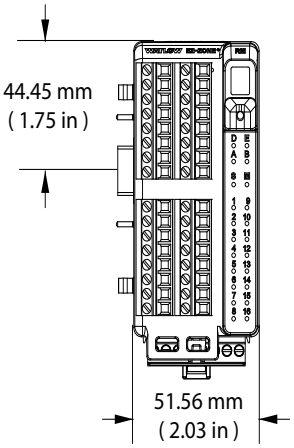

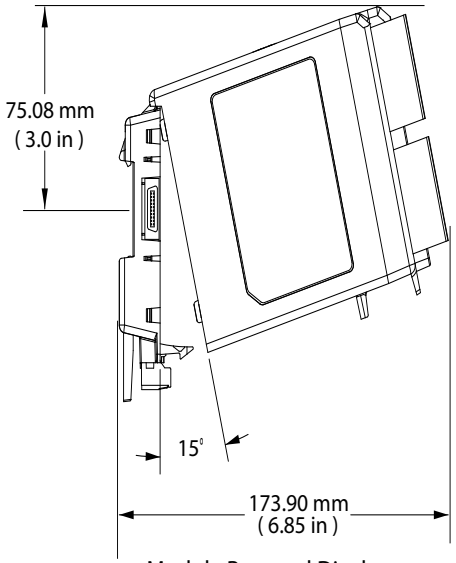

Module Removal Displacement

Chassis Mount Front View (Module Removed) - Screw Connection Pattern

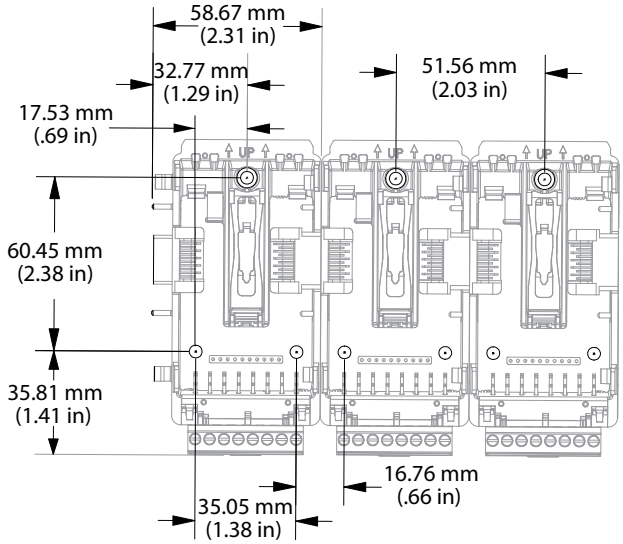

The view above is representative of the modular backplane without the module.

Recommended chassis mount hardware:

1. #8 screw, 3/4" long
2. Torque to 10 -15 lb-in
3. No washers of any kind

Power Supplies

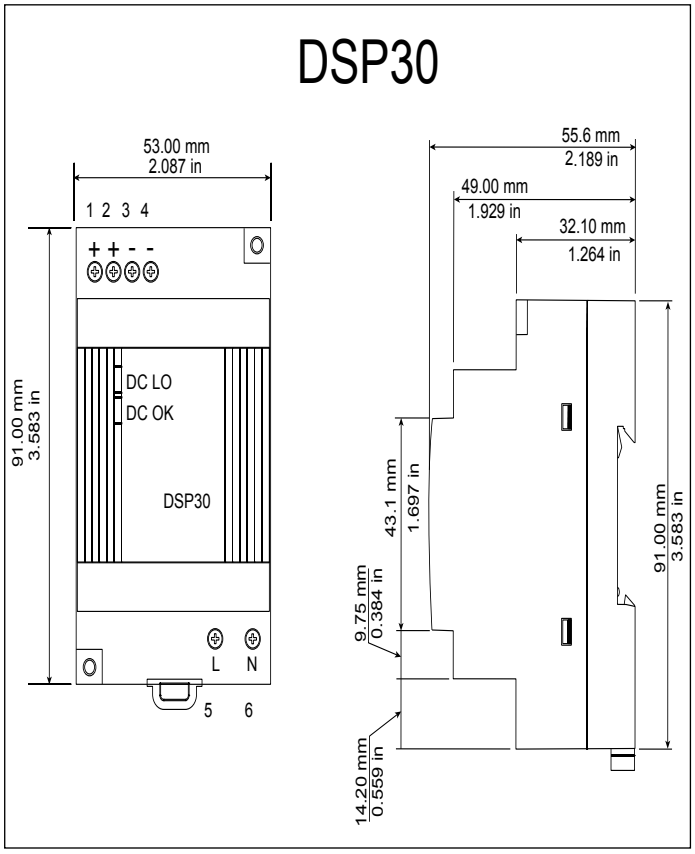

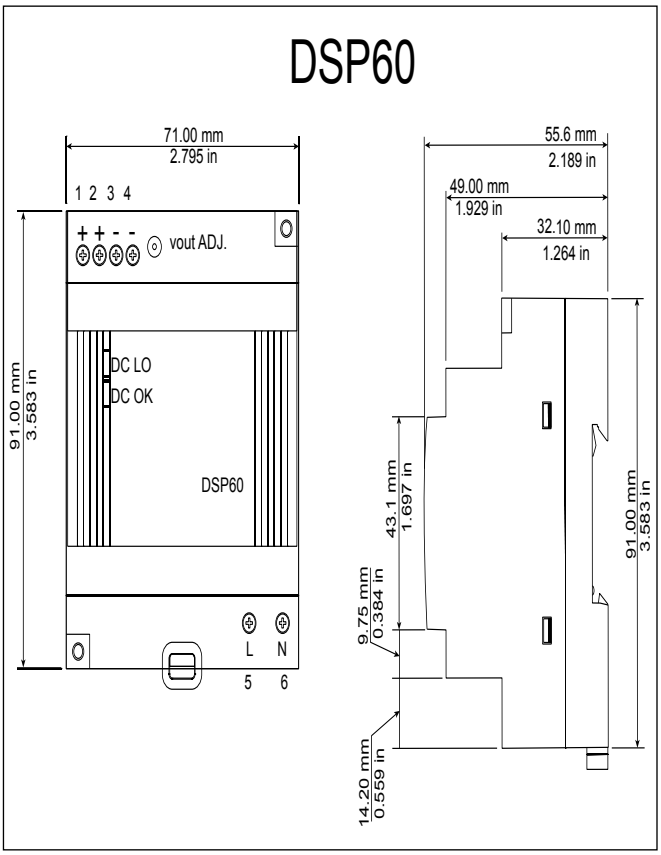

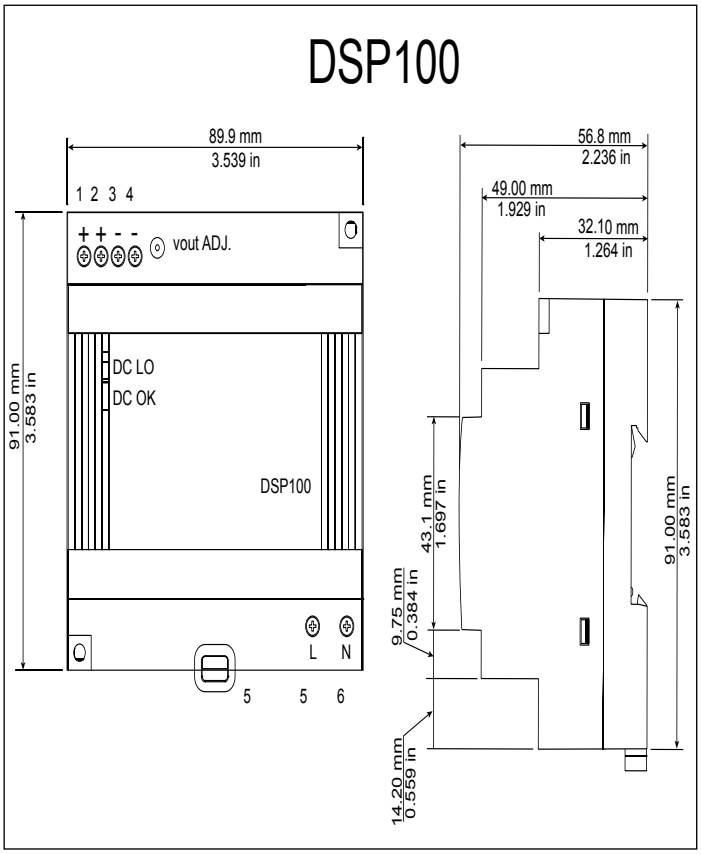

Power Supply Specifications				
		DSP 30	**DSP 60**	**DSP 100**
AC Input Voltage Range	VAC	90 - 264VAC, Class II double insulated (No ground connection required)		
Input Frequency	Hz	47 - 63Hz		
DC Input Voltage range	VDC	120 - 370VDC		
Inrush Current (115 / 230VAC)	A	25 / 50A	30 / 60A	30 / 60A
Output Voltage Accuracy	%	±1% of Nominal		
Over voltage Protection	V	120 - 145%		
LED Indicators	- - - -	Green LED = On, Red LED = DC Output Low		
Operating Temperature	- - - -	-25 to +71°C (Derate linearly 2.5%/°C from 55 to 71°C)		
Storage Temperature	- - - -	-25 to +85°C		
Operating Humidity	- - - -	20 - 95% RH (non condensing)		
Vibration (Operating)	- - - -	IEC 60068-2-6 (Mounting by rail: Random wave, 10-500 Hz, 2G, ea. along X, Y, Z axes 10 min/cycle, 60 min)		
Safety Agency Approvals		UL1310 Class 2(1), UL508 Listed, UL60950-1, EN60950-1, CE		

For a comprehensive listing of these specifications point your browser to : http://us.tdk-lambda.com/lp/products/dsp-series.htm

RMS Installation and Removal on a DIN Rail

Modular Backplane Connector

The picture on the right shows the Modular Backplane Connector, both front and rear view. The rear view is bringing in to focus a metal clip. If the DIN rail is grounded the Modular Backplane Connector and the module connected to it will be also (recommended).

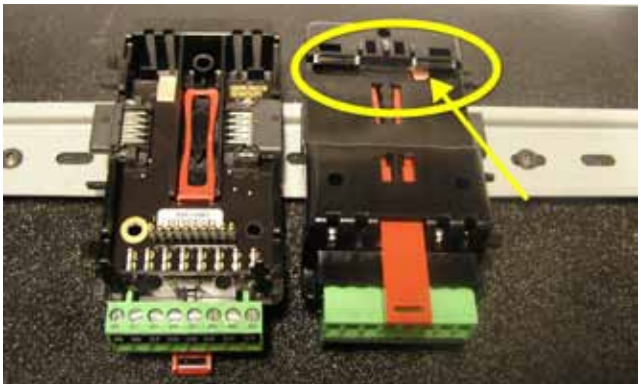

Installing the Modular Backplane Connector

Step 1

Hook backplane assembly to upper edge of DIN rail, (see rear view above, backplane hook detail that mates with upper rail edge is circled)

Step 2

Next, rotate back plane assembly downward to en gage the lower edge of the rail. (Note: Din Rail clipping distance ranges from 1.366 -1.389 inches. The back plane assembly will not latch onto the rail successfully if the rail is out of dimension).

Step 3

For final positioning and locking, the red tab is to be pushed upward to further engage the bottom edge of the rail with an over center snap action latch. (The red locking tab protrudes from the bottom side of the back plane assembly).

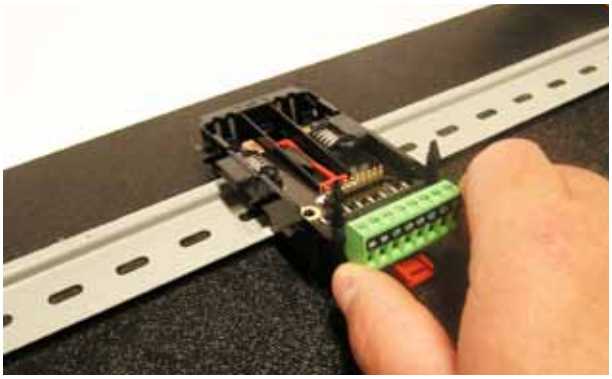

Installing Multiple Modular Backplane Connectors

Multiple modules are easily aligned and latched together. Each module includes matched mating geometry that facilitates accurate and consistent interconnections. The recommended method of multi-module attachment is to first attach individual modules to the rail separately and second to laterally slide the modules together until they touch. (Refer to steps 1&2 above). When the multi-module system is attached and laterally positioned to the desired placement the locking tab should be engaged to secure the control system to the rail, (Refer to step 3 above).

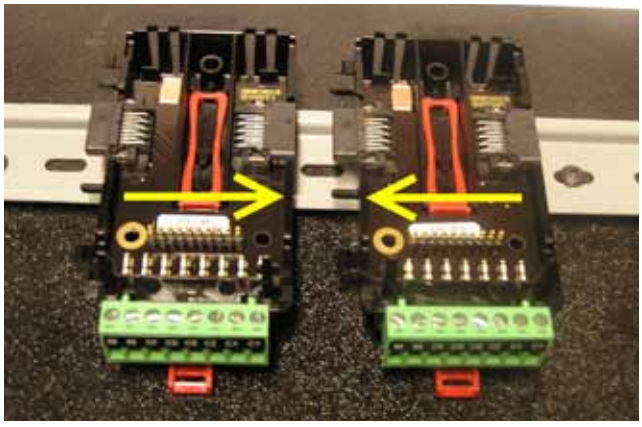

Module Installation

In the picture to the right notice that the arrow is pointing at the top lip of the module (on side). When installing the module simply slide this lip over the top of the Modular Backplane Connector and then push down on the rear of the module where it will seat on the two posts just above the green connector.

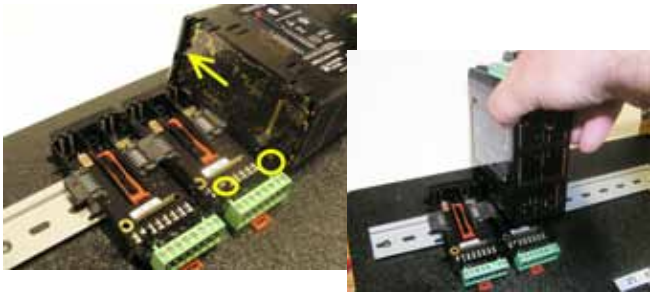

Module Removal

To remove a module from the Modular Backplane Connector find the red tab protruding from the bottom of the module and pull back on it as shown to the right. While pulling back on the red tab the two mounting posts will release the module where the module can then be lifted up and out of the Modular Backplane Connector.

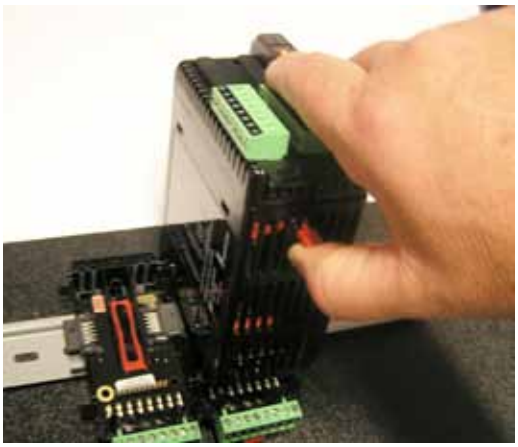

Removal of the Modular Backplane Connector

A module can be removed from the Modular Backplane Connector by inserting a screw driver into the red locking tab just behind the green connector and applying downward pressure on the tab by lifting the screwdriver upwards. When released, the tab will move downward and the connector can then be lifted up off of the DIN rail.

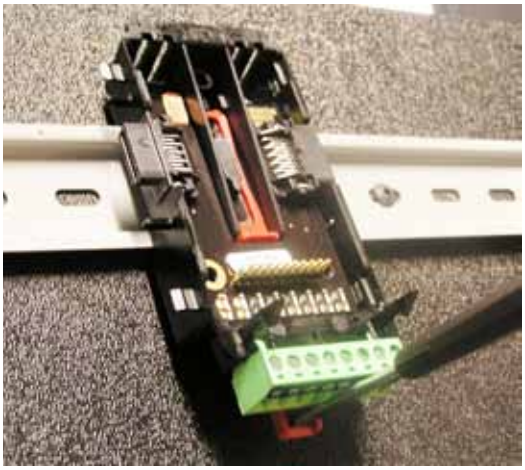

Wiring

Scanner Module (R M S x - x x x x - x x x x)					
Slot A	**Slot B**	**Slot D**	**Slot E**		**Configuration**
Universal, RTD and Thermistor Inputs 1 -16					
1 - 4	**5 - 8**	**9 - 12**	**13 - 16**		
S1 R1 S2 R2 S3 R3 S4 R4	S5 R5 S6 R6 S7 R7 S8 R8	S9 R9 S10 R14 S11 S15 R11 R15 S12 S16 R12 R16	S13 R13 S14 R14 S15 R15 S16 R16	S_ (RTD), thermocouple -, volts - , mA -, potentiometer wiper or thermistor R_ (RTD), thermocouple +, volts +, mA +, potentiometer or thermistor	Universal/Thermistor Input Part # Digits 5, 6, 7, 8 Input 1-4: RMSx-[**R,P**]xxx-xxxx Input 5-8: RMSx-x[**R,P**]xx-xxxx Input 9-12: RMSx-xx[**R,P**]x-xxxx Input 13-16: RMSx-xxx[**R,P**]-xxxx
Digital Inputs 1 - 6 and 7 - 12					
		1 - 6	**7-12**		
- -	- -	B1 D1 D2 D3 D4 D5 D6 Z1	B7 D7 D8 D9 D10 D11 D12 Z7	Common DC +input DC +input DC +input DC +input DC +input DC +input Internal Supply	Digital Inputs (DI) Part # Digit 7, 8 Slot A: Option not valid Slot B: Option not valid Slot D: RMSx-xx[**C**]x-xxxx Slot E: RMSx-xxx[**C**]-xxxx
Digital Input 9					
- - -	**- - -**	**- - -**	**9**		
- -	- -	- -	- - - - - - - - - - - - - - - - - - B9 D9	 Common DC +input	Digital Input (DI) Part # Digit 8 Slot A: Option not valid Slot B: Option not valid Slot D: Option not valid Slot E: RMSx-xxx[**B**]-xxxx
Form A - Mechanical Relay Outputs 1- 4 and 7 - 10					
- - -	**- - - -**	**1 - 4**	**7 - 10**		
- -	- -	L1 K1 L2 K2 L3 K3 L4 K4	L7 K7 L8 K8 L9 K9 L10 K10	normally open common normally open common normally open common normally open common	Mechanical Relay 5 A, Form A Part # Digits 7, 8 Slot D: : RMSx-xx[**J**]x-xxxx Slot E: : RMSx-xxx[**J**]-xxxx
Digital Outputs 1 - 6 and 7 - 12					
- - -	**- - -**	**1 - 6**	**7 - 12**		
- -	- -	B1 D1 D2 D3 D4 D5 D6 Z1	B7 D7 D8 D9 D10 D11 D12 Z7	Common open collector/ switched dc open collector/ switched dc open collector/ switched dc open collector/ switched dc open collector/ switched dc open collector/ switched dc Internal Supply	Digital Outputs (DO) Part # Digit 7, 8 Slot A: Option not valid Slot B: Option not valid Slot D: RMSx-xx[**C**]x-xxxx Slot E: RMSx-xxx[**C**]-xxxx

Form C - Mechanical Relay Output 7 and Form A - Mechanical Relay Output 8					
Slot A	**Slot B**	**Slot D**	**Slot E**		**Configuration**
- - -	**- - - -**	- - -	**7 and 8**		
- -	- -	- -	L7 K7 J7 L8 K8 - - - - - - - - -	normally open common normally closed normally open common	Form C and Form A Relay Outputs Part # Digit 8 Slot A: Option not valid Slot B: Option not valid Slot D: Option not valid Slot E: RMSx-xxx[**B**]-xxxx

Power and Communications		
Slot C		**Configuration**
98 99	Power input: ac or dc+ Power input: ac or dc-	All
CF CD CE	Standard Bus EIA-485 common Standard Bus EIA-485 T-/R- Standard Bus EIA-485 T+/R+	Standard Bus Part # Digit 10 RMSx-xxxx-x[**A**]xx
CC CA CB	Standard Bus or Modbus RTU EIA-485 common Standard Bus or Modbus RTU EIA-485 T-/R- Standard Bus or Modbus RTU EIA-485 T+/R+	Standard Bus or Modbus Part # Digit 10 RMSx-xxxx-x[**1**]xx
CZ CX CY	Inter-module Bus Inter-module Bus Inter-module Bus	Inter-module Bus

RMS Module - Front View -
Standard Connector

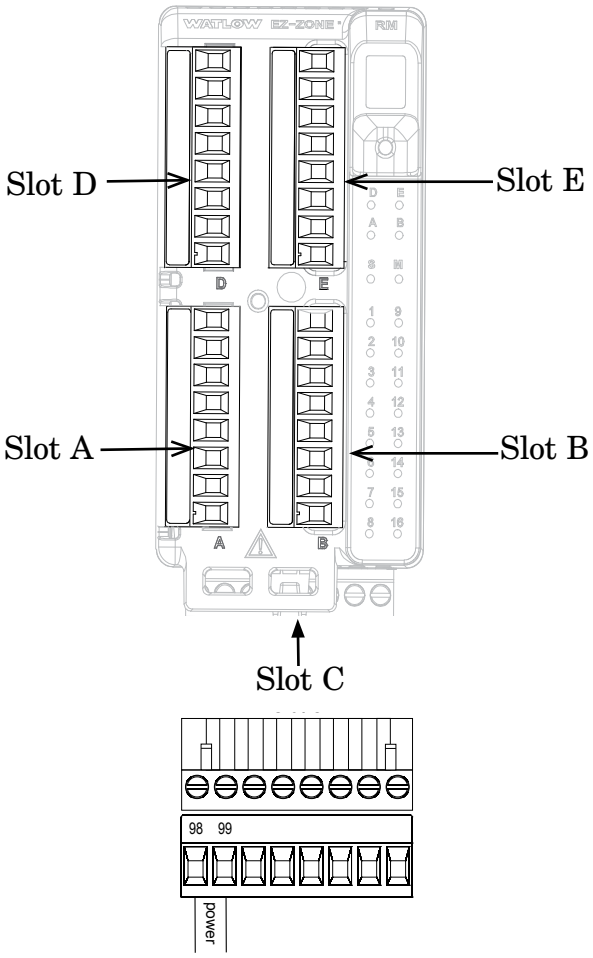

RMS System Isolation Blocks

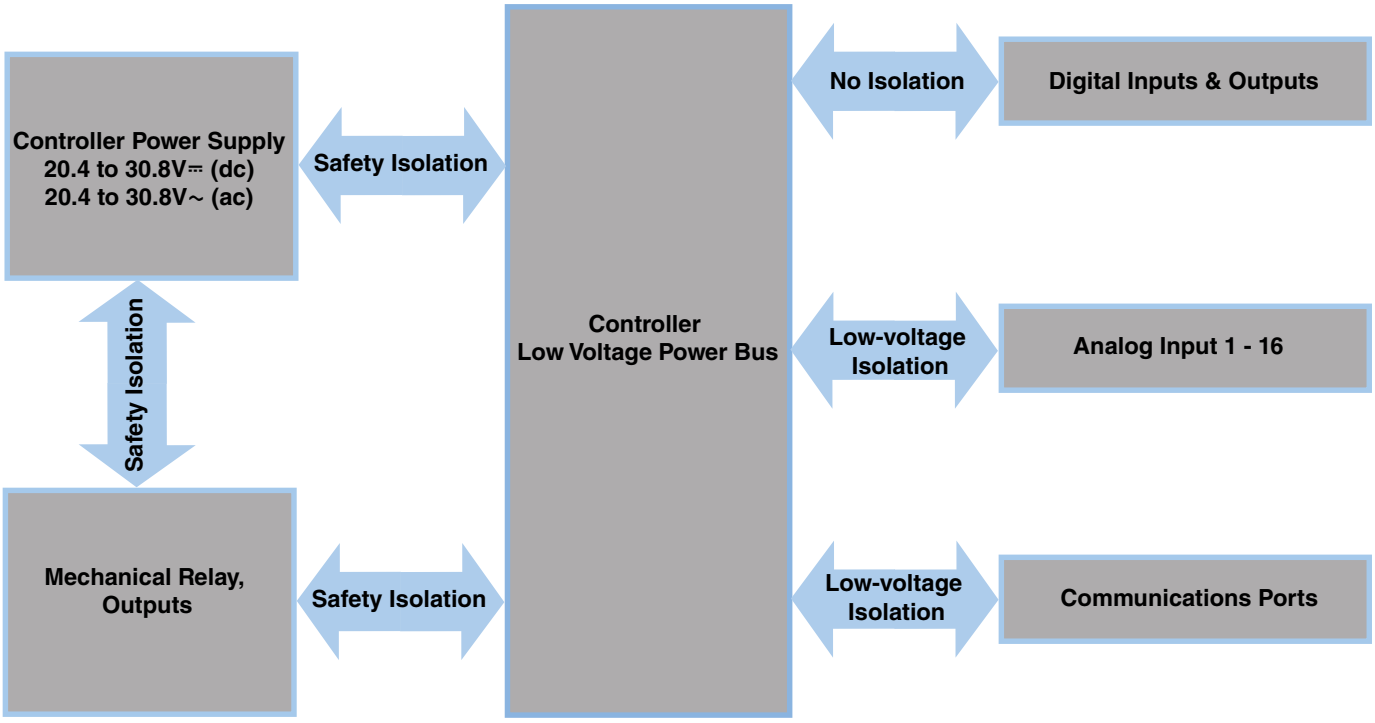

Low-voltage Isolation: 42V peak
Safety Isolation: 1,528V~ (ac)

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Scanner Module Wiring (RMSx-xxxx-xxxx)

Low Power

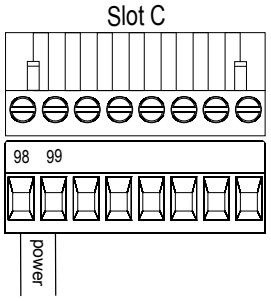

RMS- ALL Model Numbers

- 20.4 to 30.8 V ~ (ac) / ⎓ (dc) 14VA
- 47 to 63 Hz
- Controller module power consumption, 7 Watts maximum
- 31 Watts maximum power available for P/S part #:0847-0299-0000
- 60 Watts maximum power available for P/S part #:0847-0300-0000
- 91 Watts maximum power available for P/S part #:0847-0301-0000
- Class 2 or SELV power source required to meet UL compliance standards

Communications

RMS Part # Digit 10 is A

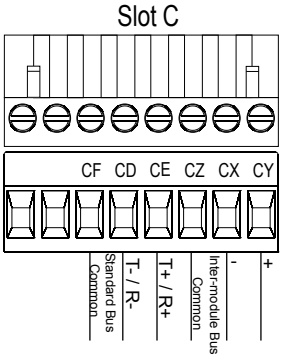

- CF, CD, CE - Standard Bus EIA485 Communications
- CZ, CX, CY - Inter-module Bus EIA485 Communications
- Do not route network wires with power wires. Connect network wires in daisy-chain fashion when connecting multiple devices in a network

Communications

RMS Part # Digit 10 is 1

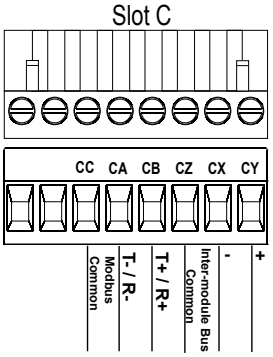

- CC, CA, CB - Modbus and Standard Bus EIA-485 Communications (selectable via push button under zone address)
- CZ, CX, CY - Inter-module Bus EIA-485 Communications
- Do not route network wires with power wires. Connect network wires in daisy-chain fashion when connecting multiple devices in a network

Inputs 1 through 16 Thermocouple

RMS Part # Digits 5, 6, 7, 8

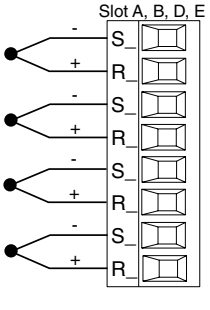

- 2K Ω maximum source resistance
- >20 MΩ input impedance
- 3 microampere open-sensor detection
- Thermocouples are polarity sensitive. The negative lead (usually red) must be connected to S terminal
- To reduce errors, the extension wire for thermocouples must be of the same alloy as the thermocouple.
  Input 1 - 4 (top to bottom): RMSx-(**R**)xxx-xxxx
  Input 5 - 8 (top to bottom): RMSx-x(**R**)xx-xxxx
  Input 9 - 12 (top to bottom): RMSx-xx(**R**)x-xxxx
  Input 13 - 16 (top to bottom): RMSx-xxx(**R**)-xxxx

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Inputs 1 through 16 Potentiometer

RMS Part # Digits 5, 6, 7, 8

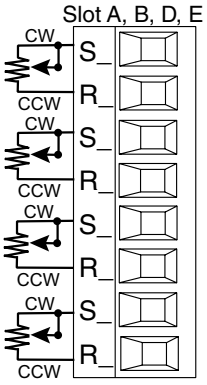

- Use a 1 kΩ potentiometer.
  Input 1 - 4 (top to bottom): RMSx-(**R**)xxx-xxxx
  Input 5 - 8 (top to bottom): RMSx-x(**R**)xx-xxxx
  Input 9 - 12 (top to bottom): RMSx-xx(**R**)x-xxxx
  Input 13 - 16 (top to bottom): RMSx-xxx(**R**)-xxxx

Inputs 1 through 16 Process

RMS Part # Digits 5, 6, 7, 8

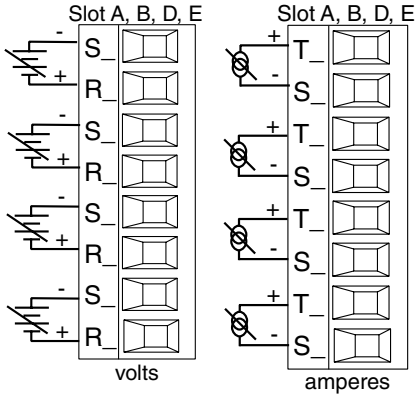

- 0 to 20 mA @ 100 Ω input impedance
- 0 to 10V⎓ (dc) @ 20 kΩ input impedance
- 0 to 50 mV⎓ (dc) @ 20 MΩ input impedance
- scalable

  Input 1: RMC(1,3,5)xxxxxxxxxxx (S1-/R1+),(T1+/S1-)

  Input 2: RMCxx(1,5)xxxxxxxxx (S2-/R2+),(T2+/S2-)

  Input 3: RMCxxxx(1,5)xxxxxxx (S3-/R3+),(T3-S3-R3)

  Input 4: RMCxxxxxx(1,5)xxxxx (S4-/R4+),(T4+/S4-)

Inputs 1 through 16 RTD

RMS Part # Digits 5, 6, 7, 8

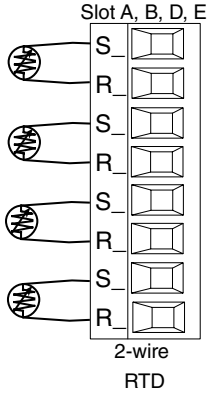

- platinum, 100 and 1,000 Ω @ 0°C
- calibration to DIN curve (0.00385 Ω/Ω/°C)
- RTD excitation current of 0.09 mA typical. Each ohm of lead resistance may affect the reading by 2.55°C for a 100 ohm platinum sensor or 2.5 ohms for a 1000 ohm sensor.

  Input 1 - 4 (top to bottom): RMSx-(**R**)xxx-xxxx

  Input 5 - 8 (top to bottom): RMSx-x(**R**)xx-xxxx

  Input 9 - 12 (top to bottom): RMSx-xx(**R**)x-xxxx

  Input 13 - 14 (top to bottom): RMSx-xxx(**R**)-xxxx

AWG	Ohms/1000ft
14	2.575
16	4.094
18	6.510
20	10.35
22	16.46
24	26.17
26	41.62
28	66.17

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Suppressor Note:

Switching pilot duty inductive loads (relay coils, solenoids, etc.) with the mechanical relay, solid-state relay or open collector output options requires use of an R.C. suppressor for AC load or a diode for a DC load.

Inputs 1 through 16 Thermistor

RMS Part # Digits 5, 6, 7, 8

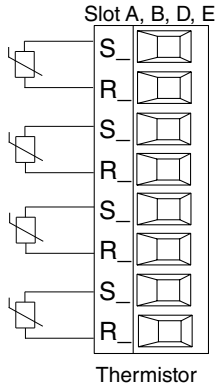

Thermistor

- >20 MΩ input impedance
  Input 1 - 4 (top to bottom): RMSx-(**P**)xxx-xxxx
  Input 5 - 8 (top to bottom): RMSx-x(**P**)xx-xxxx
  Input 9 - 12 (top to bottom): RMSx-xx(**P**)x-xxxx
  Input 13 - 16 (top to bottom): RMSx-xxx(**P**)-xxxx

Digital Inputs 1 through 12

RMS Part # Digit 7, 8 is C and or B Respectively

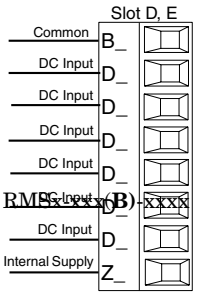

RMSx-xxx(**B**)-xxxx

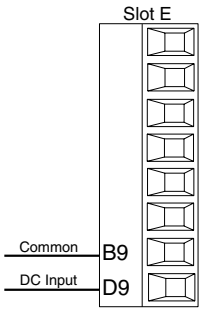

Digital Input Event Conditions

- Voltage
  - Input inactive when < 2V
  - Input active when > 3V
- Dry Contact
  - Input inactive when > 100KΩ
  - Input active when < 50Ω
- Six user configurable digital inputs/outputs per slot
  - Slot D DI 1 - 6
    RMSx-xx(**C**) xx-xxxx
  - Slot E DI 7 - 12
    RMSx-xxx(**C**)-xxxx
  - Slot E DI 9
    RMSx-xxx(**B**)-xxxx

Note:
For part number RMSx-xxx(B)-xxxx connection is made between pins B9 and D9 when configured as a dry contact (Digital Input 9 Slot E).

Voltage Input

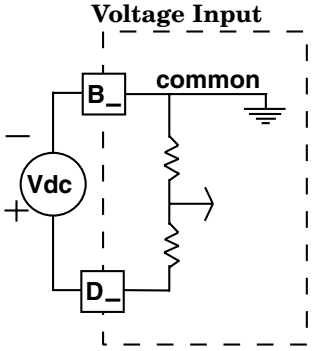

Dry Contact

Slot D **Slot E**

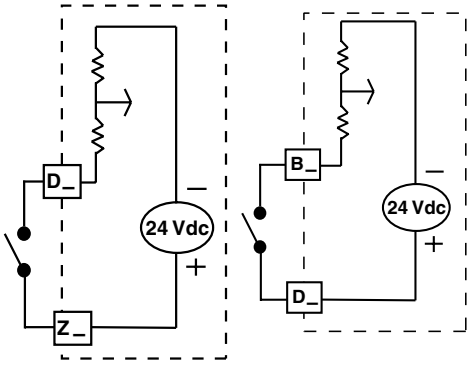

RMSx-xxx(**C**)-xxxx RMSx-xxx(**B**)-xxxx

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Suppressor Note:

Switching pilot duty inductive loads (relay coils, solenoids, etc.) with the mechanical relay, solid-state relay or open collector output options requires use of an R.C. suppressor for AC load or a diode for a DC load.

Digital Outputs 1 - 12

RMS Part # Digit 7, 8 is C

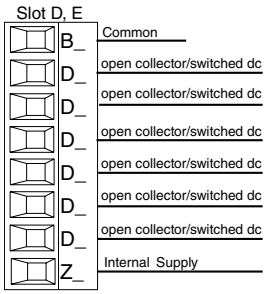

- Maximum switched voltage is 32V⎓ (dc)
- Internal supply provides a constant power output of 750mW
- Maximum output sink current per output is 1.5A (external class 2 or *SELV supply required)
- Total sink current for all outputs not to exceed 8A
- Do not connect outputs in parallel
  - Slot D DO 1 - 6 RMSx-xx(**C**)x-xxxx
  - Slot E DO 7 - 12 RMSx-xxx(**C**)-xxxx

*Saftey Extra Low Voltage

Open Collector/Switched DC Outputs

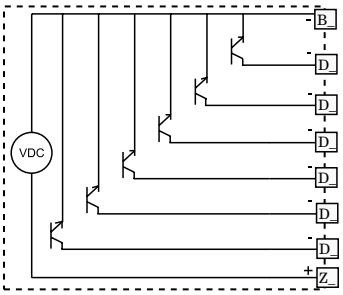

Switched DC Wiring Example Using DO 1-12

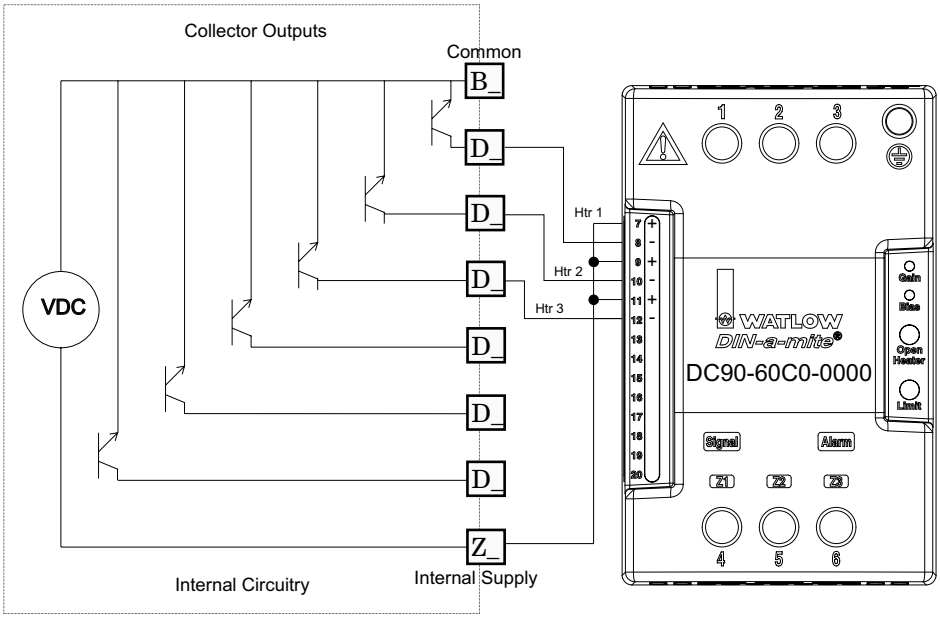

Note:

As a switched DC output; this output is a constant current output delivering 750 mW, current limited to 400 mA. The internal supply does have a maximum open circuit voltage of 22 VDC and minimum open circuit voltage of 19 VDC. Pin Z_ is shared to all digital outputs. This type of output is meant to drive solid-state relays, not mechanical relays.

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Suppressor Note:

Switching pilot duty inductive loads (relay coils, solenoids, etc.) with the mechanical relay, solid-state relay or open collector output options requires use of an R.C. suppressor for AC load or a diode for a DC load.

Open Collector Wiring Example Using DO 1-12

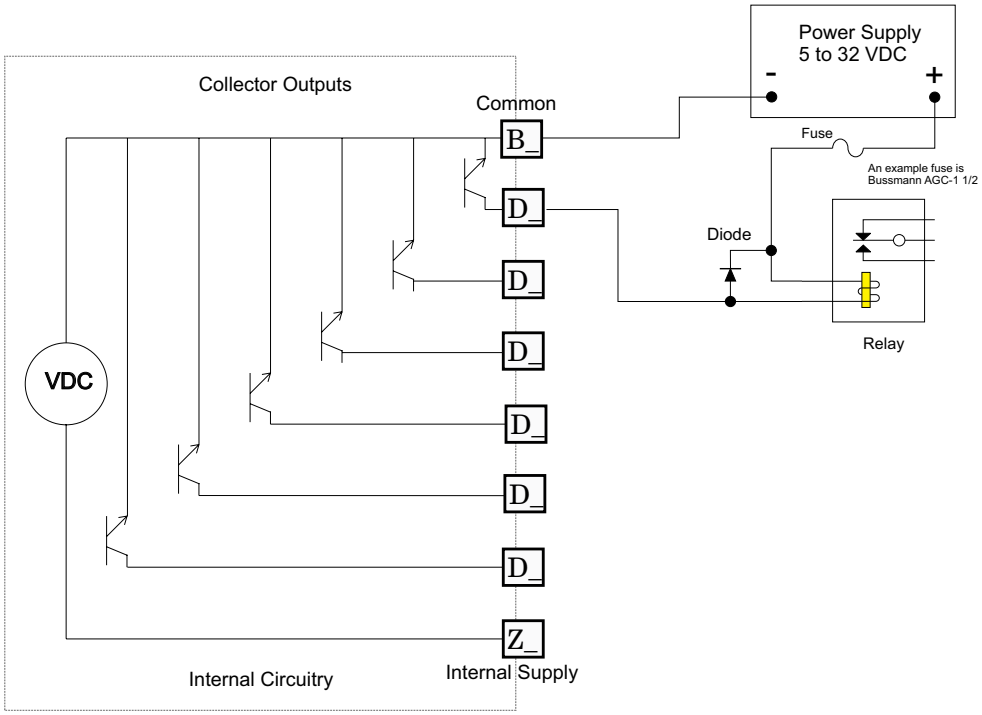

As an open collector output (see graphic below), use an external power supply with the negative wired to B_, the positive to the coil of a pilot mechanical relay and the other side of the coil wired to the output of choice (D_). Each open collector output can sink 1.5 A with the total for all open collector outputs not exceeding 8 amperes. Ensure that a kickback diode is reversed wired across the relay coil to prevent damage to the internal transistor.

Output 1 - 4 and 7 - 10 Mechanical Relay, Form A

RMS Part # Digit 7, 8 is J

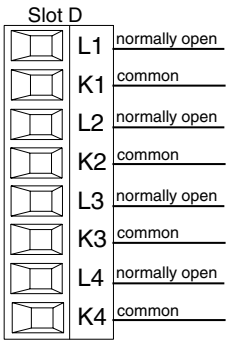

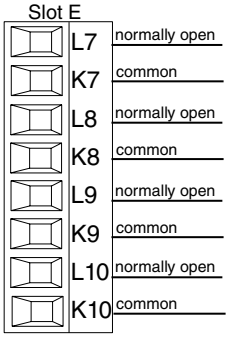

- 5 A at 240V~ (ac) or 30V⎓ (dc) maximum resistive load
- 20 mA at 24V minimum load
- 125 VA pilot duty @ 120/240V~ (ac), 25 VA at 24V~ (ac)
- 100,000 cycles at rated load
- Output does not supply power.
- for use with ac or dc

See Quencharc note.

- Slot D Outputs 1 - 6
  RMSx-xx(**J**)x-xxxx
- Slot E Outputs 7 - 10
  RMSx-xxx(**J**)-xxxx

Mechanical Relay Form A

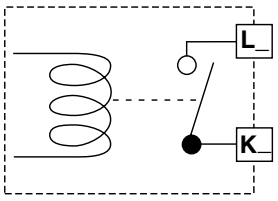

Internal Circuitry

Warning:

Use National Electric (NEC) or other country-specific standard wiring and safety practices when wiring and connecting this controller to a power source and to electrical sensors or peripheral devices. Failure to do so may result in damage to equipment and property, and/or injury or loss of life.

Note:

Maximum wire size termination and torque rating:

- **0.0507 to 3.30 mm^2 (30 to 12 AWG) single-wire termination or two 1.31 mm^2 (16 AWG)**
- **0.8 Nm (7.0 in-lb.) torque**

Note:

Adjacent terminals may be labeled differently, depending on the model number.

Note:

To prevent damage to the controller, do not connect wires to unused terminals.

Note:

Maintain electrical isolation between digital input-outputs, switched dc/open collector outputs and process outputs to prevent ground loops.

Warning:

Explosion Hazard – Substitution of component may impair suitability for CLASS I, DIVISION 2.

Warning:

Explosion Hazard - Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations of flammable substances.

Quencharc Wiring Example

- In this example the Quencharc circuit (Watlow part# 0804-0147-0000) is used to protect internal circuitry from the counter electromagnetic force from the inductive user load when deenergized. It is recommended that this or an equivalent Quencharc be used when connecting inductive loads to outputs.

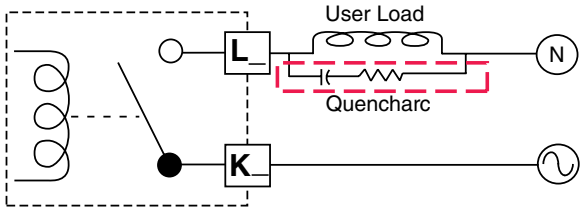

Standard Bus EIA-485 Communications

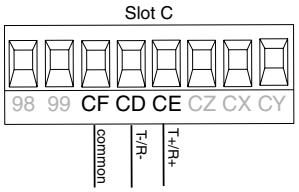

- Wire T-/R- to the A terminal of the EIA-485 port.
- Wire T+/R+ to the B terminal of the EIA-485 port.
- Wire common to the common terminal of the EIA-485 port.
- Do not route network wires with power wires. Connect network wires in daisy-chain fashion when connecting multiple devices in a network.
- A 120 Ω termination resistor may be required across T+/R+ and T-/R-, placed on the last controller on the network.
- Do not connect more than 16 EZ-ZONE RM controllers on a network.
- maximum network length: 1,200 meters (4,000 feet)
- 1/8th unit load on EIA-485 bus

RMSx-xxxx-x(**A**)xx

* All models include Standard Bus communications

Modbus RTU or Standard Bus EIA-485 Communications

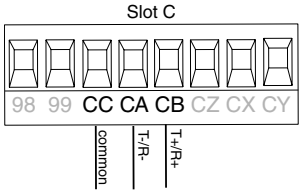

- Wire T-/R- to the A terminal of the EIA-485 port.
- Wire T+/R+ to the B terminal of the EIA-485 port.
- Wire common to the common terminal of the EIA-485 port.
- Do not route network wires with power wires. Connect network wires in daisy-chain fashion when connecting multiple devices in a network.
- A termination resistor may be required. Place a 120 Ω resistor across T+/R+ and T-/R- of last controller on network.
- Only one protocol per port is available at a time: either Modbus RTU or Standard Bus.
- Do not connect more than 16 EZ-ZONE controllers on a Standard Bus network.
- Maximum number of EZ-ZONE controllers on a Modbus network is 247.
- maximum network length: 1,200 meters (4,000 feet)
- 1/8th unit load on EIA-485 bus

RMSx-xxxx-x(**1**)xx

Modbus-IDA Terminal	EIA/TIA-485 Name	Watlow Terminal Label	Function
DO	A	CA or CD	T-/R-
D1	B	CB or CE	T+/R+
common	common	CC or CF	common

Note:

Do not leave a USB to DH-485 converter connected to Standard Bus without power (i.e., disconnecting the USB end from the computer while leaving the converter connected on Standard Bus). Disturbance on the Standard Bus may occur.

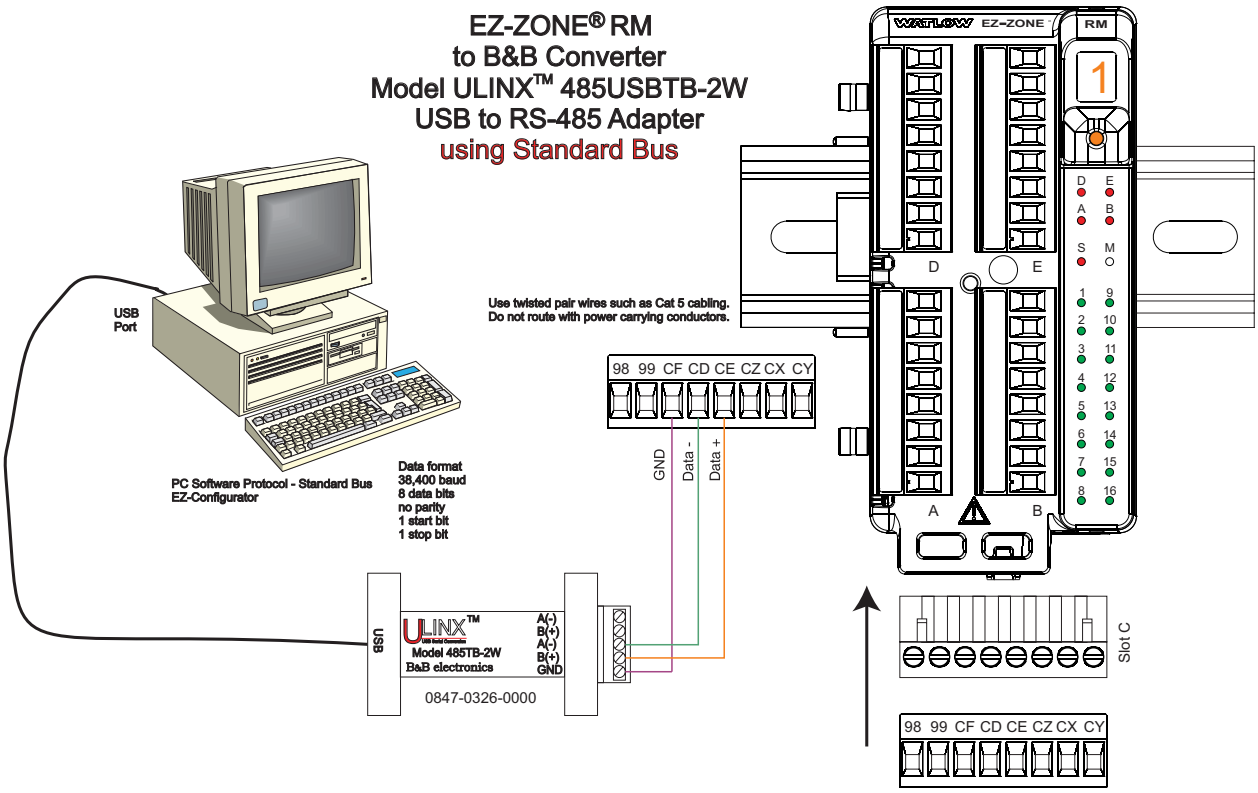

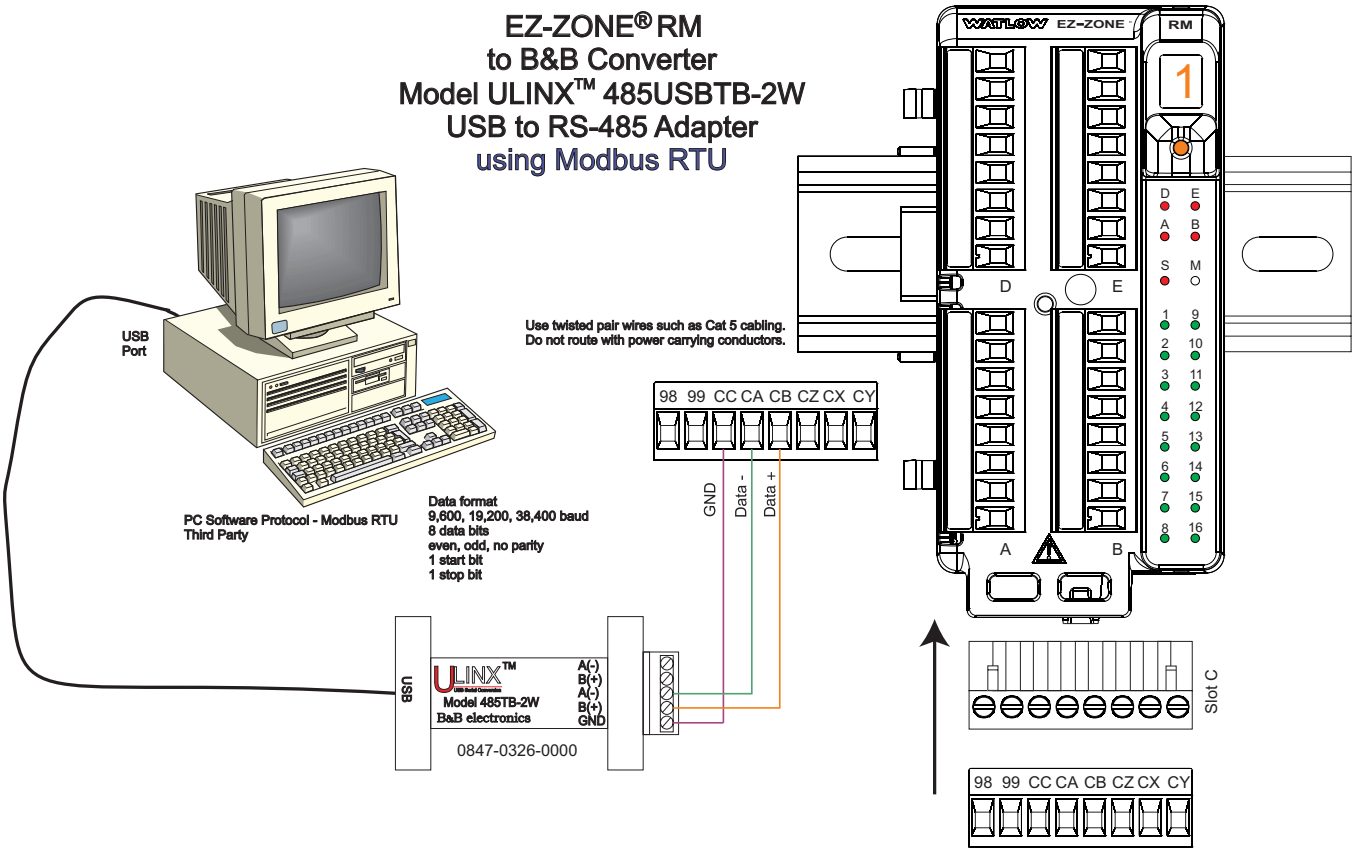

Note:

Do not leave a USB to DH-485 converter connected to Standard Bus without power (i.e., disconnecting the USB end from the computer while leaving the converter connected on Standard Bus). Disturbance on the Standard Bus may occur.

Wiring a Serial EIA-485 Network

Do not route network wires with power wires. Connect network wires in daisy-chain fashion when connecting multiple devices in a network.

A network using Watlow's Standard Bus and an RUI/Gateway.

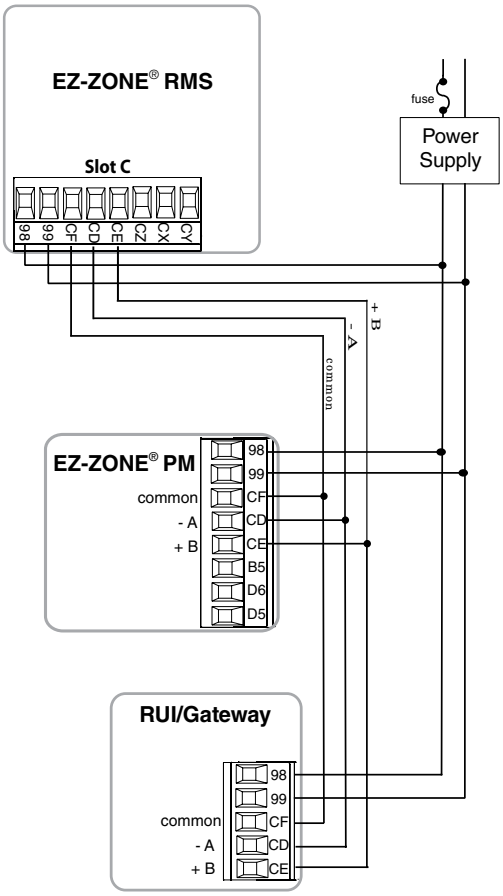

A termination resistor is required. Place a 120 Ω resistor across T+/R+ and T-/R- of the last controller on a network.

Only one protocol per port is available at a time: either Modbus RTU or Standard Bus.

A network using Modbus RTU

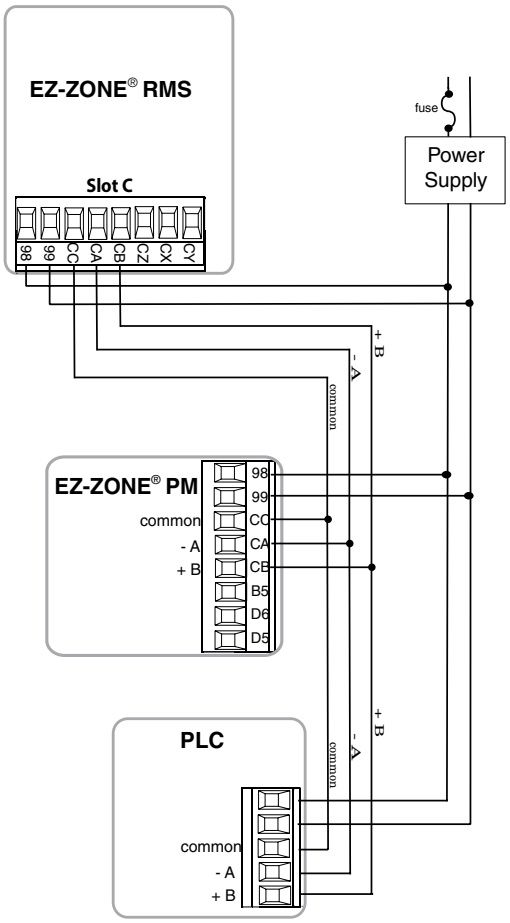

RMS Module Connections

The RMS module can be installed as a stand-alone scanner or can be interconnected on the DIN rail as shown below with other RM family modules. When modules are connected together as shown, power and communications are shared between modules over the modular backplane interconnection. Therefore, bringing the necessary power and communications wiring to any one connector in slot C is sufficient. The modular backplane interconnect comes standard with every module ordered and is generic in nature, meaning any RM modules shown below on the DIN rail can use it.

Modular backplane interconnect

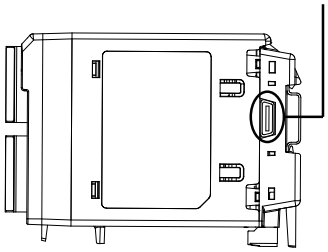

Notice in the split rail system diagram that a single power supply is being used across both DIN rails. One notable consideration when designing the hardware layout would be the available power supplied and the loading affect of all of the modules used. Watlow provides three options for power supplies listed below:

1. 90-264 Vac to 24Vdc @ 31 watts (Part #: 0847-0299-0000)
2. 90-264 Vac to 24Vdc @ 60 watts (Part #: 0847-0300-0000)
3. 90-264 Vac to 24Vdc @ 91 watts (Part #: 0847-0301-0000)

With regards to the modular loading affect, maximum power for each RM module is listed below:

1. RMCxxxxxxxxxxxx @ 7 watts / 14VA
2. RMEx-xxxx-xxxx @ 7 watts / 14VA
3. RMAx-xxxx-xxxx @ 4 watts / 9VA
4. RMLx-xxxx-xxxx @ 7 watts / 14VA
5. **RMSx-xxxx-xxxx @ 7 watts / 14VA**
6. RMHx-xxxx-xxxx @ 7 watts / 14VA

So, in the split rail system diagram, the maximum current draw on the supply would be 38 Watts.

- 2 RMC modules consumes 14W
- **1 RMS module consumes 7W**
- 1 RME modules consumes 7W
- 1 RMA module consumes 4W
- 1 Remote User Interface consumes 6W

With this power requirement (38 watts) the second or third power supply could be used.

Another hardware configuration scenario that could present itself (graphic not shown) would be a configuration that requires more than one supply. Lets make some assumptions pertaining to the split rail system diagram shown below. The power supply used is the 91W supply. The top DIN rail now has the following modules:

- 2 RMC modules consumes 14W
- 1 RMA consumes 4W
- 11 RME modules consumes 77W
- **2 RMS modules consumes 14W**

As can now be seen, the total power requirement exceeds 91W. In this case, another power supply would be required. To incorporate another supply in this system simply disconnect pins 99 and 98 on the remote DIN rail and connect another appropriately sized power supply for the remote modules to those same pins.

When using a split rail configuration ensure that the interconnections for the Inter-module Bus and Standard Bus do not exceed 200 feet. Standard Bus and the Inter-module Buses are different protocols and both are required for split rail configurations. Without having both connected communications between modules would not be possible.

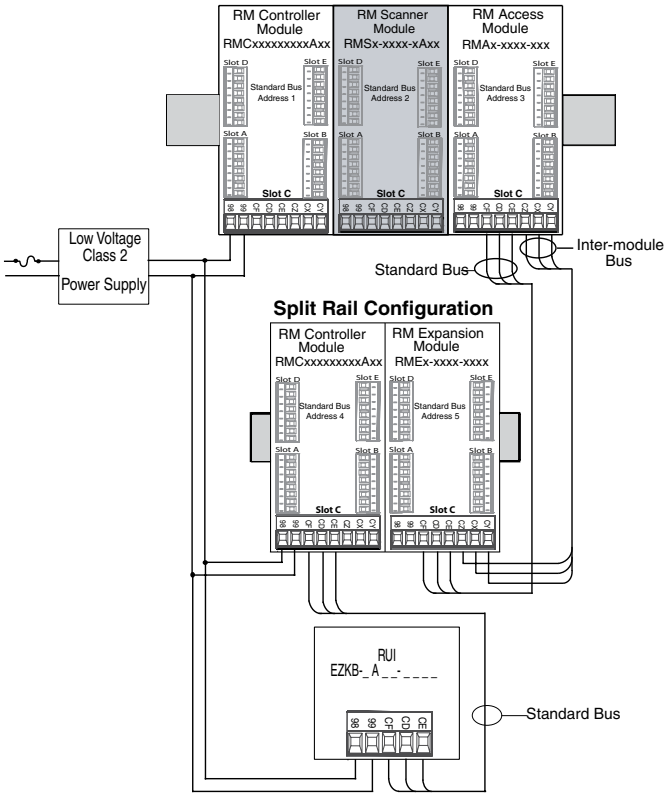

Note:

Unit is not provided with a disconnect, use of an external disconnect is required. It should be located in close proximity to the unit and be labeled as the disconnect for the unit.

Conventions Used in the Menu Pages

To better understand the menu pages that follow review the naming conventions used. When encountered throughout this document, the word "default" implies as shipped from the factory. Each page (Operations, Setup and Factory) and their associated menus have identical headers defined below:

Header Name	Definition
Display	Visually displayed information from the control.
Parameter Name	Describes the function of the given parameter.
Range	Defines options available for this prompt, i.e., min/max values (numerical), yes/no, etc... (further explanation below).
Default	Values as delivered from the factory.
Modbus Relative Address	Identifies unique parameters using either the Modbus RTU or Modbus TCP protocols (further explanation below).
CIP (Common Industrial Protocol)	Identifies unique parameters using either the DeviceNet or EtherNet/IP protocol (further explanation below).
Profibus Index	Identifies unique parameters using Profibus DP protocol (further explanation below).
Parameter ID	Identifies unique parameters used with other software such as, LabVIEW.
Data Type R/W	uint = Unsigned 16 bit integer dint = long, 32-bit string = ASCII (8 bits per character) float = IEEE 754 32-bit RWES = **R**eadable **W**ritable **EE**PROM (saved) User **S**et (saved)

Remote User interface (RUI) Display

Visual information from the control is displayed to the observer using a fairly standard 7 segment display. Due to the use of this technology, several characters displayed need some interpretation, see the list below:

1 = 1	0 = 0	i = i	r = r
2 = 2	A = A	J = J	S = S
3 = 3	b = b	K = K	t = t
4 = 4	c, C = c	L = L	u = u
5 = 5	d = d	M = M	v = v
6 = 6	E = E	n = n	W = W
7 = 7	F = F	o = o	y = y
8 = 8	g = g	P = P	Z = Z
9 = 9	h = h	q = q	

Note:
The RUI is optional equipment.

Range

Within this column notice that on occasion there will be numbers found within parenthesis. This number represents the enumerated value for that particular selection. Range selections can be made simply by writing the enumerated value of choice using any of the available communications protocols. As an example, turn to the Setup Page and look at the Analog Input Ai menu and then the Sensor Type SEn prompt. To turn the sensor off simply write the value of 62 (off) to Modbus register 388 and send that value to the control.

Communication Protocols and Software Tools

All RM modules come with Watlow's Standard Bus protocol. This protocol is used primarily for inter-module communications but is also used with SpecView by Watlow, LabVIEW and EZ-ZONE Configurator software (free download from Watlow's web site (http://www.watlow.com). Along with Standard Bus, the RMS module can also be ordered with Modbus RTU (only one protocol can be active at any given time). The RMA (Access) module has options for several different protocols listed below:

- Modbus RTU 232/485
- EtherNet/IP, Modbus TCP
- DeviceNet
- Profibus DP

Modbus RTU Protocol

All Modbus registers are 16-bits and as displayed in this manual are relative addresses (actual). Some legacy software packages limit available Modbus registers to 40001 to 49999 (5 digits). Many applications today require access to all available Modbus registers which range from 400001 to 465535 (6 digits). Watlow EZ-ZONE controllers support 6 digit Modbus registers. For parameters listed as float notice that only one (low order) of the two registers is listed, this is true throughout this document. By default the low order word contains the two low bytes of the 32-bit parameter. As an example, look in the Operations Page for the Process Value. Find the column identified in

the header as Modbus and notice that it lists register 380. Because this parameter is a float it is actually represented by registers 381 (low order bytes) and 381 (high order bytes). Because the Modbus specification does not dictate which register should be high or low order Watlow provides the user the ability to swap this order (Setup Page, [CoM] Menu) from the default low/high [Loh ı] to high/low [h ıLo].

It should also be noted that some of the cells in the Modbus column contain wording pertaining to an offset. Several parameters in the control contain more than one instance; such as, alarms (24), analog inputs (16), etc... The Modbus register shown always represents instance one. Take for an example the Alarm Silencing parameter found in the Setup Page under the Alarm menu. Instance one is shown as address 2670 and +60 is identified as the offset to the next instance. If there was a desire to read or write to the same member instance 3, simply add 120 to 2670 to find its address; in this case, the instance 3 address for Alarm Silencing is 2790.

To learn more about the Modbus protocol point your browser to http://www.modbus.org.

Note:

There are two columns shown in the menus that follow for communications protocols identified as CIP (Common Industrial Protocol) and Profibus. These columns will be useful if this control is used in conjunction with the RMA module or the EZ-ZONE Remote User Interface/Gateway (RUI/GTW) where those protocols can be selected as optional hardware. For this module (RMS), as a secondary protocol beyond Standard Bus, Modbus RTU can be ordered as optional hardware.

To learn more about the RUI/GTW point your browser to the link below and search for keyword EZ-ZONE.
http://www.watlow.com/literature/pti_search.cfm

3 Chapter 3: Operations Pages

Navigating the Operations Page

To navigate to the Operations Page using the RUI, follow the steps below:

1. From the Home Page, press both the Up ▲ and Down ▼ keys for three seconds. A1 will appear in the upper display and oPEr will appear in the lower display.
2. Press the Up ▲ or Down ▼ key to view available menus.
3. Press the Advance Key ◎ to enter the menu of choice.
4. If a submenu exists (more than one instance), press the Up ▲ or Down ▼ key to select and then press the Advance Key ◎ to enter.
5. Press the Up ▲ or Down ▼ key to move through available menu prompts.
6. Press the Infinity Key ∞ to move backwards through the levels: parameter to submenu; submenu to menu; menu to Home Page.
7. Press and hold the Infinity Key ∞ for two seconds to return to the Home Page.

On the following pages, top level menus are identified with a yellow background color.

Note:
Some of these menus and parameters may not appear, depending on the controller's options. See model number information in the Appendix for more information. If there is only one instance of a menu, no submenus will appear.

Note:
Some of the listed parameters may not be visible. Parameter visibility is dependent upon controller part number.

A1
oPEr **Analog Input Menu**
1
A1 **Analog Input (1 to 16)**
A1n **Analog Input Value**
1Er **Input Error**
1CA **Calibration Offset**

Pu
oPEr **Process Value Menu**
1
Pu **Process Value (1 to 16)**
Su.A **Source Value A**
Su.b **Source Value B**
Su.C **Source Value C**
Su.d **Source Value D**
Su.E **Source Value E**
oFSt **Offset**
o.u **Output Value**

d1o
oPEr **Digital Input/Output Menu**
1 to 12
d1o **Digital I/O (1 to 12)**
do.S **Output State**
d1.S **Input State**

ACt
oPEr **Action Menu**
1
ACt **Action (1 to 16)**
E1.S **Event Status**

ALM1
oPEr **Alarm Menu**
1
ALM1 **Alarm (1 to 16)**
AL.o **Alarm Low Set Point**
Ah.1 **Alarm High Set Point**
AClr **Alarm Clear Request**
AS.1r **Alarm Silence Request**
ASt **State**

Lnr
oPEr **Linearization Menu**
1
Lnr **Linearization (1 to 24)**
Su.A **Source Value A**
oFSt **Offset**
o.u **Output Value**

CPE
oPEr **Compare Menu**
1
CPE **Compare (1 to 24)**
Su.A **Source Value A**
Su.b **Source Value B**
o.u **Output Value**

tMr1
oPEr **Timer Menu**
1
tMr1 **Timer (1 to 24)**
Su.A **Source Value A**
Su.b **Source Value B**
Et **Elapsed Time**
o.u **Output Value**

Ctr
oPEr **Counter Menu**
1
Ctr **Counter (1 to 24)**
Cnt **Count**
Su.A **Source Value A**
Su.b **Source Value B**
o.u **Output Value**

LGC
oPEr **Logic Menu**
1
LGC **Logic (1 to 24)**
Su.A **Source Value A**
Su.b **Source Value B**
Su.C **Source Value C**
Su.d **Source Value D**
Su.E **Source Value E**
Su.F **Source Value F**
Su.9 **Source Value G**
Su.h **Source Value H**
o.u **Output Value**

MAtH
oPEr **Math Menu**
1
MAtH **Math (1 to 24)**
Su.A **Source Value A**
Su.b **Source Value B**
Su.C **Source Value C**
Su.d **Source Value D**
Su.E **Source Value E**
oFSt **Offset**
o.u **Output Value**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
A i oPEr **Analog Input Menu**								
A in [Ain]	*Analog Input (1 to 16)* **Input Value** View the process value. **Note:** Ensure that the Error Status (below) indicates no error (61) when reading this value using a field bus protocol. If an error exists, the last known value prior to the error occurring will be returned.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	- - - -	380 [offset 90]	0x68 (104) 1 to 0x10 (16) 1	0	4001	float R
No Display	*Analog Input (1 to 16)* **Filtered Process Value** View the process value when filtering is turned on.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	- - - -	422 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x16 (22)	- - - -	4022	float R
i.Er [i.Er]	*Analog Input (1 to 16)* **Input Error** View the cause of the most recent error.	nonE None (61) OPEn Open (65) Shrt Shorted (127) E.mA Measurement Error (140) E.CAL Bad Calibration Data (139) Er.Ab Ambient Error (9) E.rtd RTD Error (141) FAIL Fail (32) nSrc Not Sourced (246)	None	382 [offset 90]	0x68 (104) 1 to 0x10 (16) 2	1	4002	uint R
i.CA [i.CA]	*Analog Input (1 to 16)* **Calibration Offset** Offset the input reading to compensate for lead wire resistance or other factors that cause the input reading to vary from the actual process value.	-1,999.000 to 9,999.000°F or units -1,110.555 to 5,555.000°C	0.0	402 [offset 90]	0x68 (104) 1 to 0x10 (16) 0xC (12)	2	4012	float RWES
No Display	*Analog Input (1 to 16)* **Clear Latched Input Error** Clear latched input when input error condition no longer exists.	Clear Latch (1221)	- - - -	436 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x1D (29)	- - - -	4029	uint W
Pu oPEr **Process Value Menu**								
Sv.A [Sv.A]	*Process Value (1 to 16)* **Source Value A** View the value of Source A.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	- - - -	5210 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x10 (16)	- - - -	26016	float R
Sv.b [Sv.b]	*Process Value (1 to 16)* **Source Value B** View the value of Source B.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	- - - -	5212 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x11 (17)	- - - -	26017	float R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SuC [Sv.c]	*Process Value (1 to 16)* **Source Value C** View the value of Source C.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	- - - -	5214 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x12 (18)	- - - -	26018	float R
SuD [Sv.d]	*Process Value (1 to 16)* **Source Value D** View the value of Source D.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	- - - -	5216 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x13 (19)	- - - -	26019	float R
SuE [Sv.E]	*Process Value (1 to 16)* **Source Value E** View the value of Source E.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	- - - -	5218 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x14 (20)	- - - -	26020	float R
oFSt [oFSt]	*Process Value (1 to 16)* **Offset** Set an offset to be applied to this function's output.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	0	5224 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x17 (23)	- - - -	26023	float RWES
oU [o.v]	*Process Value (1 to 16)* **Output Value** View the value of this function block's output.	-1,999.000 to 9,999.000°F or units -1,110.556 to 5,555.000°C	0.0	5222 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x16 (22)	- - - -	26022	float R
No Display	*Linearization (1 to 16)* **Error** View reported cause for Linearization output malfunction.	None (61) Open (65) Shorted (127) Measurement error (140) Bad calibration data (139) Ambient error (9) RTD error (14) Fail (32) Math error (1423) Not sourced (246) Stale (1617)	None	5232 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x1B (27)	- - - -	26027	uint R
dIO oPEr **Digital Input/Output Menu**								
doS [do.S]	*Digital Output (1 to 12)* **Output State** View the state of this output.	oFF Off (62) on On (63)		1832 [offset 30]	0x6A (106) 1 to 0x0c (12) 7	46	6007	uint R
diS [di.S]	*Digital Input (1 to 12)* **Input State** View this event input state.	oFF Off (62) on On (63)		1840 [offset 30]	0x6A (106) 1 to 0x0c (12) 0xB (11)	- - - -	6011	uint R
No Display	*Digital Output (1 to 12)* **Error** View reported cause for digital input/output malfunction.	None (61) Open (65) Shorted (127) Measurement error (140) Bad calibration data (139) Ambient error (9) RTD error (14) Fail (32) Math error (1423) Not sourced (246) Stale (1617)	None	1848 [offset 30]	0x6A (106) 1 to 0x0c (12) 15	- - - -	6015	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
ACt oPEr **Action Menu**								
E.iS [Ei.S]	*Action (1 to 16)* **Event Input Status** View this input state.	oFF Off (62) on On (63)		2188 [offset 20]	0x6E (110) 1 to 0x10 (16) 5	81	10005	uint R
No Display	*Function Key (1)* **Function Key State** View current state of function key 1.	Off (62) On (63)	- - - -	- - - -	- - - -	- - - -	3024	uint R
No Display	*Function Key (2)* **Function Key State** View current state of function key 2.	Off (62) On (63)	- - - -	- - - -	- - - -	- - - -	3030	uint R
ALM oPEr **Alarm Menu**								
A.Lo [A.Lo]	*Alarm (1 to 16)* **Low Set Point** If Alarm Type (Setup Page, Alarm Menu) is set to: **process** - set the process value that will trigger a low alarm.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	32.0 °F or units 0.0°C	2502 [offset 60]	0x6D (109) 1 to 0x10 (16) 2	18	9002	float RWES
A.hi [A.hi]	*Alarm (1 to 16)* **High Set Point** If Alarm Type (Setup Page, Alarm Menu) is set to: **process** - set the process value that will trigger a high alarm.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	300.0°F or units 150.0°C	2500 [offset 60]	0x6D (109) 1 to 0x10 (16) 1	19	9001	float RWES
A.Clr [A.hi]	*Alarm (1 to 16)* **Clear Request** User interface (RUI) access to clear an alarm	Clear (129) Ignore (204)	Ignore	- - - -	- - - -	- - - -	9026	uint RW
A.Sir [A.Sir]	*Alarm (1 to 16)* **Silence Request** User interface (RUI) access to silence an alarm	Ignore (204) Silence (108)	Ignore	- - - -	- - - -	- - - -	9027	uint RW
A.St [A.St]	*Alarm (1 to 16)* **State** View state of alarm	Startup (88) None (61) Blocked (12) Alarm low (8) Alarm high (7) Error (28)	Startup	2516 [offset 60]	0x6D (109) 1 to 0x10 (16) 9	- - - -	9009	uint R
No Display	*Alarm (1 to 16)* **Latched** Read this register to determine if the alarm is latched	No (59) Yes (106)	No	2518 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x0A (10)	- - - -	9010	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
No Display	*Alarm (1 to 16)* **Silenced** Read this register to determine if the alarm is silenced	No (59) Yes (106)	None	2520 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x0B (11)	- - - -	9011	uint R
No Display	*Alarm (1 to 16)* **Clearable** Read to determine if an alarm can be cleared	No (59) Yes (106)	None	2522 [offset 60]	0x6D (109) 1 to 0x10 (16) 0xC (12)	- - - -	9012	uint R
No Display	*Alarm (1 to 16)* **Clear Request** Write to this register to clear an alarm	Clear (0) No Change (255)	None	2524 [offset 60]	0x6D (109) 1 to 0x10 (16) 0xD (13)	32	9013	uint RW
No Display	*Alarm (1 to 16)* **Silence Request** Write to this register to silence an alarm	Clear (0) No Change (255)	None	2526 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x0E (14)	33	9014	uint RW
No Display	*Alarm (1 to 16)* **Alarm Working Process Value** Read process value used by alarms	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	None	2536 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x13 (19)	- - - -	9019	float R
No Display	*Alarm (1 to 16)* **Alarm Working Set Point** Read set point used by alarms	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	None	2538 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x14 (20)	- - - -	9020	float R
No Display	*Alarm (1 to 16)* **Output Value** Read state of alarm output	On (63) Off (62)	None	2546 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x18 (24)	- - - -	9024	uint R
Lnr oPEr **Linearization Menu**								
Su.A [Su.A]	*Linearization (1 to 24)* **Source Value A** View the value of Source A.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		11346 [offset 70]	0x86 (134) 1 to 0x18 (24) 4	- - - -	34004	float R
oFSt [oFSt]	*Linearization (1 to 24)* **Offset** Set an offset to be applied to this function's output.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	0	11350 [offset 70]	0x86 (134) 1 to 0x18 (24) 6	- - - -	34006	float RWES
o.u [o.v]	*Linearization (1 to 24)* **Output Value** View the value of this function's output.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		11352 [offset 70]	0x86 (134) 1 to 0x18 (24) 7	- - - -	34007	float R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
No Display	*Linearization (1 to 24)* **Error** Read reported cause for linearization error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		11394 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x1C (28)	- - - -	34028	uint R
CPE oPEr **Compare Menu**								
Su.A [Su.A]	*Compare (1 to 24)* **Source Value A** View the value of Source A.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		8232 [offset 40]	0x80 (128) 1 to 0x18 (24) 7	- - - -	28007	float R
Su.b [Su.b]	*Compare (1 to 24)* **Source Value B** View the value of Source B.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		8234 [offset 40]	0x80 (128) 1 to 0x18 (24) 8	- - - -	28008	float R
o.u [o.v]	*Compare (1 to 24)* **Output Value** View the value of this function's output.	oFF Off (62) on On (63)		8238 [offset 40]	0x80 (128) 1 to 0x18 (24) 0xA (10)	- - - -	28010	uint R
No Display	*Compare (1 to 24)* **Error** Read reported cause for compare error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		8244 [offset 40]	0x80 (128) 1 to 0x18 (24) 0x0D (13)	- - - -	28013	uint R
tMr oPEr **Timer Menu**								
Su.A [Su.A]	*Timer (1 to 24)* **Value Source A** View the value of Source A.	oFF Off (62) on On (63)	- - - -	10152 [offset 50]	0x83 (131) 1 to 0x18 (24) 7	- - - -	31007	uint R
Su.b [Su.b]	*Timer (1 to 24)* **Value Source B** View the value of Source B.	oFF Off (62) on On (63)	- - - -	10154 [offset 50]	0x83 (131) 1 to 0x18 (24) 8	- - - -	31008	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
E.t [E.t]	*Timer (1 to 24)* **Elapsed Time** View the value of this function's elapsed time.	0 to 30,000.0 seconds	0	10170 [offset 50]	0x83 (131) 1 to 0x18 (24) 0x10 (16)	- - - -	31016	float R
o.u [o.v]	*Timer (1 to 24)* **Output Value** View the value of this function's output.	oFF Off (62) on On (63)	- - - -	10158 [offset 50]	0x83 (131) 1 to 0x18 (24) 0x11 (17)	- - - -	31010	uint R
No Display	*Timer (1 to 24)* **Running** Read to determine if timer is running	Off (62) On (63)	- - - -	10168 [offset 50]	0x83 (131) 1 to 0x18 (24) 0x0F (15)	- - - -	31015	uint R
No Display	*Timer (1 to 24)* **Error** Read reported cause for timer error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		10174 [offset 50]	0x83 (131) 1 to 0x18 (24) 0x12 (18)	- - - -	31018	uint R
Ctr oPEr **Counter Menu**								
Cnt [Cnt]	*Counter (1 to 24)* **Count** View the function's total count.	0 to 9,999		9208 [offset 40]	0x82 (130) 1 to 0x18 (24) 0xF (15)	125	30015	uint R
Su.A [Su.A]	*Counter (1 to 24)* **Source Value A** View the value of Source A.	oFF Off (62) on On (63)		9192 [offset 40]	0x82 (130) 1 to 0x18 (24) 7	- - - -	30007	uint R
Su.b [Su.b]	*Counter (1 to 24)* **Source Value B** View the value of Source B.	oFF Off (62) on On (63)		9194 [offset 40]	0x82 (130) 1 to 0x18 (24) 8	- - - -	30008	uint R
o.u [o.v]	*Counter (1 to 24)* **Output Value** View the value of this function's output.	oFF Off (62) on On (63)		9198 [offset 40]	0x82 (130) 1 to 0x18 (24) 0xA (10)	- - - -	30010	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
No Display	*Counter (1 to 24)* **Error** Read reported cause for counter error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		9210 [offset 40]	0x82 (130) 1 to 0x18 (24) 0x10 (16)	- - - -	30016	uint R
LGC oPEr **Logic Menu**								
Su.A [Su.A]	*Logic (1 to 24)* **Source Value A** View the value of Source A.	oFF Off (62) on On (63)		6348 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x19 (25)	- - - -	27025	uint R
Su.b [Su.b]	*Logic (1 to 24)* **Source Value B** View the value of Source B.	oFF Off (62) on On (63)		6350 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1A (26)	- - - -	27026	uint R
Su.C [Su.C]	*Logic (1 to 24)* **Source Value C** View the value of Source C.	oFF Off (62) on On (63)		6352 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1B (27)	- - - -	27027	uint R
Su.d [Su.d]	*Logic (1 to 24)* **Source Value D** View the value of Source D.	oFF Off (62) on On (63)		6354 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1C (28)	- - - -	27028	uint R
Su.E [Su.E]	*Logic (1 to 24)* **Source Value E** View the value of Source E.	oFF Off (62) on On (63)		6356 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1D (29)	- - - -	27029	uint R
Su.F [Su.F]	*Logic (1 to 24)* **Source Value F** View the value of Source F.	oFF Off (62) on On (63)		6358 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1E (30)	- - - -	27030	uint R
Su.g [Su.g]	*Logic (1 to 24)* **Value Source G** View the value of Source G.	oFF Off (62) on On (63)		6360 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x1F (31)	- - - -	27031	uint R
Su.h [Su.h]	*Logic (1 to 24)* **Source Value H** View the value of Source H.	oFF Off (62) on On (63)		6362 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x20 (32)	- - - -	27032	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
o.u [o.v]	*Logic (1 to 24)* **Output Value** View the value of this function's output.	oFF Off (62) on On (63)		6366 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x22 (34)	- - - -	27034	uint R
No Display	*Logic (1 to 24)* **Error** Read reported cause for logic error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		6370 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x24 (36)	- - - -	27036	uint R
MAtH oPEr **Math Menu**								
Su.A [Su.A]	*Math (1 to 24)* **Source Value A** View the value of Source A.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		3530 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x10 (16)	- - - -	25016	float RWES
Su.b [Su.b]	*Math (1 to 24)* **Source Value B** View the value of Source B.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		3532 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x11 (17)	- - - -	25017	float RWES
Su.C [Su.C]	*Math (1 to 24)* **Source Value C** View the value of Source C.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		3534 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x12 (18)	- - - -	25018	float RWES
Su.d [Su.d]	*Math (1 to 24)* **Source Value D** View the value of Source D.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		3536 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x13 (19)	- - - -	25019	float RWES
Su.E [Su.E]	*Math (1 to 24)* **Source Value E** View the value of Source E.	oFF Off (62) on On (63)		3538 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x14 (20)	- - - -	25020	uint RWES
oFSt [oFSt]	*Math (1 to 24)* **Offset** Set an offset to be applied to this function's output.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	0	3544 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x17 (23)	- - - -	25023	float RWES
o.u [o.v]	*Math (1 to 24)* **Output Value** View the value of this function's output.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C		3542 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x16 (22)	- - - -	25022	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Operations Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
No Display	*Math (1 to 24)* **Error** Read reported cause for logic error	None (61) Open (65) Shorted (127) Measurement Error (140) Bad Cal Data (139) Ambient Error (9) RTD Error (141) Fail (32) Math Error (1423) Not Sourced (246) Stale (1617)		3556 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1D (29)	- - - -	25029	uint R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

4 Chapter 4: Setup Pages

Navigating the Setup Page

To navigate to the Setup Page using the RUI, follow the steps below:

1. From the Home Page, press both the Up and Down keys for six seconds. [A1] will appear in the upper display and [SEt] will appear in the lower display.
2. Press the Up or Down key to view available menus.
3. Press the Advance Key to enter the menu of choice.
4. If a submenu exists (more than one instance), press the Up or Down key to select and then press the Advance Key to enter.
5. Press the Up or Down key to move through available menu prompts.
6. Press the Infinity Key to move backwards through the levels: parameter to submenu; submenu to menu; menu to Home Page.
7. Press and hold the Infinity Key for two seconds to return to the Home Page.

On the following pages, top level menus are identified with a yellow background color.

Note:
Some of these menus and parameters may not appear, depending on the controller's options. See model number information in the Appendix for more information. If there is only one instance of a menu, no sub-menus will appear.

Note:
Some of the listed parameters may not be visible. Parameter visibility is dependent upon controller part number.

[A1]
[SEt] **Analog Input Menu**
[1]
[A1] **Analog Input (1 to 16)**
[SEn] **Sensor Type**
[L in] **TC Linearization**
[Unit] **Units**
[S.Lo] **Scale Low**
[S.hi] **Scale High**
[r.Lo] **Range Low**
[r.hi] **Range High**
[P.EE] **Process Error Enable**
[P.EL] **Process Error Low Value**
[t.C] **Thermistor Curve**
[r.r] **Resistance Range**
[FiL] **Filter**
[iEr] **Input Error Latching**
[dEC] **Display Precision**
[iCA] **Calibration Offset**
[A in] **Analog Input Value**
[iEr] **Input Error**

[Pu]*
[SEt] **Process Value Menu**
[1]
[Pu] **Process Value (1 to 16)**
[Fn] **Function**
[SFn.A] **Source Function A**
[S iA] **Source Instance A**
[SFn.b] **Source Function B**
[S ib] **Source Instance B**
[S2.b] **Source Zone B**
[SFn.C] **Source Function C**
[S iC] **Source Instance C**
[S2.C] **Source Zone C**
[SFn.d] **Source Function D**
[S id] **Source Instance D**
[S2.d] **Source Zone D**
[SFn.E] **Source Function E**
[S iE] **Source Instance E**
[S2.E] **Source Zone E**
[C.P] **Cross Over Point**
[C.b] **Cross Over Band**
[P.unt] **Pressure Units**
[A.unt] **Altitude Units**
[b.Pr] **Barometric Pressure**
[FiL] **Filter**

[dio]
[SEt] **Digital Input/Output Menu**
[1]
[dio] **Digital Input/Output (1 to 12)**
[dir] **Direction**
[Fn] **Function**
[Fi] **Function Instance**
[S2.A] **Source Zone A**
[o.Ct] **Control**
[o.tb] **Time Base**
[o.Lo] **Low Power Scale**
[o.hi] **High Power Scale**

[ACt]
[SEt] **Action Menu**
[1]
[ACt] **Action (1 to 16)**
[Fn] **Function**
[Fi] **Function Instance**
[SFn.A] **Source Function A**
[S iA] **Source Instance A**
[S2.A] **Source Zone A**
[LEu] **Active Level**

[oPt]
[SEt] **Output Menu**
[1]
[oPt] **Output (1 to 10)**
[Fn] **Output Function**
[Fi] **Output Function Instance**
[S2] **Output Source Zone A**
[o.Ct] **Output Control**
[o.tb] **Output Time Base**
[o.Lo] **Output Low Power Scale**
[o.hi] **Output High Power Scale**

[ALM]
[SEt] **Alarm Menu**
[1]
[ALM] **Alarm (1 to 16)**
[A.ty] **Alarm Type**
[Sr.A] **Alarm Source**
[iS.A] **Alarm Source Instance**
[S2.A] **Alarm Source Zone**
[A.hy] **Alarm Hysteresis**
[A.Lg] **Alarm Logic**
[A.Sd] **Alarm Sides**
[A.Lo] **Alarm Low Set Point**
[A.hi] **Alarm High Set Point**
[A.LA] **Alarm Latching**
[A.bL] **Alarm Blocking**
[A.Si] **Alarm Silencing**
[A.dSP] **Alarm Display**
[A.dL] **Alarm Delay Time**
[A.CLr] **Alarm Clear Request**
[A.Sir] **Alarm Silence Request**
[A.St] **Alarm State**

- Lnr
  - SEt **Linearization Menu**
    - 1
    - Lnr **Linearization (1 to 24)**
      - Fn **Function**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - Un .t **Units**
      - .P.1 **Input Point 1**
      - oP.1 **Output Point 1**
      - .P.2 **Input Point 2**
      - oP.2 **Output Point 2**
      - .P.3 **Input Point 3**
      - oP.3 **Output Point 3**
      - .P.4 **Input Point 4**
      - oP.4 **Output Point 4**
      - .P.5 **Input Point 5**
      - oP.5 **Output Point 5**
      - .P.6 **Input Point 6**
      - oP.6 **Output Point 6**
      - .P.7 **Input Point 7**
      - oP.7 **Output Point 7**
      - .P.8 **Input Point 8**
      - oP.8 **Output Point 8**
      - .P.9 **Input Point 9**
      - oP.1 **Output Point 9**
      - .P.10 **Input Point 10**
      - oP.10 **Output Point 10**
- CPE
  - SEt **Compare Menu**
    - 1
    - CPE **Compare (1 to 24)**
      - Fn **Function**
      - tol **Tolerance**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - SFn.b **Source Function B**
      - S .b **Source Instance B**
      - S2.b **Source Zone B**
      - Er.h **Error Handling**
- tMr
  - SEt **Timer Menu**
    - 1
    - tMr **Timer (1 to 24)**
      - Fn **Function**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - SAS.A **Source Active State A**
      - SFn.b **Source Function B**
      - S .b **Source Instance B**
      - S2.b **Source Zone B**
      - SAS.b **Source Active State B**
      - t . **Time**
      - LEv **Active Level**
- Ctr
  - SEt **Counter Menu**
    - 1
    - Ctr **Counter (1 to 24)**
      - Fn **Function**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - SAS.A **Source Active State A**
      - SFn.b **Source Function B**
      - S .b **Source Instance B**
      - S2.b **Source Zone B**
      - SAS.b **Source Active State B**
      - LoAd **Load Value**
      - trGt **Target Value**
      - LAt **Latching**
- LGC
  - SEt **Logic Menu**
    - 1
    - LGC **Logic (1 to 24)**
      - Fn **Function**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - SFn.b **Source Function B**
      - S .b **Source Instance B**
      - S2.b **Source Zone B**
      - SFn.C **Source Function C**
      - S .C **Source Instance C**
      - S2.C **Source Zone C**
      - SFn.d **Source Function D**
      - S .d **Source Instance D**
      - S2.d **Source Zone D**
      - SFn.E **Source Function E**
      - S .E **Source Instance E**
      - S2.E **Source Zone E**
      - SFn.F **Source Function F**
      - S .F **Source Instance F**
      - S2.F **Source Zone F**
      - SFn.G **Source Function G**
      - S .G **Source Instance G**
      - S2.G **Source Zone G**
      - SFn.H **Source Function H**
      - S .H **Source Instance H**
      - S2.H **Source Zone H**
      - Er.h **Error Handling**
- MAtH
  - SEt **Math Menu**
    - 1
    - MAtH **Math (1 to 24)**
      - Fn **Function**
      - SFn.A **Source Function A**
      - S .A **Source Instance A**
      - S2.A **Source Zone A**
      - SFn.b **Source Function B**
      - S .b **Source Instance B**
      - S2.b **Source Zone B**
      - SFn.C **Source Function C**
      - S .C **Source Instance C**
      - S2.C **Source Zone C**
      - SFn.d **Source Function D**
      - S .d **Source Instance D**
      - S2.d **Source Zone D**
      - SFn.E **Source Function E**
      - S .E **Source Instance E**
      - S2.E **Source Zone E**
      - S.Lo **Scale Low**
      - S.h . **Scale High**
      - r.Lo **Range Low**
      - r.h . **Range High**
      - P.unt **Pressure Units**
      - A.unt **Altitude Units**
      - F .L **Filter**
- uAr
  - SEt **Variable Menu**
    - 1
    - uAr **Variable (1 to 24)**
      - tYPE **Data Type**
      - Un .t **Units**
      - d .9 **Digital**
      - AnL9 **Analog**
- GLbL
  - SEt **Global Menu**
    - C_F **Display Units**
    - ACLF **AC Line Frequency**
    - d.Pr5 **Display Pairs**
    - USr.S **User Settings Save**
    - USr.r **User Settings Restore**
- COMM
  - SEt **Communications Menu**
    - bAUd **Baud Rate**
    - PAr **Parity**
    - MM.hL **Modbus Word Order**
    - C_F **Display Units**
    - nv.S **Non-volatile Save**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
Ai SEt **Analog Input Menu**								
SEn [SEn]	*Analog Input (1 to 16)* **Sensor Type** Set the analog sensor type to match the device wired to this input. **Note:** There is no open-sensor detection for process inputs.	oFF Off (62) tC Thermocouple (95) mV Millivolts (56) volt Volts dc (104) mA Milliamps dc (112) rtd.1H RTD 100 Ω (113) r 1.0H RTD 1,000 Ω (114) Pot Potentiometer 1 kΩ (155) thEr Thermistor (229)		388 [offset 90]	0x68 (104) 1 to 0x10 (16) 5	3	4005	uint RWES
Lin [Lin]	*Analog Input (1 to 16)* **TC Linearization** Set the linearization to match the thermocouple wired to this input.	b B (11) C C (15) d D (23) E E (26) F F (30) J J (46) H K (48) n N (58) r R (80) S S (84) t T (93)	J	390 [offset 90]	0x68 (104) 1 to 0x10 (16) 6	4	4006	uint RWE
Unit [Unit]	*Analog Input (1 to 16)* **Units** Set the type of units the sensor will measure.	AbtP Absolute Temperature (1540) PwJr Power (73) Pro Process (75) rh Relative Humidity (1538)	Process	462 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x2A (42)	5	4042	uint RWE
S.Lo [S.Lo]	*Analog Input (1 to 16)* **Scale Low** Set the low scale for process inputs. This value, in millivolts, volts or milliamps, will correspond to the Range Low output of this function block.	-100.0 to 1,000.0	0.0	408 [offset 90]	0x68 (104) 1 to 0x10 (16) 0xF (15)	6	4015	float RWE
S.hi [S.hi]	*Analog Input (1 to 16)* **Scale High** Set the high scale for process inputs. This value, in millivolts, volts or milliamps, will correspond to the Range High output of this function block.	-100.0 to 1,000.0	20.0	410 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x10 (16)	7	4016	float RWE
r.Lo [r.Lo]	*Analog Input (1 to 16)* **Range Low** Set the low range for this function block's output.	-1,999.000 to 9,999.000	0.0	412 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x11 (17)	8	4017	float RWE
r.hi [r.hi]	*Analog Input (1 to 16)* **Range High** Set the high range for this function block's output.	-1,999.000 to 9,999.000	9,999.0	414 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x12 (18)	9	4018	float RWE
P.EE [P.EE]	*Analog Input (1 to 16)* **Process Error Enable** Turn the Process Error Low feature on or off.	oFF Off (62) Lolo Low (53)	Off	438 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x1E (30)	10	4030	uint RWE
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
P.EL [P.EL]	*Analog Input (1 to 16)* **Process Error Low Value** If the process value drops below this value, it will trigger an input error.	-100.0 to 1,000.0	0.0	440 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x1F (31)	11	4031	float RWE
t.C [t.C]	*Analog Input (1 to 16)* **Thermistor Curve** Select a curve to apply to the thermistor input.	A Curve A (1451) b Curve B (1452) C Curve C (1453) CUSt Custom (180)	Curve A	454 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x26 (38)	- - - -	4038	uint RWE
r.r [r.r]	*Analog Input (1 to 16)* **Resistance Range** Set the maximum resistance of the thermistor input.	5 5K (1448) 10 10K (1360) 20 20K (1361) 40 40K (1449)	40K	452 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x25 (37)	- - - -	4037	uint RWE
F.iL [FiL]	*Analog Input (1 to 16)* **Filter** Filtering smooths out the process signal to both the display and the input. Increase the time to increase filtering.	0.0 to 60.0 seconds	0.5	406 [offset 90]	0x68 (104) 1 to 0x10 (16) 0xE (14)	12	4014	float RWE
i.Er [i.Er]	*Analog Input (1 to 16)* **Error Latching** Turn input error latching on or off. If latching is on, errors must be manually cleared.	oFF Off (62) on On (63)	Off	434 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x1C (28)	- - - -	4028	uint RWE
dEC [dEC]	*Analog Input (1 to 16)* **Display Precision** Set the precision of the displayed value.	0 Whole (105) 0.0 Tenths (94) 0.00 Hundredths (40) 0.000 Thousandths (96)	Whole	418 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x14 (20)	- - - -	4020	uint RWE
i.CA [i.CA]	*Analog Input (1 to 16)* **Calibration Offset** Offset the input reading to compensate for lead wire resistance or other factors that cause the input reading to vary from the actual process value.	-1,999.000 to 9,999.000°F or units -1,110.555 to 5,555.000°C	0.0	402 [offset 90]	0x68 (104) 1 to 0x10 (16) 0x0C (12)	2	4012	float RWE
Ain [Ain]	*Analog Input (1 to 16)* **Process Value** View the process value.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	- - - -	380 [offset 90]	0x68 (104) 1 to 0x10 (16) 1	0	4001	float R
i.Er [i.Er]	*Analog Input (1 to 16)* **Input Error** View the cause of the most recent error.	nonE None (61) OPEn Open (65) Shrt Shorted (127) E.rn Measurement Error (140) E.CAL Bad Calibration Data (139) Er.Ab Ambient Error (9) E.rtd RTD Error (141) FAiL Fail (32) nSrc Not Sourced (246)	None	382 [offset 90]	0x68 (104) 1 to 0x10 (16) 2	1	4002	float R
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
PU SEt **Process Value Menu**								
Fn [Fn]	*Process Value (1 to 16)* **Function** Set the function that will be applied to the source or sources.	oFF Off (62) SbA Sensor Backup (1201) Avg Average (1367) Co Crossover (1368) Wb Wet Bulb / Dry Bulb (1369) So Switch Over (1370) diFF Differential (1373) rAt. Ratio (1374) Add Add (1375) MuL Multiply (1376) Ad.F Absolute Difference (1377) Min Minimum (1378) MAX Maximum (1379) root Square Root (1380) uSLA Vaisala RH Compensation (1648) ALt Pressure to Altitude (1649)	Off	5220 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x15 (21)	64	26021	uint RWES
SFn.A [SFn.A]	*Process Value (1 to 16)* **Source Function A** Set the type of function that will be used for this source.	A. Analog Input (142) PU Process Value (241)	None	5180 [offset 70]	0x7E (126) 1 to 0x10 (16) 1	- - - -	26001	uint RWES
Si.A [Si.A]	*Process Value (1 to 16)* **Source Instance A** Set the instance of the function selected above.	1 to 16	Based on PV instance	5190 [offset 70]	0x7E (126) 1 to 0x10 (16) 6	- - - -	26006	uint RWES
SFn.b [SFn.b]	*Process Value (1 to 16)* **Source Function B** Set the type of function that will be used for this source.	nonE None (61) A. Analog Input (142) Lnr Linearization (238) MAt Math (240) PU Process Value (241) uAr Variable (245)	None	5182 [offset 70]	0x7D 0x7E (126) 1 to 0x10 (16) 2	- - - -	26002	uint RWES
Si.b [Si.b]	*Process Value (1 to 16)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	5192 [offset 70]	0x7E (126) 1 to 0x10 (16) 7	- - - -	26007	uint RWES
SZ.b [SZ.b]	*Process Value (1 to 16)* **Source Zone B** Set the zone of the function selected above.	0 to 16	0	5202 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x0C (12))	- - - -	26012	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.C [SFn.C]	*Process Value (1 to 16)* **Source Function C** Set the type of function that will be used for this source.	none None (61) AI Analog Input (142) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) uAr Variable (245)	None	5184 [offset 70]	0x7E (126) 1 to 0x10 (16) 3	- - - -	26003	uint RWES
Si.C [Si.C]	*Process Value (1 to 16)* **Source Instance C** Set the instance of the function selected above.	1 to 24	1	5194 [offset 70]	0x7E (126) 1 to 0x10 (16) 8	- - - -	26008	uint RWES
SZ.C [SZ.C]	*Process Value (1 to 16)* **Source Zone C** Set the zone of the function selected above.	0 to 16	0	5204 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x0D (13)	- - - -	26013	uint RWES
SFn.d [SFn.d]	*Process Value (1 to 16)* **Source Function D** Set the type of function that will be used for this source.	none None (61) AI Analog Input (142) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) uAr Variable (245)	None	5186 [offset 70]	0x7E (126) 1 to 0x10 (16) 4	- - - -	26004	uint RWES
Si.d [Si.d]	*Process Value (1 to 16)* **Source Instance D** Set the instance of the function selected above.	1 to 24	1	5196 [offset 70]	0x7E (126) 1 to 0x10 (16) 9	- - - -	26009	uint RWES
SZ.d [SZ.d]	*Process Value (1 to 16)* **Source Zone D** Set the zone of the function selected above.	0 to 16	0	5206 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x0E (14)	- - - -	26014	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.E [SFn.E]	*Process Value (1 to 16)* **Source Function E** Set the type of function that will be used for this source.	nonE None (61) ALM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) LgC Logic (239) tMr Timer (244) uAr Variable (245)	None	5188 [offset 70]	0x7E (126) 1 to 0x10 (16) 5	- - - -	26005	uint RWES
Si.E [Si.E]	*Process Value (1 to 16)* **Source Instance E** Set the instance of the function selected above.	1 to 24	1	5198 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x0A (10)	- - - -	26010	uint RWES
SZ.E [SZ.E]	*Process Value (1 to 16)* **Source Zone E** Set the zone of the function selected above.	0 to 16	0	5208 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x0F (15)	- - - -	26015	uint RWES
CP [SZ.E]	*Process Value (1 to 16)* **Cross Over Point** Enter a value where the Output Value switches from Source A to Source B value. This applies only when the Process function is set to Cross Over.	-1,999.000 to 9,999.000 units or °F -1,128.333 to 5,537.223 °C	100.0	5226 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x18 (24)	- - - -	26024	float RWES
Cb [SZ.E]	*Process Value (1 to 16)* **Cross Over Band** Enter a band centered about the Cross Over Point where Output Value switches from Source A to Source B Value. This applies only when the Process function is set to Cross Over.	-1,999.000 to 9,999.000 units or °F -1,128.333 to 5,537.223 °C	10.0	5228 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x19 (25)	- - - -	26025	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
P.unt [P.unt]	*Process Value (1 to 16)* **Pressure Units** Set the units that will be applied to the source.	PSI Pounds per Square Inch (1671) mbr Millibar (1672) torr Torr (1673) PASc Pascal (1674) AtM Atmosphere (1675)	PSI	5234 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x1C (28)	- - - -	26028	uint RWES
A.unt [A.unt]	*Process Value (1 to 16)* **Altitude Units** Set the units that will be applied to the source.	HFt Kilofeet (1677) Ft Feet (1676)	HFt	5236 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x1D (29)	- - - -	26029	uint RWES
b.Pr [b.Pr]	*Process Value (1 to 16)* **Barometric Pressure** Set the units that will be applied to the source.	10.0 to 16.0	14.7	5238 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x1E (30)	- - - -	26030	float RWES
FiL [FiL]	*Process Value (1 to 16)* **Filter** Filtering smooths out the output signal of this function block. Increase the time to increase filtering.	0.0 to 60.0 seconds	0.0	5230 [offset 70]	0x7E (126) 1 to 0x10 (16) 0x1A (26)	- - - -	26026	float RWES
dio SEt **Digital Input/Output Menu**								
dir [dir]	*Digital Input/Output (1 to 12)* **Direction** Set this function to operate as an input or output.	OtPt Output (68) in Input Voltage (193) iCon Input Dry Contact (44)	Output	1820 [offset 30]	0x6A (106) 1 to 0x0C (12) 1	38	6001	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
Fn [Fn]	*Digital Output (1 to 12)* **Function** Select what function will drive this output.	oFF Off (62) Ai Analog Input ALrM Alarm (6) CPr Cool Power () hPr Heat Power () CPE Compare (230) Ctr Counter (231) dio Digital I/O (1142) EntA Profile Event Out A (233) EntB Profile Event Out B (234) EntC Profile Event Out C (235) EntD Profile Event Out D (236) EntE Profile Event Out E (247) EntF Profile Event Out F (248) EntG Profile Event Out G (249) EntH Profile Event Out H (250) FUn Function Key (1001) Lnr Linearization (238) LGC Logic (239) MAtH Math (240) Pu Process Value (241) SoF1 Special Function Output 1 (1532) SoF2 Special Function Output 2 (1533) SoF3 Special Function Output 3 (1534) SoF4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245)		1828 [offset 30]	0x 6A (106) 1 to 0x0C (12) 5	39	6005	uint RWES
Fi [Fi]	*Digital Output (1 to 12)* **Function Instance** Set the instance of the function selected above.	1 to 24	1	1830 [offset 30]	0x6A (106) 1 to 0x0C (12) 6	40	6006	uint RWES
SZ [SZ]	*Digital Output (1 to 12)* **Source Zone** Set the zone of the function selected above.	0 to 16	0	1842 [offset 30]	0x6A (106) 1 to 0x0C (12) 0xC (12)	- - - -	6012	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
o.Ct [o.Ct]	*Digital Output (1 to 12)* **Control** Set the output control type. This parameter is only used with PID control, but can be set anytime.	FtB Fixed Time Base (34) vtB Variable Time Base (103)	Fixed Time Base	1822 [offset 30]	0x6A (106) 1 to 0x0C (12) 2	41	6002	uint RWES
o.tb [o.tb]	*Digital Output (1 to 12)* **Time Base** Set the time base for fixed-time-base control.	0.1 to 60.0 for switched DC/ SSR, 5.0 to 60.0 for mechanical relays		1824 [offset 30]	0x6A (106) 1 to 0x0C (12) 3	42	6003	float RWES
o.Lo [o.Lo]	*Digital Output (1 to 12)* **Low Power Scale** The power output will never be less than the value specified and will represent the value at which output scaling begins.	0.0 to 100.0	0.0	1836 [offset 30]	0x6A (106) 1 to 0x0C (12) 9	43	6009	float RWES
o.hi [o.hi]	*Digital Output (1 to 12)* **High Power Scale** The power output will never be greater than the value specified and will represent the value at which output scaling stops.	0.0 to 100.0	100.0	1838 [offset 30]	0x6A (106) 1 to 0x0C (12) 0xA (10)	44	6010	float RWES
ACt SEt **Action Menu**								
Fn [Fn]	*Action (1 to 16)* **Function** Set the action that will be triggered by this function.	nonE None (61) USr.r User Restore (227) ALrM Alarm Reset (6) S.iL Silence Alarms (108) AoF Loop alarms Off (220) F.AL Force Alarm to Occur (218)	None	2184 [offset 20]	0x6E (110) 1 to 0x10 (16) 3	79	10003	uint RWES
F.i [Fi]	*Action (1 to 16)* **Function Instance** Set the instance of the function selected above.	0 to 25	0	2186 [offset 20]	0x6E (110) 1 to 0x10 (16) 4	80	10004	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.A [SFn.A]	*Action (1 to 16)* **Source Function A** Set the event or function that will trigger the action.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.g Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) Lim Limit (126) LgC Logic (239) trMr Timer (244) uAr Variable (245)	None	2190 [offset 20]	0x6E (110) 1 to 0x10 (16) 6	- - - -	10006	uint RWES
Si.A [Si.A]	*Action (1 to 16)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	2182 [offset 20]	0x6E (110) 1 to 0x10 (16) 2	- - - -	10002	uint RWES
SZ.A [SZ.A]	*Action (1 to 16)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	2192 [offset 20]	0x6E (110) 1 to 0x10 (16) 7	- - - -	10007	uint RWES
LEv [LEv]	*Action (1 to 16)* **Active Level** Set the action that will be considered a true state.	LoUd Low (53) hiGh High (37)	High	2180 [offset 20]	0x6E (110) 1 to 0x10 (16) 1	78	10001	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
oEPt SEt **Output Menu**								
Fn [Fn]	*Output (1 to 4 and 7 to 10)* **Function** Select what function will drive this output.	oFF Off (62) Ai Analog Input ALM Alarm (6) CPr Cool Power (161) hPr Heat Power (160) CPE Compare (230) Ctr Counter (231) dio Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) Lnr Linearization (238) LGC Logic (239) MATH Math (240) Pu Process Value (241) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245)	off	1828 [offset 30]	0x6A (106) 1 to 0x0A (10) 5	39	6005	uint RWES
Fi [Fi]	*Output (1 to 4 and 7 to 10)* **Function Instance** Set the instance of the function selected above.	1 to 24	1	1830 [offset 30]	0x6A (106) 1 to 0x0A (10) 6	40	6006	uint RWES
SZ [SZ]	*Output (1 to 4 and 7 to 10)* **Source Zone A** Set the instance of the function selected above.	1 to 16	0	1842 [offset 30]	0x6A (106) 1 to 0x0A (10) 0x0C (12)	- - - -	6012	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
o.Ct [o.Ct]	*Output (1 to 4 and 7 to 10)* **Control** Set the output control type. This parameter is only used with PID control, but can be set anytime.	FtB Fixed Time Base (34) vtB Variable Time Base (103)	Fixed Time Base	1822 [offset 30]	0x6A (106) 1 to 0x0A (10) 2	41	6002	uint RWES
o.tb [o.tb]	*Output (1 to 4 and 7 to 10)* **Time Base** Set the time base for fixed-time-base control.	0.1 to 60.0 seconds (solid-state relay or switched dc) 5.0 to 60.0 seconds (mechanical relay or no-arc power control)	0.1 sec. [SSR & sw dc] 20.0 sec. [mech, relay, no-arc]	1824 [offset 30]	0x6A (106) 1 to 0x0A (10) 3	42	6003	float RWES
o.Lo [o.Lo]	*Output (1 to 4 and 7 to 10)* **Low Power Scale** The power output will never be less than the value specified and will represent the value at which output scaling begins.	0.0 to 100.0%	0.0%	1836 [offset 30]	0x6A (106) 1 to 0x0A (10) 9	43	6009	float RWES
o.hi [o.hi]	*Output (1 to 4 and 7 to 10)* **High Power Scale** The power output will never be greater than the value specified and will represent the value at which output scaling stops.	0.0 to 100.0%	100.0%	1838 [offset 30]	0x6A (106) 1 to 0x0A (10) 0xA (10)	44	6010	float RWES
ALM1 SEt **Alarm Menu**								
A.ty [A.ty]	*Alarm (1 to 16)* **Type** Select whether the alarm trigger is a fixed value or will track the set point.	oFF Off (62) dE.AL Deviation Alarm (24) Pr.AL Process Alarm (76)	Off	2528 [offset 60]	0x6D (109) 1 to 0x10 (16) 0xF (15)	20	9015	uint RWES
Sr.A [Sr.A]	*Alarm (1 to 16)* **Source** Select what will trigger this alarm.	AI Analog Input (142) CUrr Current (22) PLJr Power, Control Loop (73) Lnr Linearization (238) MAtH Math (240) Pu Process Value (241) uAr Variable (245)	Analog Input	2532 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x11 (17)	21	9017	uint RWES
iS.A [iS.A]	*Alarm (1 to 16)* **Source Instance** Set the instance of the function selected above.	1 or 16	1	2534 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x12 (18)	22	9018	uint RWES
SZ [SZ]	*Alarm (1 to 16)* **Source Zone** Set the zone of the function selected above.	0 or 16	0	2548 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x19 (25)	23	9025	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
A.hy [A.hy]	*Alarm (1 to 16)* **Hysteresis** Set the hysteresis for an alarm. This determines how far into the safe region the process value needs to move before the alarm can be cleared.	0.001 to 9,999.000°F or units 0.001 to 5,555.000°C	1.0°F or units 1.0°C	2504 [offset 60]	0x6D (109) 1 to 0x10 (16) 3	24	9003	float RWES
A.Lg [A.Lg]	*Alarm (1 to 16)* **Logic** Select what the output condition will be during the alarm state.	AL.C Close On Alarm (17) AL.o Open On Alarm (66)	Close On Alarm	2508 [offset 60]	0x6D (109) 1 to 0x10 (16) 5	25	9005	uint RWES
A.Sd [A.Sd]	*Alarm (1 to 16)* **Sides** Select which side or sides will trigger this alarm.	both Both (13) h.gh High (37) Lolo Low (53)	Both	2506 [offset 60]	0x6D (109) 1 to 0x10 (16) 4	26	9004	uint RWES
A.Lo [A.Lo]	*Alarm (1 to 16)* **Low Set Point** If Alarm Type (Setup Page, Alarm Menu) is set to: **process** - set the process value that will trigger a low alarm.	-1,999.000 to 9,999.000°F or units -1,128.000 to 5,537.000°C	32.0°F or units 0.0°C	2502 [offset 60]	0x6D (109) 1 to 0x10 (16) 2	18	9002	float RWES
A.hi [A.hi]	*Alarm (1 to 16)* **High Set Point** If Alarm Type (Setup Page, Alarm Menu) is set to: **process** - set the process value that will trigger a high alarm.	-1,999.000 to 9,999.000 °F or units -1,128.000 to 5,537.000°C	300.0°F or units 150.0°C	2500 [offset 60]	0x6D (109) 1 to 0x10 (16) 1	19	9001	float RWES
A.LA [A.LA]	*Alarm (1 to 16)* **Latching** Turn alarm latching on or off. A latched alarm has to be turned off by the user.	nLAt Non-Latching (60) LAt Latching (49)	Non-Latching	2512 [offset 60]	0x6D (109) 1 to 0x10 (16) 7	27	9007	uint RWES
A.bL [A.bL]	*Alarm (1 to 16)* **Blocking** Select when an alarm will be blocked. After startup and/or after the set point changes, the alarm will be blocked until the process value enters the normal range.	oFF Off (62) Str Startup (88) StPt Set Point (85) both Both (13)	Off	2514 [offset 60]	0x6D (109) 1 to 0x10 (16) 8	28	9008	uint RWES
A.Si [A.Si]	*Alarm (1 to 16)* **Silencing** Turn alarm silencing on to allow the user to disable this alarm.	oFF Off (62) on On (63)	Off	2510 [offset 60]	0x6D (109) 1 to 0x10 (16) 6	29	9006	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
A.dSP [A.dSP]	*Alarm (1 to 16)* **Display** Display an alarm message when an alarm is active.	oFF Off (62) on On (63)	On	2530 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x10 (16)	30	9016	uint RWES
A.dL [A.dL]	*Alarm (1 to 16)* **Delay Time** Set the span of time that the alarm will be delayed after the process value exceeds the alarm set point.	0 to 9,999 seconds	0	2540 [offset 60]	0x6D (109) 1 to 0x10 (16) 0x15 (21)	31	9021	uint RWES
A.CLr [A.hi]	*Alarm (1 to 16)* **Clear Request** Select Clear to clear alarm once in safe region. **Note:** This prompt is not available unless alarm latching is set to latching.	Clear (129) Ignore (204)	Ignore	- - - -	- - - -	- - - -	9026	uint RW
A.Sir [A.Sir]	*Alarm (1 to 16)* **Silence Request** Select Silence to silence alarm while in fail region. **Note:** This prompt is not available unless alarm silencing is set to on.	Ignore (204) Silence (108)	Ignore	- - - -	- - - -	- - - -	9027	uint RW
A.St [A.St]	*Alarm (1 to 16)* **State** View state of alarm	Startup (88) None (61) Blocked (12) Alarm Low (8) Alarm High (7) Error (28)	Startup	- - - -	- - - -	- - - -	9009	uint R
Lnr SEt **Linearization Menu**								
Fn [Fn]	*Linearization (1 to 24)* **Function** Set how this function will linearize Source A.	oFF Off (62) intr Interpolated (1482) StPd Stepped (1483)	Off	11348 [offset 70]	0x86 (134) 1 to 0x18 (24) 5	86	34005	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.A [SFn.A]	*Linearization (1 to 24)* **Source Function A** Set the type of function that will be used for this source.	nonE None (61) AI Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MATH Math (240) PU Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	11340 [offset 70]	0x86 (134) 1 to 0x18 (24) 1	- - - -	34001	uint RWES
S i.A [Si.A]	*Linearization (1 to 24)* **Source Instance A** Set the instance of the function selected above.	1 or 24	1	11342 [offset 70]	0x86 (134) 1 to 0x18 (24) 2	- - - -	34002	uint RWES
SZ.A [SZ.A]	*Linearization (1 to 24)* **Source Zone A** Set the zone of the function selected above.	0 or 16	0	11344 [offset 70]	0x86 (134) 1 to 0x18 (24) 3	- - - -	34003	uint RWES
Unit [Unit]	*Linearization (1 to 24)* **Units** Set the units of Source A.	Src Source (1539) nonE None (61) A.tP Absolute Temperature (1540) r.tP Relative Temperature (1541) PUJr Power (73) Pro Process (75) rh Relative Humidty (1538)	Source	11396 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x1D (29)	87	34029	uint RWES
ip.1 [ip.1]	*Linearization (1 to 24)* **Input Point 1** Set the value that will be mapped to output 1.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	0.0	11354 [offset 70]	0x86 (134) 1 to 0x18 (24) 8	88	34008	float RWES
op.1 [op.1]	*Linearization (1 to 24)* **Output Point 1** Set the value that will be mapped to input 1.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	0.0	11374 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x12 (18)	89	34018	float RWES
ip.2 [ip.2]	*Linearization (1 to 24)* **Input Point 2** Set the value that will be mapped to output 2.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	1.0	11356 [offset 70]	0x86 (134) 1 to 0x18 (24) 9	90	34009	float RWES
op.2 [op.2]	*Linearization (1 to 24)* **Output Point 2** Set the value that will be mapped to input 2.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	1.0	11376 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x13 (19)	91	34019	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
ip.3 [ip.3]	*Linearization (1 to 24)* **Input Point 3** Set the value that will be mapped to output 3.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	2.0	11358 [offset 70]	0x86 (134) 1 to 0x18 (24) 0xA (10)	92	34010	float RWES
op.3 [op.3]	*Linearization (1 to 24)* **Output Point 3** Set the value that will be mapped to input 3.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	2.0	11378 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x14 (20)	93	34020	float RWES
ip.4 [ip.4]	*Linearization (1 to 24)* **Input Point 4** Set the value that will be mapped to output 4.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	3.0	11360 [offset 70]	0x86 (134) 1 to 0x18 (24) 0xB (11)	94	34011	float RWES
op.4 [op.4]	*Linearization (1 to 24)* **Output Point 4** Set the value that will be mapped to input 4.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	3.0	11380 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x15 (21)	95	34021	float RWES
ip.5 [ip.5]	*Linearization (1 to 24)* **Input Point 5** Set the value that will be mapped to output 5.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	4.0	11362 [offset 70]	0x86 (134) 1 to 0x18 (24) 0xC (12)	96	34012	float RWES
op.5 [op.5]	*Linearization (1 to 24)* **Output Point 5** Set the value that will be mapped to input 5.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	4.0	11382 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x16 (22)	97	34022	float RWES
ip.6 [ip.6]	*Linearization (1 to 24)* **Input Point 6** Set the value that will be mapped to output 6.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	5.0	11364 [offset 70]	0x86 (134) 1 to 0x18 (24) 0xD (13)	98	34013	float RWES
op.6 [op.6]	*Linearization (1 to 24)* **Output Point 6** Set the value that will be mapped to input 6.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	5.0	11384 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x17 (23)	99	34023	float RWES
ip.7 [ip.7]	*Linearization (1 to 24)* **Input Point 7** Set the value that will be mapped to output 7.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	6.0	11366 [offset 70]	0x86 (134) 1 to 0x18 (24) E (14)	100	34014	float RWES
op.7 [op.7]	*Linearization (1 to 24)* **Output Point 7** Set the value that will be mapped to input 7.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	6.0	11386 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x18 (24)	101	34024	float RWES
ip.8 [ip.8]	*Linearization (1 to 24)* **Input Point 8** Set the value that will be mapped to output 8.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	7.0	11368 [offset 70]	0x86 (134) 1 to 0x18 (24) 0xF (15)	102	34015	float RWES
op.8 [op.8]	*Linearization (1 to 24)* **Output Point 8** Set the value that will be mapped to input 8.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	7.0	11388 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x19 (25)	103	34025	float RWES
ip.9 [ip.9]	*Linearization (1 to 24)* **Input Point 9** Set the value that will be mapped to output 9.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	8.0	11370 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x10 (16)	104	34016	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
oP.9 [op.9]	*Linearization (1 to 24)* **Output Point 9** Set the value that will be mapped to input 9.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	8.0	11390 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x1A (26)	105	34026	float RWES
iP.10 [ip.10]	*Linearization (1 to 24)* **Input Point 10** Set the value that will be mapped to output 10.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	9.0	11372 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x11 (17)	106	34017	float RWES
oP.10 [op.10]	*Linearization (1 to 24)* **Output Point 10** Set the value that will be mapped to input 10.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	9.0	11392 [offset 70]	0x86 (134) 1 to 0x18 (24) 0x1B (27)	107	34027	float RWES
CPE SEt **Compare Menu**								
Fn [Fn]	*Compare (1 to 24)* **Function** Set operator that will be used to compare Source A to Source B.	oFF Off (62) gt Greater Than (1435) Lt Less Than (1436) E Equal To (1437) nE Not Equal To (1438) goE Greater or Equal (1439) LoE Less or Equal (1440)	Off	8236 [offset 40]	0x80 (128) 1 to 0x18 (24) 9	137	28009	uint RWES
toL [toL]	*Compare (1 to 24)* **Tolerance** If the difference between Source A and Source B is less than this value the two will appear to be equal.	0 to 9,999.000	0.1	8240 [offset 40]	0x80 (128) 1 to 0x18 (24) 0xB (11)	138	28011	float RWES
SFn.A [SFn.A]	*Compare (1 to 24)* **Source Function A** Set the type of function that will be used for this source.	nonE None (61) AI Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	8220 [offset 40]	0x80 (128) 1 to 0x18 (24) 1	- - - -	28001	uint RWES
Si.A [Si.A]	*Compare (1 to 24)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	8224 [offset 40]	0x80 (128) 1 to 0x18 (24) 3	- - - -	28003	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SZ.A [SZ.A]	*Compare (1 to 24)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	8228 [offset 40]	0x80 (128) 1 to 0x18 (24) 5	- - - -	28005	uint RWES
SFn.b [SFn.b]	*Compare (1 to 24)* **Source Function B** Set the type of function that will be used for this source.	nonE None (61) AI Analog Input (142) CUrr Current (22) CPr Cool Power, Control Loop (161) hPr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	8222 [offset 40]	0x80 (128) 1 to 0x18 (24) 2	- - - -	28002	uint RWES
Si.b [Si.b]	*Compare (1 to 24)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	8226 [offset 40]	0x80 (128) 1 to 0x18 (24) 4	- - - -	28004	uint RWES
SZ.b [SZ.b]	*Compare (1 to 24)* **Source Zone B** Set thezone of the function selected above.	0 to 16	0	8230 [offset 40]	0x80 (128) 1 to 0x18 (24) 6	- - - -	28006	uint RWES
Er.h [Er.h]	*Compare (1 to 24)* **Error Handling** Select output value and error output state when compare cannot be processed	t.9 True Good (1476) t.b True Bad (1477) F.9 False Good (1478) F.b False Bad (1479)	False Bad	8242 [offset 40]	0x80 (128) 1 to 0x18 (24) 0xC (12)	- - - -	28012	uint RWES
tMr SEt **Timer Menu**								
Fn [Fn]	*Timer (1 to 24)* **Function** Set how the timer will function.	oFF Off (62) on.P On Pulse (1471) dEL Delay (1472) o.S One Shot (1473) rEt Retentive (1474)	Off	10156 [offset 50]	0x83 (131) 1 to 0x18 (24) 9	131	31009	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFnA [SFn.A]	*Timer (1 to 24)* **Source Function A** Set the type of function that will be used for this source (run signal).	nonE None (61) ALrn Alarm Reset (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tPrn Timer (244) uAr Variable (245)	None	10140 [offset 50]	0x83 (131) 1 to 0x18 (24) 1	- - - -	31001	uint RWES
Si.A [Si.A]	*Timer (1 to 4)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	10144 [offset 50]	0x83 (131) 1 to 0x18 (24) 3	- - - -	31003	uint RWES
SZ.A [SZ.A]	*Timer (1 to 4)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	10148 [offset 50]	0x83 (131) 1 to 0x18 (24) 5	- - - -	31005	uint RWES
SASA [SAS.A]	*Timer (1 to 4)* **Source Active State A** Set what state will be read as on.	High (37) Lo (53)	High	10160 [offset 50]	0x83 (131) 1 to 0x18 (24) 0xB (11)	- - - -	31011	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.b [SFn.b]	*Timer (1 to 24)* **Source Function B** Set the type of function that will be used to reset a retentive timer (reset signal).	nonE None (61) ALM Alarm Reset (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245)	None	10142 [offset 50]	0x83 (131) 1 to 0x18 (24) 2	- - - -	31002	uint RWES
Si.b [Si.b]	*Timer (1 to 24)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	10146 [offset 50]	0x83 (131) 1 to 0x18 (24) 4	- - - -	31004	uint RWES
SZ.b [SZ.b]	*Timer (1 to 24)* **Source Zone B** Set the zone of the function selected above.	0 to 16	0	10150 [offset 50]	0x83 (131) 1 to 0x18 (24) 6	- - - -	31006	uint RWES
SASb [SAS.b]	*Timer (1 to 24)* **Source Active State B** Set what state will be read as on.	High (37) Lo (53)	High	10162 [offset 50]	0x83 (131) 1 to 0x18 (24) 0xC (12)	- - - -	31012	uint RWES
ti [ti]	*Timer (1 to 24)* **Time** Set the time span that will be measured.	0.0 to 9,999.0	1.0	10164 [offset 50]	0x83 (131) 1 to 0x18 (24) 0xD (13)	132	31013	float RWES
LEv [LEv]	*Timer (1 to 24)* **Active Level** Set which output state will indicate on.	High (37) Lo (53)	High	10166 [offset 50]	0x83 (131) 1 to 0x18 (24) 0xE (14)	- - - -	31014	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
CtrSEt **Counter Menu**								
Fn [Fn]	*Counter (1 to 24)* **Function** Set whether the counter increments or decrements the count value. Decrementing 0 returns 9,999. Incrementing 9,999 returns 0.	UP Up (1456) dn Down (1457)	Up	9196 [offset 40]	0x82 (130) 1 to 0x18 (24) 9	- - - -	30009	uint RWES
SFn.A [SFn.A]	*Counter (1 to 24)* **Source Function A** Set the type of function that will be used for the counter clock signal.	nonE None (61) ALM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) LgC Logic (239) tMr Timer (244) uAr Variable (245)	None	9180 [offset 40]	0x82 (130) 1 to 0x18 (24) 1	- - - -	30001	uint RWES
Si.A [Si.A]	*Counter (1 to 24)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	9184 [offset 40]	0x82 (130) 1 to 0x18 (24) 3	- - - -	30003	uint RWES
SZ.A [SZ.A]	*Counter (1 to 24)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	9188 [offset 40]	0x82 (130) 1 to 0x18 (24) 5	- - - -	30005	uint RWES
SASA [SAS.A]	*Counter (1 to 24)* **Source Active State A** Set what output state will indicate on.	h igh High (37) Lolo Low (53) both Both (130)	High	9200 [offset 40]	0x82 (130) 1 to 0x18 (24) 0x0B (11)	- - - -	30011	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.b [SFn.b]	*Counter (1 to 24)* **Source Function B** Set the type of function that will be used for the counter load signal.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.g Profile Event Out G (249) Ent.h Profile Event Out H (250) Fun Function Key (1001) LgC Logic (239) tMr Timer (244) uAr Variable (245)	None	9182 [offset 40]	0x82 (130) 1 to 0x18 (24) 2	- - - -	30002	uint RWES
Si.b [Si.b]	*Counter (1 to 24)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	9186 [offset 40]	0x82 (130) 1 to 0x18 (24) 4	- - - -	30004	uint RWES
SZ.b [SZ.b]	*Counter (1 to 24)* **Source Zone B** Set the zone of the function selected above.	0 to 16	0	9190 [offset 40]	0x82 (130) 1 to 0x18 (24) 6	- - - -	30006	uint RWES
SASb [SAS.b]	*Counter (1 to 24)* **Source Active State B** Set what output state will indicate on.	H igh (37) Lo Lo (53)	High	9202 [offset 40]	0x82 (130) 1 to 0x18 (24) 0xC (12)	- - - -	30012	uint RWES
LoAd [LoAd]	*Counter (1 to 24)* **Load Value** Set the counter's initial value.	0 to 9,999	0	9204 [offset 40]	0x82 (130) 1 to 0x18 (24) (13)	123	30013	uint RWES
trgt [trgt]	*Counter (1 to 24)* **Target Value** Set the value that will turn the output value on.	0 to 9,999	9,999	9206 [offset 40]	0x82 (130) 1 to 0x18 (24) 0xE (14)	124	30014	uint RWES
LAt [LAt]	*Counter (1 to 24)* **Latching** If enabled, output will latch when count equals target value.	No (59) Yes (106)	No	9212 [offset 40]	0x82 (130) 1 to 0x18 (24) 0x11 (17)	126	30017	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
LGC SEt **Logic Menu**								
Fn [Fn]	*Logic (1 to 24)* **Function** Set the operator that will be used to compare the sources.	oFF Off (62) And And (1426) nAnd Nand (1427) or Or (1442) nor Nor (1443) E Equal To (1437) nE Not Equal To (1438) LAt Latch (1444) rSFF RS Flip-Flop (1693)	Off	6364 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x21 (33)	143	27033	uint RWES
SFn.A [SFn.A]	*Logic (1 to 24)* **Source Function A** Set the type of function that will be used for this source.	nonE None (61) ALM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) Fun Function Key (1001) L iM Limit (126) LGC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6300 [offset 80]	0x7F (127) 1 to 0x18 (24) 1	- - - -	27001	uint RWES
S iA [Si.A]	*Logic (1 to 24)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	6316 [offset 80]	0x7F (127) 1 to 0x18 (24) 9	- - - -	27009	uint RWES
SZ.A [SZ.A]	*Logic (1 to 24)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	6332 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x11 (17)	- - - -	27017	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.b [SFn.b]	*Logic (1 to 24)* **Source B Function** Set the type of function that will be used for this source.	nonE None (61) ALM Alarm Reset (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L iM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6302 [offset 80]	0x7F (127) 1 to 0x18 (24) 2	- - - -	27002	uint RWES
S i.b [Si.b]	*Logic (1 to 24)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	6318 [offset 80]	0x7F (127) 1 to 0x18 (24) 0xA (10)	- - - -	27010	uint RWES
S2.b [SZ.b]	*Logic (1 to 24)* **Source Zone B** Set the zone of the function selected above	0 to 16	0	6334 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x12 (18)	- - - -	27018	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.C [SFn.C]	*Logic (1 to 24)* **Source Function C** Set the type of function that will be used for this source.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.g Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L iM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6304 [offset 80]	0x7F (127) 1 to 0x18 (24) 3	- - - -	27003	uint RWES
Si.C [Si.C]	*Logic (1 to 24)* **Source Instance C** Set the instance of the function selected above.	1 to 24	1	6320 [offset 80]	0x7F (127) 1 to 0x18 (24) 0xB (11)	- - - -	27011	uint RWES
SZ.C [SZ.C]	*Logic (1 to 24)* **Source Zone C** Set the zone of the function selected above.	0 to 16	0	6336 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x13 (19)	- - - -	27019	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.d [SFn.d]	*Logic (1 to 24)* **Source Function D** Set the type of function that will be used for this source.	none None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L iM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6306 [offset 80]	0x7F (127) 1 to 0x18 (24) 4	- - - -	27004	uint RWES
Si.d [Si.d]	*Logic (1 to 24)* **Source Instance D** Set the instance of the function selected above.	1 to 24	1	6322 [offset 80]	0x7F (127) 1 to 0x18 (24) 0xC (12)	- - - -	27012	uint RWES
SZ.d [SZ.d]	*Logic (1 to 24)* **Source Zone D** Set the zone of the function selected above.	0 to 16	0	6338 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x14 (20)	- - - -	27020	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.E [SFn.E]	*Logic (1 to 24)* **Source Function E** Set the type of function that will be used for this source.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.g Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L iM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6308 [offset 80]	0x7F (127) 1 to 0x18 (24) 5	- - - -	27005	uint RWES
Si.E [Si.E]	*Logic (1 to 24)* **Source Instance E** Set the instance of the function selected above.	1 to 24	1	6324 [offset 80]	0x7F (127) 1 to 0x18 (24) D (13)	- - - -	27013	uint RWES
SZ.E [SZ.E]	*Logic (1 to 24)* **Source Zone E** Set the zone of the function selected above.	0 to 16	0	6340 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x15 (21)	- - - -	27021	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.F [SFn.F]	*Logic (1 to 24)* **Source Function F** Set the type of function that will be used for this source.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d_io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L_rM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) trMr Timer (244) uAr Variable (245))	None	6310 [offset 80]	0x7F (127) 1 to 0x18 (24) 6	- - - -	27006	uint RWES
S_.F [Si.F]	*Logic (1 to 24)* **Source Instance F** Set the instance of the function selected above.	1 to 24	1	6326 [offset 80]	0x7F (127) 1 to 0x18 (24) 0xE (14)	- - - -	27014	uint RWES
S2.F [SF.F]	*Logic (1 to 24)* **Source Zone F** Set the zone of the function selected above.	0 to 16	0	6342 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x16 (22)	- - - -	27022	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.g [SFn.g]	*Logic (1 to 24)* **Source Function G** Set the type of function that will be used for this source.	nonE None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.g Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) L iM Limit (126) LgC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMr Timer (244) uAr Variable (245))	None	6312 [offset 80]	0x7F (127) 1 to 0x18 (24) 7	- - - -	27007	uint RWES
S i.g [Si.g]	*Logic (1 to 24)* **Source Instance G** Set the instance of the function selected above.	1 to 24	1	6328 [offset 80]	0x7F (127) 1 to 0x18 (24) 0xF (15)	- - - -	27015	uint RWES
SZ.g [SZ.g]	*Logic (1 to 24)* **Source Zone G** Set the zone of the function selected above.	0 to 16	0	6344 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x17 (23)	- - - -	27023	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.h [SFn.h]	*Logic (1 to 24)* **Source Function H** Set the type of function that will be used for this source.	none None (61) ALrM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) Limt Limit (126) LoGC Logic (239) SoF.1 Special Function Output 1 (1532) SoF.2 Special Function Output 2 (1533) SoF.3 Special Function Output 3 (1534) SoF.4 Special Function Output 4 (1535) tMrr Timer (244) uAr Variable (245))	None	6314 [offset 80]	0x7F (127) 1 to 0x18 (24) 8	- - - -	27008	uint RWES
Si.h [Si.h]	*Logic (1 to 24)* **Source Instance H** Set the instance of the function selected above.	1 to 24	1	6330 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x10 (16)	- - - -	27016	uint RWES
SZ.h [SZ.h]	*Logic (1 to 24)* **Source Zone H** Set the zone of the function selected above.	0 to 16	0	6346 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x18 (24)	- - - -	27024	uint RWES
Er.h [Er.h]	*Logic (1 to 24)* **Error Handling** Select output value and error output state when logic cannot be processed	t.9 True Good (1476) t.b True Bad (1477) F.9 False Good (1478) F.b False Bad (1479)	False Bad	6368 [offset 80]	0x7F (127) 1 to 0x18 (24) 0x23 (35)	- - - -	27035	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
MATH SET **Math Menu**								
Fn [Fn]	*Math (1 to 24)* **Function** Set the operator that will be applied to the sources.	oFF Off (62) Avg Average (1367) P.SC Process Scale (1371) d.SC Deviation Scale (1372) S.o Switch Over (1370) d.iFF Differential (1373) rAt.i Ratio (1374) Add Add (1375) MUL Multiply (1376) Ad.iF Absolute Difference (1377) MI.in Minimum (1378) MAH Maximum (1379) root Square Root (1380) hoLd Sample and Hold (1381) ALt Pressure to Altitude (1349) dEWJ Dewpoint (1650)	Off	3540 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x15 (21)	69	25021	uint RWES
SFn.A [SFn.A]	*Math (1 to 24)* **Source Function A** Set the type of function that will be used for this source.	nonE None (61) AI.i Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PWJr Power, Control Loop (73) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	3500 [offset 70]	0x7D (125) 1 to 0x18 (24) 1	- - - -	25001	uint RWES
Si.A [Si.A]	*Math (1 to 24)* **Source Instance A** Set the instance of the function selected above.	1 to 24	1	3510 [offset 70]	0x7D (125) 1 to 0x18 (24) 6	- - - -	25006	uint RWES
SZ.A [SZ.A]	*Math (1 to 24)* **Source Zone A** Set the zone of the function selected above.	0 to 16	0	3520 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xB (11)	- - - -	25011	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.b [SFn.b]	*Math (1 to 24)* **Source Function B** Set the type of function that will be used for this source.	nonE None (61) Ai Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MAtH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	3502 [offset 70]	0x7D (125) 1 to 0x18 (24) 2	- - - -	25002	uint RWES
S i.b [Si.b]	*Math (1 to 24)* **Source Instance B** Set the instance of the function selected above.	1 to 24	1	3512 [offset 70]	0x7D (125) 1 to 0x18 (24) 7	- - - -	25007	uint RWES
S2.b [SZ.b]	*Math (1 to 24)* **Source Zone B** Set the zone of the function selected above.	0 to 16	0	3522 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xC (12)	- - - -	25012	uint RWES
SFn.C [SFn.C]	*Math (1 to 24)* **Source Function C** Set the type of function that will be used for this source.	nonE None (61) Ai Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MAtH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	3504 [offset 70]	0x7D (125) 1 to 0x18 (24) 3	- - - -	25003	uint RWES
S i.C [Si.C]	*Math (1 to 24)* **Source Instance C** Set the instance of the function selected above.	1 to 24	1	3514 [offset 70]	0x7D (125) 1 to 0x18 (24) 8	- - - -	25008	uint RWES
S2.C [SZ.C]	*Math (1 to 24)* **Source Zone C** Set the zone of the function selected above.	0 to 16	0	3524 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xD (13)	- - - -	25013	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SFn.d [SFn.d]	*Math (1 to 24)* **Source Function D** Set the type of function that will be used for this source.	nonE None (61) AI Analog Input (142) CUrr Current (22) C.Pr Cool Power, Control Loop (161) h.Pr Heat Power, Control Loop (160) PUJr Power, Control Loop (73) Lnr Linearization (238) MATH Math (240) Pu Process Value (241) SP.C Set Point Closed, Control Loop (242) SP.o Set Point Open, Control Loop (243) uAr Variable (245)	None	3506 [offset 70]	0x7D (125) 1 to 0x18 (24) 4	- - - -	25004	uint RWES
S id [Si.d]	*Math (1 to 24)* **Source Instance D** Set the instance of the function selected above.	1 to 24	1	3516 [offset 70]	0x7D (125) 1 to 0x18 (24) 9	- - - -	25009	uint RWES
SZd [SZ.d]	*Math (1 to 24)* **Source Zone D** Set the zone of the function selected above.	0 to 16	0	3526 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xE (14)	- - - -	25014	uint RWES
SFn.E [SFn.E]	*Math (1 to 24)* **Source Function E** Set the type of function that will be used for this source.	nonE None (61) ALM Alarm (6) CPE Compare (230) Ctr Counter (231) d io Digital I/O (1142) Ent.A Profile Event Out A (233) Ent.b Profile Event Out B (234) Ent.C Profile Event Out C (235) Ent.d Profile Event Out D (236) Ent.E Profile Event Out E (247) Ent.F Profile Event Out F (248) Ent.9 Profile Event Out G (249) Ent.h Profile Event Out H (250) FUn Function Key (1001) LgC Logic (239) tMr Timer (244) uAr Variable (245)	None	3508 [offset 70]	0x7D (125) 1 to 0x18 (24) 5	- - - -	25005	uint RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
S.iE [Si.E]	*Math (1 to 24)* **Source Instance E** Set the instance of the function selected above.	1 to 24	1	3518 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xA (10)	- - - -	25010	uint RWES
SZ.E [SZ.E]	*Math (1 to 24)* **Source Zone E** Set the zone of the function selected above.	0 to 16	0	3528 [offset 70]	0x7D (125) 1 to 0x18 (24) 0xF (15)	- - - -	25015	uint RWES
S.Lo [S.Lo]	*Math (1 to 24)* **Scale Low** Active for Process or Deviation Scale of Source A only.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	0.0	3546 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x18 (24)	70	25024	float RWES
S.hi [S.hi]	*Math (1 to 24)* **Scale High** Active for Process or Deviation Scale of Source A only	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	1.0	3548 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x19 (25)	71	25025	float RWES
r.Lo [r.Lo]	*Math (1 to 24)* **Range Low** Active for Process or Deviation Scale of Source A only.	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	0.0	3550 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1A (26)	72	25026	float RWES
r.hi [r.hi]	*Math (1 to 24)* **Range High** Active for Process or Deviation Scale of Source A only	-1,999.000 to 9,999.000 °F or units -1,128.333 to 5537.223 °C	1.0	3552 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1B (27)	73	25027	float RWES
P.unt [P.unt]	*Math (1 to 24)* **Pressure Units** Select units of Source A when function is Pressure to Altitude conversion only	PSi Pounds per square inch (1671) mbar mbar (1672) torr Torr (1673) PASc Pascal (1674) ATm Atmosphere (1675)	Pressure Units	3558 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1E (30)	- - - -	25030	uint RWES
A.unt [A.unt]	*Math (1 to 24)* **Altitude Units** Select units of output value when function is Pressure to Altitude conversion only.	Ft Feet (1674) HFt Kilofeet (1671)	Kilofeet	3560 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1F (31)	- - - -	25031	uint RWES
F.iL [FiL]	*Math (1 to 24)* **Filter** Filtering smooths out the output signal of this function block. Increase the time to increase filtering.	0.0 to 60.0 seconds	0.0	3554 [offset 70]	0x7D (125) 1 to 0x18 (24) 0x1C (28)	- - - -	25028	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
uAr SEt **Variable Menu**								
tyPE [tyPE]	*Variable (1 to 24)* **Data Type** Set the variable's data type.	AnLg Analog (1215) d ig Digital (1220)	Analog	13020 [offset 20]	0x66 (102) 1 to 0x18 (24) 1	118	2001	uint RWES
Unit [Unit]	*Variable (1 to 24)* **Units** Set the variable's units.	AtP Absolute Temperature (1540) rtP Relative Temperature (1541) PwJr Power (73) Pro Process (75) rh Relative Humidity (1538) nonE None (61)	Absolute Temperature	13032 [offset 20]	0x66 (102) 1 to 0x18 (24) 7	- - - -	2007	uint RWES
d ig [dig]	*Variable (1 to 24)* **Digital** Set the variable's value.	oFF Off (62) on On (63)	Off	13022 [offset 20]	0x66 (102) 1 to 0x18 (24) 2	119	2002	uint RWES
AnLg [AnLg]	*Variable (1 to 24)* **Analog** Set the variable's value.	-1,999.000 to 9,999.000 **Note:** Stored in °F only	0.0	13024 [offset 20]	0x66 (102) 1 to 0x18 (24) 3	120	2003	float RWES
No Display	*Variable (1 to 24)* **Output Value**	Off (62) On (63) -1,999.000 to 9,999.000	- - - -	13026 [offset 20]	0x66 (102) 1 to 0x18 (24) 4	- - - -	2004	float R
GLbL SEt **Global Menu**								
C_F [C_F]	*Global* **Display Units** Select which scale to use for temperature.	F °F (30) C °C (15)	°F	368	0x67 (103) 1 5	51	3005	uint RWES
AC.LF [AC.LF]	*Global* **AC Line Frequency** Set the frequency to the applied ac line power source.	50 50 Hz (3) 60 60 Hz (4)	60 Hz	- - - -	0x65 (101) 1 0x22 (34)	- - - -	1034	uint RWES
dPrS [dPrS]	*Global* **Display Pairs** Defines the number of display pairs at the home page of an RUI	1 to 15	2	- - - -	0x67 (103) 1 0x1C (28)	- - - -	3028	uint RWES
USr.S [USr.S]	*Global* **User Settings Save** Save all of this controller's settings to the selected set.	nonE None (61) SEt 1 User Set 1 (101) SEt2 User Set 2 (102)	None	26	0x65 (101) 1 0x0E (14)	59	1014	uint W
USr.r [USr.r]	*Global* **User Settings Restore** Replace all of the controller's settings with another set previously saved.	nonE None (61) SEt 1 User Set 1 (101) SEt2 User Set 2 (102) FCty Factory (31)	None	24	0x65 (101) 1 0x0D (13)	58	1013	uint W
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Setup Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
CoMM SEt **Communications Menu**								
bAUd [bAUd]	*Communications* **Baud Rate** Set the speed of this controller's communications to match the speed of the serial network.	9,600 (188) 19,200 (189) 38,400 (190)	9,600	3464	0x96 (150) 1 3	- - - -	17002	uint RWE
PAr [PAr]	*Communications* **Parity** Set the parity of this controller to match the parity of the serial network.	nonE None (61) EuEn Even (191) odd Odd (192)	None	3466	0x96 (150) 1 4	- - - -	17003	uint RWE
M.hL [M.hL]	*Communications* **Modbus Word Order** Select the word order of the two 16-bit words in the floating-point values.	h iLo Word High Low (1330) Loh i Word Low High (1331)	Low High	3468	0x96 (150) 1 5	- - - -	17043	uint RWE
C_F [C_F]	*Communications* **Display Units** Select which scale to use for temperature over comms.	°F (30) °C (15)	°F	3470	0x96 (150) 1 6	113	17050	uint RWE
nV.S [nV.S]	*Communications (1)* **Non-volatile Save** If set to Yes all values written to the control will be saved in EEPROM.	YES Yes (106) no No (59)	Yes	3474	0x96 (150) 1 8	112	17051	uint RWE
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with other interfaces. **If there is only one instance of a menu, no submenus will appear.**								**R: Read** **W: Write** **E: EEPROM** **S: User Set**

5 Chapter 5: Factory Pages

Navigating the Factory Page

To navigate to the Factory Page using the RUI, follow the steps below:

1. From the Home Page, press and hold both the Advance and Infinity keys for six seconds.
2. Press the Up or Down key to view available menus.
3. Press the Advance Key to enter the menu of choice.
4. If a submenu exists (more than one instance), press the Up or Down key to select and then press the Advance Key to enter.
5. Press the Up or Down key to move through available menu prompts.
6. Press the Infinity Key to move backwards through the levels: parameter to submenu; submenu to menu; menu to Home Page.
7. Press and hold the Infinity Key for two seconds to return to the Home Page.

On the following pages, top level menus are identified with a yellow background color.

Note:
Some of these menus and parameters may not appear, depending on the controller's options. See model number information in the Appendix for more information. If there is only one instance of a menu, no submenus will appear.

Note:
Some of the listed parameters may not be visible. Parameter visibility is dependent upon controller part number.

CUSt
FCty **Custom Setup Menu**
1 to 30
CUSt **Custom Setup**
PAr **Parameter**
Inid **Instance ID**

LoC
FCty **Security Setting Menu**
LoC **Security Setting**
LoCo **Operations Page**
PASE **Password Enable**
rLoC **Read Lock**
SLoC **Write Security**
LoCL **Locked Access Level**
roLL **Rolling Password**
PASu **User Password**
PASA **Administrator Password**

ULoC
FCty **Security Setting Menu**
LoC **Security Setting**
CodE **Public Key**
PASS **Password**

diAG
FCty **Diagnostics Menu**
diAG **Diagnostics**
Pn **Part Number**
rEv **Software Revision**
SbLd **Software Build Number**
Sn **Serial Number**
dAtE **Date of Manufacture**

CAL
FCty **Calibration Menu**
1 to 16
ACt **Calibration**
rMu **Electrical Measurement**
EL Io **Electrical Input Offset**
EL IS **Electrical Input Slope**

RM Scanner Module • Factory Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
CUSt FCtY **Custom Setup Menu**								
PAr [Par]	*Custom Menu* **Parameter 1 to 30** Select the parameters that will appear in the Home Page when using the RUI. The Parameter 1 value will appear in the upper display of the Home Page. It cannot be changed with the Up and Down Keys in the Home Page. The Parameter 2 value will appear in the lower display in the Home Page. It can be changed with the Up and Down Keys, if the parameter is a writable one. Scroll through the other Home Page parameters with the Advance Key .	nonE None (61) Pro Process (75) .CA Calibration Offset (1196) C_F Display Units (156) USr.r User Settings Restore (227) A.Lo Alarm Low Set Point (42) A.h i Alarm High Set Point (78) AhY Alarm Hysteresis (97) CUSt Custom Menu (180)	Process Limit Status	- - - -	- - - -	- - - -	14005	uint RWES
iid [iid]	*Custom Setup (1 to 30)* **Instance ID** Select the parameters that will appear in the Home Page.	1 to 24	- - - -	- - - -	- - - -	- - - -	14003	uint RWES
LoC FCtY **Security Setting Menu**								
LoC.o [LoC.o]	*Security Setting* **Operations Page** Change the security level of the Operations Page.	1 to 3	2	- - - -	- - - -	- - - -	- - - -	- - - -
PASE [LoC.P]	*Security Setting* **Password Enable** Turn security features on or off.	oFF Off on On	Off	- - - -	- - - -	- - - -	- - - -	- - - -
rLoC [rLoC]	*Security Setting* **Read Lock** Set the read security clearance level. The user can access the selected level and all lower levels. If the Set Lockout Security level is higher than the Read Lockout Security, the Read Lockout Security level takes priority.	1 to 5	5	- - - -	- - - -	- - - -	- - - -	- - - -
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with another interface. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Factory Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
SLoC [SLoC]	*Security Setting* **Write Security** Set the write security clearance level. The user can access the selected level and all lower levels. If the Set Lockout Security level is higher than the Read Lockout Security, the Read Lockout Security level takes priority.	0 to 5	5	- - - -	- - - -	- - - -	- - - -	- - - -
LoC.L [LoC.L]	*Security Setting* **Locked Access Level** Determines user level menu visibility when security is enabled. See Features section under Password Security.	1 to 5	5	- - - -	- - - -	- - - -	- - - -	- - - -
No Display	*Security Setting* **Locked State** Current level of security	Lock (228) User (1684) Admin (1685)	- - - -	- - - -	- - - -	- - - -	3023	uint R
roLL [roLL]	*Security Setting* **Rolling Password** When power is cycled a new Public Key will be displayed.	oFF Off on On	Off	- - - -	- - - -	- - - -	- - - -	- - - -
PAS.u [PAS.u]	*Security Setting* **User Password** Used to acquire access to menus made available through the Locked Access Level setting.	10 to 999	63	- - - -	- - - -	- - - -	- - - -	- - - -
PAS.A [PAS.A]	*Security Setting* **Administrator Password** Used to acquire full access to all menus.	10 to 999	156	- - - -	- - - -	- - - -	- - - -	- - - -
ULoC FCty **Security Setting Menu**								
CodE [CodE]	*Security Setting* **Public Key** If Rolling Password turned on, generates a random number when power is cycled. If Rolling Password is off fixed number will be displayed.	Customer Specific	0	- - - -	- - - -	- - - -	- - - -	- - - -
PASS [PASS]	*Security Setting* **Password** Number returned from calculation found in Features section under Password Security.	-1999 to 9999	0	- - - -	- - - -	- - - -	- - - -	- - - -
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with another interface. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

RM Scanner Module • Factory Page								
Display	**Parameter Name Description**	**Range**	**Default**	**Modbus Relative Address**	**CIP Class Instance Attribute hex (dec)**	**Profibus Index**	**Parameter ID**	**Data Type & Read/ Write**
d iAG FCty **Diagnostics Menu**								
Pn [Pn]	*Diagnostics Menu* **Part Number** Display this controller's part number.	24	- - - -		0x65 (101) 1 9	90	1009	string R
No Display	*Diagnostics Menu* **Device Name** Read the device name.	EZ-ZONE RM	- - - -	- - - -	0x65 (101) 1 0x0B (11)	- - - -	1011	string R
No Display	*Diagnostics Menu* **Device Status** Return hardware status Fail means return to factory.	OK (138) Fail (32)	- - - -	30	0x65 (101) 1 0x10 (16)	- - - -	1016	uint R
rEu [rEu]	*Diagnostics Menu* **Software Revision** Display this controller's firmware revision number.	5	- - - -	4	0x65 (101) 1 to 5 0x11 (17)	91	1017	string R
S.bLd [S.bLd]	*Diagnostics Menu* **Software Build Number** Display the firmware build number.	- - - -	- - - -	8	0x65 (101) 1 to 5 5	- - - -	1005	signed 32-bit R
Sn [Sn]	*Diagnostics Menu* **Serial Number** Display the serial number.	- - - -	- - - -	12	0x65 (101) 1 7	- - - -	1007	signed 32-bit R
dAtE [dAtE]	*Diagnostics Menu* **Date of Manufacture** Display the date code in YY-WW format	- - - -	- - - -	14	0x65 (101) 1 8	- - - -	1008	signed 32-bit R
No Display	*Diagnostics Menu* **Hardware ID** Read the hardware ID.	115	115	0	0x65 (101) 1 1	- - - -	1001	signed 32-bit R
CAL FCty **Calibration Menu**								
Mv [Mv]	*Calibration Menu (1 to 16)* **Electrical Measurement** Read the raw electrical value for this input in the units corresponding to the Sensor Type (Setup Page, Analog Input Menu) setting.	- - - -		420 [offset 90]	0x68 (104) 1 to 0x0C (12) 0x15 (21)	- - - -	4021	float R
ELio [ELi.o]	*Calibration Menu (1 to 16)* **Electrical Input Offset** Change this value to calibrate the low end of the input range.	-1,999.000 to 9,999.000	0.0	398 [offset 90]	0x68 (104) 1 to 0x0C (12) 0xA (10)	- - - -	4010	float RWES
ELiS [ELi.S]	*Calibration Menu (1 to 16)* **Electrical Input Slope** Adjust this value to calibrate the slope of the input value.	-1,999.000 to 9,999.000	1.0	400 [offset 90]	0x68 (104) 1 to 0x0C (12) 0xB (11)	- - - -	4011	float RWES
Note: Some values will be rounded off to fit in the four-character display. Full values can be read with another interface. **If there is only one instance of a menu, no submenus will appear.**								**R: Read W: Write E: EEPROM S: User Set**

6 Chapter 6: Features

Saving and Restoring User Settings 85
Inputs 85
Calibration Offset 85
Calibration 85
Filter Time Constant 86
Sensor Selection 86
Scale High and Scale Low 86
Range High and Range Low 86
Linearization 86
Alarms 87
Process and Deviation Alarms 87
Alarm Set Points 87
Alarm Hysteresis 87
Alarm Latching 87
Alarm Silencing 88
Alarm Blocking 88
Using Lockout to Hide Pages and Menus 88
Lockout Menu 88
Using Password Security 89
How to Enable Password Security 89
Modbus - Using Programmable Memory Blocks 90
Software Configuration 91
Function Block Descriptions 94
Analog Input Function 94
Process Value Function 95
Linearization Function 100
Output Function 100
Alarm Function 101
Digital Input/Output Function 102
Action Function 103
Global Function 104
Logic Function 104
Math Function 107
Timer Function 112
Counter Function 117
Variable Function 117
Compare Function 118
Custom Function 119
Security Function 119
Diagnostic Function 120
RMS Specifications 124

Saving and Restoring User Settings

Recording setup and operations parameter settings for future reference is very important. If you unintentionally change these, you will need to program the correct settings back into the controller to return the equipment to operational condition.

After you program the controller and verify proper operation, use User Save Set USr.S (Setup Page, Global Menu) to save the settings into either of two files in a special section of memory. If the settings in the controller are altered and you want to return the controller to the saved values, use User Restore Set USr.r (Setup Page, Global Menu) to recall one of the saved settings.

A digital input or the Function Key can also be configured to restore parameters.

Note:
Only perform the above procedure when you are sure that all the correct settings are programmed into the controller. Saving the settings overwrites any previously saved collection of settings.
Be sure to document all the controller settings.

Inputs

Calibration Offset

Calibration offset allows a device to compensate for an inaccurate sensor, lead resistance or other factors that affect the input value. A positive offset increases the input value, and a negative offset decreases the input value.

The input offset value can be viewed or changed with Calibration Offset InCA (Operations Page, Analog Input Menu).

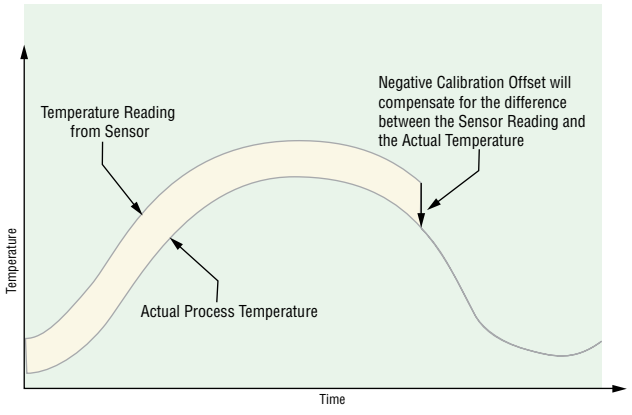
Temperature Reading from Sensor
Negative Calibration Offset will compensate for the difference between the Sensor Reading and the Actual Temperature
Actual Process Temperature
Temperature
Time

Calibration

To calibrate an analog input, you will need to provide two electrical signals or resistance loads near the extremes of the range that the application is likely to utilize. See recommended values below:

Sensor Type	Low Source	High Source
thermocouple	0.000 mV	50.000 mV
millivolts	0.000 mV	50.000 mV
volts	0.000V	10.000V
milliamps	0.000 mA	20.000 mA
100 Ω RTD	50.00 Ω	350.00 Ω
1,000 Ω RTD	500.00 Ω	3,500.00 Ω
Thermistor 5K	50.00 Ω	5000.00 Ω
Thermistor 10K	50.00 Ω	10000.00 Ω
Thermistor 20K	50.00 Ω	20000.00 Ω
Thermistor 40K	50.00 Ω	40000.00 Ω

Follow these steps for a thermocouple or process input:

1. Apply the low source signal to the input you are calibrating. Measure the signal to ensure it is accurate.
2. Read the value of Electrical Measurement rMU (Factory Page, Calibration Menu) for that input.
3. Calculate the offset value by subtracting this value from the low source signal.
4. Set Electrical Input Offset EL.O (Factory Page, Calibration Menu) for this input to the offset value.
5. Check the Electrical Measurement to see whether it now matches the signal. If it doesn't match, adjust Electrical Offset again.
6. Apply the high source signal to the input. Measure the signal to ensure it is accurate.
7. Read the value of Electrical Measurement for that input.
8. Calculate the gain value by dividing the low source signal by this value.
9. Set Electrical Slope EL.S (Factory Page, Calibration Menu) for this input to the calculated gain value.
10. Check the Electrical Measurement to see whether it now matches the signal. If it doesn't match, adjust Electrical Slope again.

Set Electrical Offset to 0 and Electrical Slope to 1 to restore factory calibration.

Follow these steps for an RTD input:

1. Measure the low source resistance to ensure it is accurate. Connect the low source resistance to the input you are calibrating.
2. Read the value of Electrical Measurement rMU (Factory Page, Calibration Menu) for that input.
3. Calculate the offset value by subtracting this value from the low source resistance.
4. Set Electrical Input Offset EL.O (Factory Page, Calibration Menu) for this input to the offset value.
5. Check the Electrical Measurement to see whether it now matches the resistance. If it doesn't match, adjust Electrical Offset again.

6. Measure the high source resistance to ensure it is accurate. Connect the high source resistance to the input.
7. Read the value of Electrical Measurement for that input.
8. Calculate the gain value by dividing the low source signal by this value.
9. Set Electrical Slope [EL.S] (Factory Page, Calibration Menu) for this input to the calculated gain value.
10. Check the Electrical Measurement to see whether it now matches the signal. If it doesn't match, adjust Electrical Slope again.

Set Electrical Offset to 0 and Electrical Slope to 1 to restore factory calibration.

Filter Time Constant

Filtering smoothes an input signal by applying a first-order filter time constant to the signal. Filtering the displayed value makes it easier to monitor. Filtering the signal may improve the performance of PID control in a noisy or very dynamic system.

Adjust the filter time interval with Filter Time [F.iL] (Setup Page, Analog Input Menu). Example: With a filter value of 0.5 seconds, if the process input value instantly changes from 0 to 100 and remained at 100, the display will indicate 100 after five time constants of the filter value or 2.5 seconds.

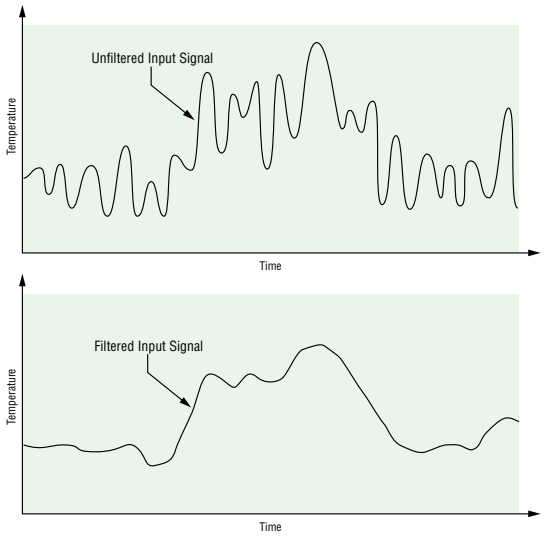

Sensor Selection

You need to configure the controller to match the input device, which is normally a thermocouple, RTD or process transmitter.

Select the sensor type with Sensor Type [SEn] (Setup Page, Analog Input Menu).

Scale High and Scale Low

When an analog input is selected as process voltage or process current input, you must choose the value of voltage or current to be the low and high ends. For example, when using a 4 to 20 mA input, the scale low value would be 4.00 mA and the scale high value would be 20.00 mA. Commonly used scale ranges are: 0 to 20 mA, 4 to 20 mA, 0 to 5V, 1 to 5V and 0 to 10V.

You can create a scale range representing other units for special applications. You can reverse scales from high values to low values for analog input signals that have a reversed action. For example, if 50 psi causes a 4 mA signal and 10 psi causes a 20 mA signal.

Scale low and high low values do not have to match the bounds of the measurement range. These along with range low and high provide for process scaling and can include values not measureable by the controller. Regardless of scaling values, the measured value will be constrained by the electrical measurements of the hardware.

Select the low and high values with Scale Low [S.Lo] and Scale High [S.hi]. Select the displayed range with Range Low [r.Lo] and Range High [r.hi] (Setup Page, Analog Input Menu).

Range High and Range Low

With a process input, you must choose a value to represent the low and high ends of the current or voltage range. Choosing these values allows the controller's display to be scaled into the actual working units of measurement. For example, the analog input from a humidity transmitter could represent 0 to 100 percent relative humidity as a process signal of 4 to 20 mA. Low scale would be set to 0 to represent 4 mA and high scale set to 100 to represent 20 mA. The indication on the display would then represent percent humidity and range from 0 to 100 percent with an input of 4 to 20 mA.

Select the low and high values with Range Low [r.Lo] and Range High [r.hi] (Setup Page, Analog Input Menu).

Linearization

The linearization function allows a user to re-linearize a value read from an analog input. There are 10 data points used to compensate for differences between the sensor value read (input point) and the desired value (output point). Multiple data points enable compensation for non-linear differences between the sensor readings and target process values over the thermal or process system operating range. Sensor reading differences can be caused by sensor placement, tolerances, an inaccurate sensor or lead resistance.

The user specifies the unit of measurement and then each data point by entering an input point value and a corresponding output point value. Each data point must be incrementally higher than the previous point. The linerization function will interpolate data points linearly in between specified data points.

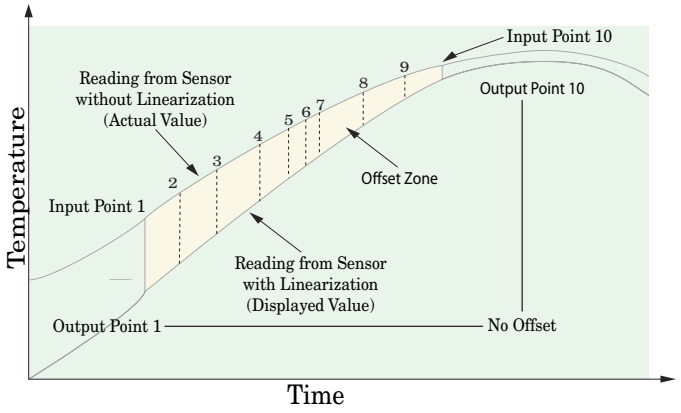

Alarms

Alarms are activated when the output level, process value or temperature leaves a defined range. A user can configure how and when an alarm is triggered, what action it takes and whether it turns off automatically when the alarm condition is over.

Configure alarm outputs in the Setup Page before setting alarm set points.

Alarms do not have to be assigned to an output. Alarms can be monitored and controlled through the front panel or by using software.

Process and Deviation Alarms

A process alarm uses one or two absolute set points to define an alarm condition.

A deviation alarm uses one or two set points that are defined relative to the control set point. High and low alarm set points are calculated by adding or subtracting offset values from the control set point. If the set point changes, the window defined by the alarm set points automatically moves with it.

Select the alarm type with Type [A1ty] (Setup Page, Alarm Menu).

Alarm Set Points

The alarm high set point defines the process value or temperature that will trigger a high side alarm. The alarm low set point defines the temperature that will trigger a low side alarm. For deviation alarms, a negative set point represents a value below closed loop set point. A positive set point represents a value above closed loop set point. View or change alarm set points with Low Set Point [A1Lo] and High Set Point [A1h1] (Operations Page, Alarm Menu).

Alarm Hysteresis

An alarm state is triggered when the process value reaches the alarm high or alarm low set point. Alarm hysteresis defines how far the process must return into the normal operating range before the alarm can be cleared.

Alarm hysteresis is a zone inside each alarm set point. This zone is defined by adding the hysteresis value to the alarm low set point or subtracting the hysteresis value from the alarm high set point. View or change alarm hysteresis with Hysteresis [A1hy] (Setup Page, Alarm Menu).

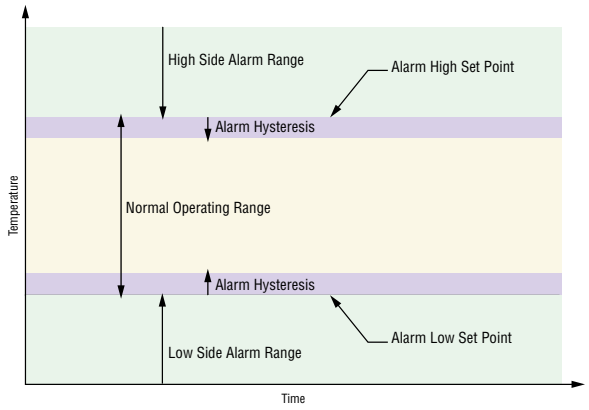

Alarm Set Points and Hysteresis

Alarm Latching

A latched alarm will remain active after the alarm condition has passed. It can only be deactivated by the user.

An active message, such as an alarm message, will cause the RUI display to toggle between the normal settings and the active message in the upper display and [Actn] in the lower display.

Push the Advance Key to display [iGnr] in the upper display and the message source in the lower display.

Use the Up or Down keys to scroll through possible responses, such as Clear [Clr] or Silence [Sil]. Then push the Advance or Infinity key to execute the action.

See the Keys and Displays chapter and the Home Page chapter for more details.

An alarm that is not latched (self-clearing) will deactivate automatically when the alarm condition has passed.

Turn alarm latching on or off with Latching [A1LA] (Setup Page, Alarm Menu).

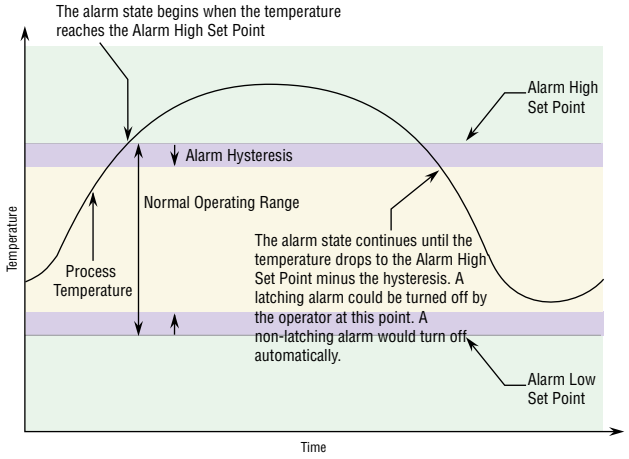
The alarm state begins when the temperature reaches the Alarm High Set Point
Alarm High Set Point
Alarm Hysteresis
Normal Operating Range
Process Temperature
The alarm state continues until the temperature drops to the Alarm High Set Point minus the hysteresis. A latching alarm could be turned off by the operator at this point. A non-latching alarm would turn off automatically.
Alarm Low Set Point
Temperature
Time

Alarm Silencing

If alarm silencing is on the operator can disable the alarm output while the controller is in an alarm state. The process value or temperature has to enter the normal operating range beyond the hysteresis zone to activate the alarm output function again.

An active message, such as an alarm message, will cause the display to toggle between the normal settings and the active message in the upper display and [AtEn] in the lower display.

Push the Advance Key to display [iGnr] in the upper display and the message source in the lower display.

Use the Up and Down keys to scroll through possible responses, such as Clear [CLr] or Silence [SiL]. Then push the Advance or Infinity key to execute the action.

Turn alarm silencing on or off with Silencing [A.SI] (Setup Page, Alarm Menu).

Alarm Blocking

Alarm blocking allows a system to warm up after it has been started up. With alarm blocking on, an alarm is not triggered when the process temperature is initially lower than the alarm low set point or higher than the alarm high set point. The process temperature has to enter the normal operating range beyond the hysteresis zone to activate the alarm function.

Turn alarm blocking on or off with Blocking [A.bL] (Setup Page, Alarm Menu).

Using Lockout to Hide Pages and Menus

If unintentional changes to parameter settings might raise safety concerns or lead to downtime, your can use the lockout feature to make them more secure.

Each of the menus in the Factory Page and each of the pages, except the Factory Page, has a security level assigned to it. You can change the read and write access to these menus and pages by using the parameters in the Lockout Menu (Factory Page).

Lockout Menu

There are five parameters in the Lockout Menu (Factory Page):

- Lock Operations Page [LoC.o] sets the security level for the Operations Page. (default: 2)

Note:
The Home and Setup Page lockout levels are fixed and cannot be changed.

- Lock Profiling Page [LoC.P] sets the security level for the Profiling Page. (default: 3)
- Password Security Enable [PAS.E] will turn on or off the Password security feature. (default: off)
- Read Lockout Security [rLoC] determines which pages can be accessed. The user can access the selected level and all lower levels. (default: 5)
- Set Lockout Security [SLoC] determines which parameters within accessible pages can be written to. The user can write to the selected level and all lower levels. (default: 5)

The table below represents the various levels of lockout for the Set Lockout Security prompt and the Read Lockout Security prompt. The Set Lockout has 6 levels (0-5) of security where the Read Lockout has 5 (1-5). Therefore, level "0" applies to Set Lockout only. "Y" equates to yes (can write/read) where "N" equates to no (cannot write/read). The colored cells simply differentiate one level from the next.

Lockout Security [SLoC] & [rLoC]						
Lockout Level	0	1	2	3	4	5
Home Page (0)	Y	Y	Y	Y	Y	Y
Operations Page (2)	N	N	Y	Y	Y	Y
Setup Page (4)	N	N	N	N	Y	Y
Factory Page						
Custom Menu (5)	N	N	N	N	N	Y
Diagnostic Menu (2)	N	Y	Y	Y	Y	Y
Calibration Menu (5)	N	N	N	N	N	Y
Lockout Menu						
[LoC.0]	N	Y	Y	Y	Y	Y
[LoC.P]	N	Y	Y	Y	Y	Y
[PAS.E]	N	Y	Y	Y	Y	Y
[rLoC]	Y	Y	Y	Y	Y	Y
[SLoC]	Y	Y	Y	Y	Y	Y

The following examples show how the Lockout Menu parameters may be used in applications:

1. You can lock out access to the Operations Page but allow an operator access to the Profile Menu, by changing the default Profile Page and Operations Page security levels. Change Lock Operations Page [LoC.o] to 3 and Lock Profiling Page [LoC.P] to 2. If Set Lockout Security [SLoC] is set to 2 or higher and the Read Lockout Security [rLoC] is set to 2, the Profiling Page and Home Pages can be accessed, and all writable parameters can be written to. Pages with security levels greater than 2 will be locked out (inaccessible).
2. If Set Lockout Security [SLoC] is set to 0 and Read Lockout Security [rLoC] is set to 5, all pages will be accessible, however, changes will not be allowed on any pages or menus, with one exception: Set Lockout Security [SLoC] can be changed to a higher level.
3. The operator wants to read all the menus and not allow any parameters to be changed.

   In the Factory Page, Lockout Menu, set Read Lockout Security [rLoC] to 5 and Set Lockout Security [SLoC] to 0.
4. The operator wants to read and write to the

Home Page and Profiling Page, and lock all other pages and menus.

In the Factory Page, Lockout Menu, set Read Lockout Security [rLoC] to 2 and Set Lockout Security [SLoC] to 2.

In the Factory Page, Lockout Menu, set Lock Operations Page [LoC.O] to 3 and Lock Profiling Page [LoC.P] to 2.

5. The operator wants to read the Operations Page, Setup Page, Profiling Page, Diagnostics Menu, Lock Menu, Calibration Menu and Custom Menus. The operator also wants to read and write to the Home Page.

   In the Factory Page, Lockout Menu, set Read Lockout Security [rLoC] to 1 and Set Lockout Security [SLoC] to 5.

   In the Factory Page, Lockout Menu, set Lock Operations Page [LoC.O] to 2 and Lock Profiling Page [LoC.P] to 3.

Using Password Security

It is sometimes desirable to apply a higher level of security to the control where a limited number of menus are visible and not providing access to others without a security password. Without the appropriate password those menus will remain inaccessible. If Password Enabled [PAS.E] in the Factory Page under the [LoC] Menu is set to on, an overriding Password Security will be in effect. When in effect, the only Pages that a User without a password has visibility to are defined in the Locked Access Level [LoC.L] prompt. On the other hand, a User with a password would have visibility restricted by the Read Lockout Security [rLoC]. As an example, with Password Enabled and the Locked Access Level [LoC.L] set to 1 and [rLoC] is set to 3, the available Pages for a User without a password would be limited to the Home and Factory Pages (locked level 1). If the User password is entered all pages would be accessible with the exception of the Setup Page as defined by level 3 access.

How to Enable Password Security

Go to the Factory Page by holding down the Infinity key and the Advance key for approximately six seconds. Once there, push the Down key one time to get to the [LoC] menu. Again push the Advance key until the Password Enabled [PAS.E] prompt is visible. Lastly, push either the up or down key to turn it on. Once on, 4 new prompts will appear:

1. [LoC.L], Locked Access Level (1 to 5) corresponding to the lockout table above.
2. [roLL], Rolling Password will change the Customer Code every time power is cycled.
3. [PAS.u], User Password which is needed for a User to acquire access to the control.
4. [PAS.A], Administrator Password which is needed to acquire administrative access to the control.

The Administrator can either change the User and or the Administrator password or leave them in the default state. Once Password Security is enabled they will no longer be visible to anyone other than the Administrator. As can be seen in the formula that follows either the User or Administrator will need to know what those passwords are to acquire a higher level of access to the control. Back out of this menu by pushing the Infinity key. Once out of the menu, the Password Security will be enabled.

How to Acquire Access to the Control

To acquire access to any inaccessible Pages or Menus, go to the Factory Page and enter the [ULoC] menu. Once there follow the steps below:

Note:

If Password Security (Password Enabled [PAS.E] is On) is enabled the two prompts mentioned below in the first step will not be visible. If unknown, call the individual or company that originally setup the control.

1. Acquire either the User Password [PAS.u] or the Administrator Password [PAS.A].
2. Push the Advance key one time where the Code [CodE] prompt will be visible.

Note:

a. If the the Rolling Password is off push the Advance key one more time where the Password [PASS] prompt will be displayed. Proceed to either step 7a or 8a. Pushing the Up or Down arrow keys enter either the User or Administrator Password. Once entered, push and hold the Infinity key for two seconds to return to the Home Page.

b. If the Rolling Password [roLL] was turned on proceed on through steps 3 - 9.

3. Assuming the Code [CodE] prompt (Public Key) is still visible on the face of the control simply push the Advance key to proceed to the Password [PASS] prompt. If not find your way back to the Factory Page as described above.
4. Execute the calculation defined below (7b or 8b) for either the User or Administrator.
5. Enter the result of the calculation in the upper display play by using the Up and Down arrow keys or use EZ-ZONE Confgurator Software.
6. Exit the Factory Page by pushing and holding the Infinity key for two seconds.

Formulas used by the User and the Administrator to calculate the Password follows:

Passwords equal:

7. **User**
   a. If Rolling Password [roLL] is Off, Password [PASS] equals User Password [PAS.u].
   b. If Rolling Password [roLL] is On, Password [PASS] equals:
   ([PAS.u] x code) Mod 929 + 70

8. **Administrator**
   a. If Rolling Password [roLL] is Off, Password [PASS] equals User Password [PAS.A].
   b. If Rolling Password [roLL] is On, Password [PASS] equals:
   ([PAS.A] x code) Mod 997 + 1000

Differences Between a User Without Password, User With Password and Administrator

- User **without** a password is restricted by the Locked Access Level [LoC.L].
- A User **with** a password is restricted by the Read Lockout Security [rLoC] never having access to the Lock Menu [LoC].
- An Administrator is restricted according to the Read Lockout Security [rLoC] however, the Administrator has access to the Lock Menu where the Read Lockout can be changed.

Modbus - Using Programmable Memory Blocks

When using the Modbus protocol, the RMS features a block of addresses that can be configured by the user to provide direct access to a list of 80 user configured parameters. This allows the user easy access to this customized list by reading from or writing to a contiguous block of registers.

To acquire a better understanding of the tables found in the back of this manual (See Appendix: (Modbus Programmable Memory Blocks) please read through the text below which defines the column headers used.

Assembly Definition Addresses

- Fixed addresses used to define the parameter that will be stored in the "Working Addresses", which may also be referred to as a pointer. The value stored in these addresses will reflect (point to) the Modbus address of a parameter within the controller.

Assembly Working Addresses

- Fixed addresses directly related to their associated "Assembly Definition Addresses" (e.g., Assembly Working Addresses 200 & 201 will assume the parameter pointed to by Assembly Definition Addresses 40 & 41).

When the Modbus address of a target parameter is stored in an "Assembly Definition Address" its corresponding working address will return that parameter's actual value. If it's a writable parameter, writing to its working register will change the parameter's actual value.

As an example, Modbus register 410 contains the Analog Input 1 Process Value (See Operations Page, Analog Input Menu). If the value 410 is loaded into Assembly Definition Address 91, the process value sensed by analog input 1 will also be stored in Modbus registers 250 and 251. Note that by default all registers are set to Hardware ID.

The table (See Appendix: Modbus Programmable Memory Blocks) identified as "Assembly Definition Addresses and Assembly Working Addresses" reflects the assemblies and their associated addresses.

Software Configuration

Using EZ-ZONE® Configurator Software

To enable a user to configure the RMS control using a personal computer (PC), Watlow has provided free software for your use. If you have not yet obtained a copy of this software insert the CD (Controller Support Tools) into your CD drive and install the software. Alternatively, if you are viewing this document electronically and have a connection to the internet simply click on the link below and download the software from the Watlow web site free of charge.

http://www.watlow.com/products/software/zone_config.cfm

Once the software is installed double click on the EZ-ZONE Configurator icon placed on your desktop during the installation process. If you cannot find the icon follow the steps below to run the software:

1. Move your mouse to the "Start" button
2. Place the mouse over "All Programs"
3. Navigate to the "Watlow" folder and then the sub-folder "EZ-ZONE Configurator"
4. Click on EZ-ZONE Configurator to run.

The first screen that will appear is shown below.

Watlow EZ-ZONE® CONFIGURA...
Welcome to the EZ-ZONE® CONFIGURATOR
This program makes it easy for you to configure any of your EZ-ZONE® products. Choose one of these options:
Configure a device while communicating with it.
Create or edit a configuration file to download late
Download a configuration file in to a device.
and click Next to begin configuring an EZ-ZONE® device.
Version: 3.8.49
Cancel
Help
Get Updates
< Back
Next >
Finish

If the PC is already physically connected to the EZ-ZONE RMS control click the next button to go on-line.

Note:

When establishing communications from PC to the RMS control an interface converter will be required. The Standard Bus network uses EIA-485 as the interface. Most PCs today would require a USB to EIA-485 converter. However, some PCs may still be equipped with EIA-232 ports, therefore an EIA-232 to EIA-485 converter would be required.

As can be seen in the above screen shot the software provides the user with the option of downloading a previously saved configuration as well as the ability to create a configuration off-line to download later. The screen shots that follow will take the user on-line.

After clicking the next button above it is necessary to define the communications port on the PC to use.

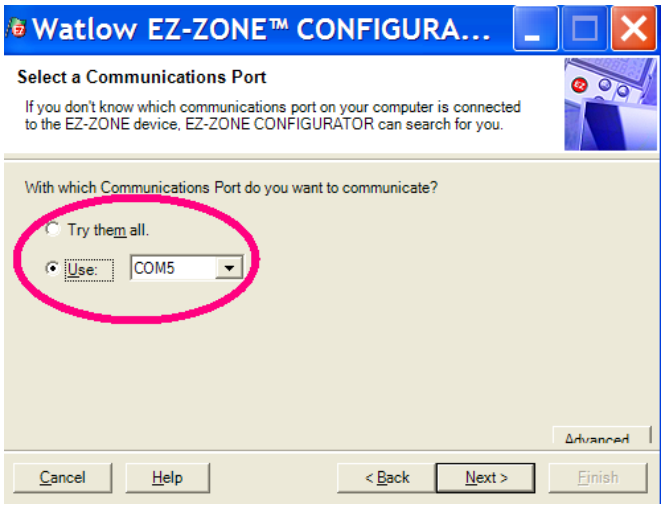
Watlow EZ-ZONE™ CONFIGURA...
Select a Communications Port
If you don't know which communications port on your computer is connected to the EZ-ZONE device, EZ-ZONE CONFIGURATOR can search for you.
With which Communications Port do you want to communicate?
Try them all.
Use:
COM5
Advanced
Cancel
Help
< Back
Next >
Finish

The available options allow the user to select "Try them all" or to use a specific known communications port. After installation of your converter if you are not sure which communications port was allocated select "Try them all" and then click next. The screen to follow shows that the software is scanning for devices on the network and that progress is being made.

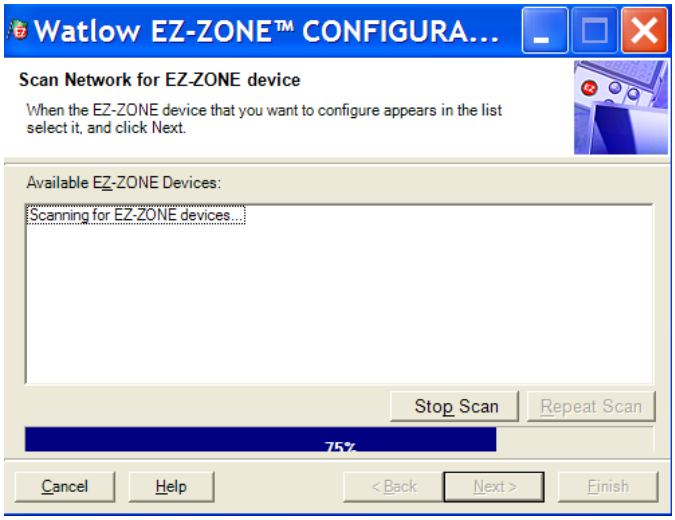

When complete, the software will display all of the available devices found on the network as shown below.

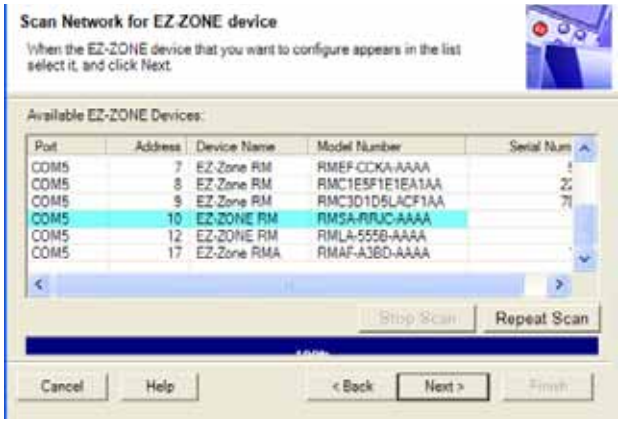

In the previous screen shot the RMS is shown high-

lighted (address 6) to bring greater clarity to the control in focus. Any EZ-ZONE device on the network will appear in this window and would be available for the purpose of configuration or monitoring. After clicking on the control of choice simply click the next button once again. After clicking on Setup and then Analog Input 1 the next screen appears below.

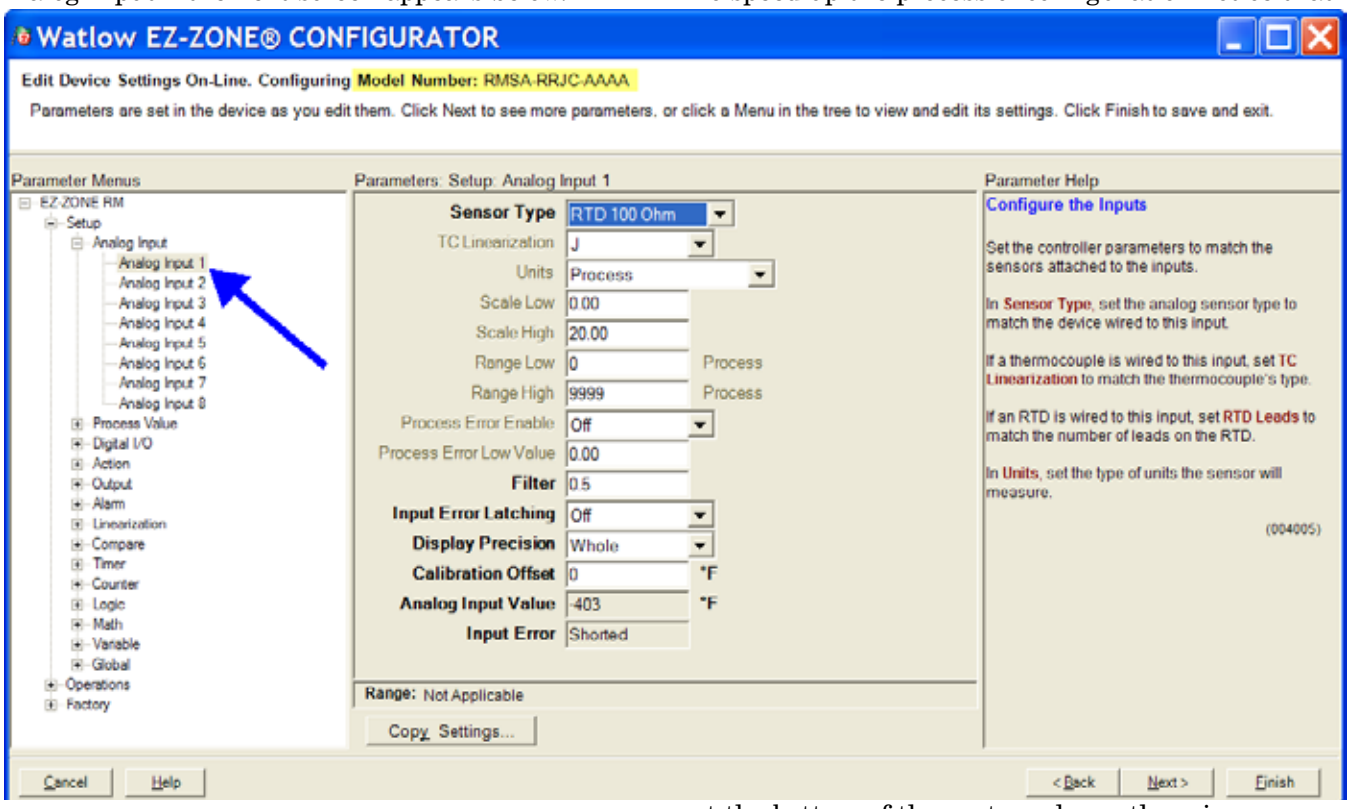
Watlow EZ-ZONE® CONFIGURATOR
Edit Device Settings On-Line. Configuring Model Number: RMSA-RRJC-AAAA
Parameters are set in the device as you edit them. Click Next to see more parameters, or click a Menu in the tree to view and edit its settings. Click Finish to save and exit.
Parameter Menus
EZ-ZONE RM
Setup
Analog Input
Analog Input 1
Analog Input 2
Analog Input 3
Analog Input 4
Analog Input 5
Analog Input 6
Analog Input 7
Analog Input 8
Process Value
Digital I/O
Action
Output
Alarm
Linearization
Compare
Timer
Counter
Logic
Math
Variable
Global
Operations
Factory
Parameters: Setup: Analog Input 1
Sensor Type RTD 100 Ohm
TC Linearization J
Units Process
Scale Low 0.00
Scale High 20.00
Range Low 0 Process
Range High 9999 Process
Process Error Enable Off
Process Error Low Value 0.00
Filter 0.5
Input Error Latching Off
Display Precision Whole
Calibration Offset 0 °F
Analog Input Value -403 °F
Input Error Shorted
Range: Not Applicable
Copy Settings...
Parameter Help
Configure the Inputs
Set the controller parameters to match the sensors attached to the inputs.
In Sensor Type, set the analog sensor type to match the device wired to this input.
If a thermocouple is wired to this input, set TC Linearization to match the thermocouple's type.
If an RTD is wired to this input, set RTD Leads to match the number of leads on the RTD.
In Units, set the type of units the sensor will measure.
(004005)
Cancel
Help
< Back
Next >
Finish

In the screen shot above notice that the device part number is clearly displayed at the top of the page (yellow highlight added for emphasis). When multiple EZ-ZONE devices are on the network it is important that the part number be noted prior to configuring so as to avoid making unwanted configuration changes to another control.

Looking closely at the left hand column (Parameter Menus) notice that when first entering this screen it displays all of the available Pages (Setup, Operations and Factory) at a high level. After clicking on any of the available pages the sub menus and associated parameters for each will appear as shown above. The Page structure as laid out within this software follows:

- Setup
- Operations
- Factory

Navigating from one Page to the next is easy and clearly visible. Simply clicking on the plus symbol next to Setup will expand the Setup Page where all of the sub-menus will appear next. If a vertical scroll bar appears click on the up or down arrow to view all of the available menus on the selected page. Once the focus is brought to an individual parameter (single click of mouse) as is the case for Analog Input 1 in the left column, all that can be setup related to that parameter will appear in the center column. The grayed out fields in the center column simply mean that this parameter does not apply for the type of sensor selected. As an example, notice that when RTD is selected,TC Linearization does not apply and is therefore grayed out.

To speed up the process of configuration notice that at the bottom of the center column there is an operation to copy settings. If Analog Input 1 and 2 are the same type of sensor click on "Copy Settings" where a copy from to copy to dialog box will appear allowing for quick duplication of all settings.

Notice too, that by clicking on any of those items in the center column that context sensitive help will appear for that particular item in the right hand column.

Lastly, when the configuration is complete click the "Finish" button at the bottom right of the previous screen shot. The screen that follows this action can be seen below.

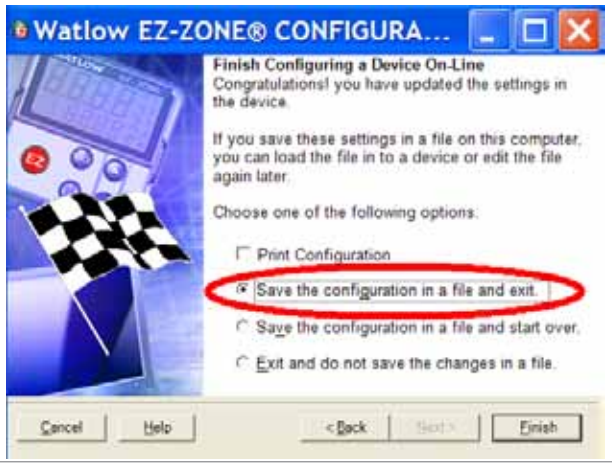
Watlow EZ-ZONE® CONFIGURA...
Finish Configuring a Device On-Line
Congratulations! you have updated the settings in the device.
If you save these settings in a file on this computer, you can load the file in to a device or edit the file again later.
Choose one of the following options:
Print Configuration
Save the configuration in a file and exit.
Save the configuration in a file and start over.
Exit and do not save the changes in a file.
Cancel
Help
< Back
Finish

Although the RMS control now contains the configuration (because the previous discussion focused on doing the configuration on-line) it is suggested that after the configuration process is completed that the user save this file on the PC for future use. If for some reason someone inadvertently changed a setting without understanding the impact it would be easy and perhaps faster to download a saved configuration back to the control versus trying to figure out what was changed.

Of course, there is an option to exit without saving a copy to the local hard drive.

After selecting Save above click the "Finish" button once again. The screen below will than appear.

When saving the configuration note the location where the file will be placed (Saved in) and enter the file name (File name) as well. The default path for saved files follows:

\Program Files\Watlow\EZ-ZONE CONFIGURATOR\Saved Configurations

The user can save the file to any folder of choice.

Function Block Descriptions

Each of the next several pages graphically shows each of the RMS function blocks. Note that as you view each you will find text that is black and text that appears gray. The gray text represents inputs that are not currently available based on the function's defined use (red text). For instance when the defined use of the Analog Input function is set for RTD, TC Linearization will appear gray. Ranges specified in units or degrees F, if expressed in degrees C, range is smaller

Analog Input Function

Note:

This Function configures and connects physical inputs to internal functions. Control Loop primary source instance must match Process Value or Analog Input instance.

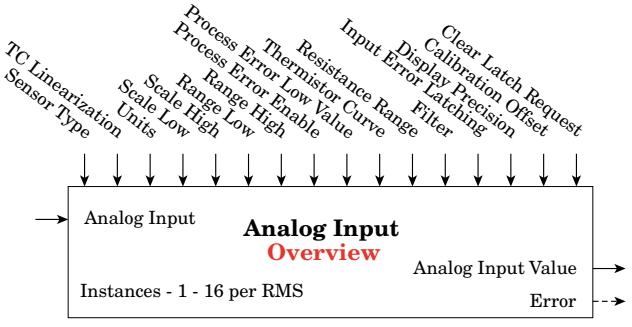

Analog Input Menu
Setup Page

SEn Sensor Type : Off, Thermocouple, Millivolts, Volts, Milliamps, RTD 100 Ohm, RTD 1000 Ohm, 1K Potentiometer, Thermistor (optional)

tLin TC Linearization : B, C, D, E, F, J, K, N, R, S, T

Unit Units : Absolute Temperature, Power, Process, Relative Humidity

SLo Scale Low : -100.00 to 1000.00

SHi Scale High : -100.00 to 1000.00

rLo Range Low : -1,999.000 to 9,999.000

rHi Range High : -1,999.000 to 9,999.000

PEE Process Error Enable : Off, Low

PEL Process Error Low Value : -100.00 to 1,000.00

tC Thermistor Curve : Curve A, Curve B, Curve C, Custom

rr Resistance Range : 5k, 10k, 20k, 40k

FiL Filter : 0.0 to 60.0 seconds

iEr Input Error Latching : Off, On

dEC Display Precision : Whole, Tenths, Hundredths, Thousandths

CAL Calibration Offset : -1,999.000 to 9,999.000

AIn Analog Input Value : -1,999.000 to 9,999.000

iEr Input Error : None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Not Sourced

Analog Input Menu
Operation Page

AIn Analog Input Value : -1,999.000 to 9,999.000

iEr Input Error : None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Not Sourced

CAL Calibration Offset : -1,999.000 to 9,999.000

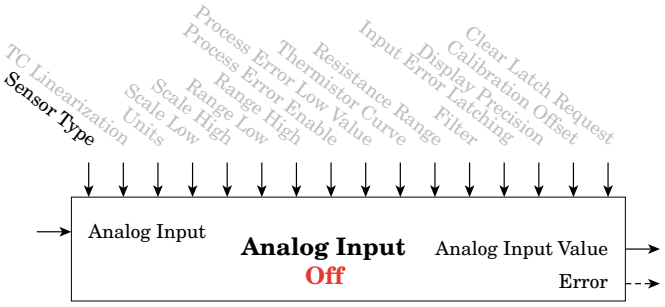

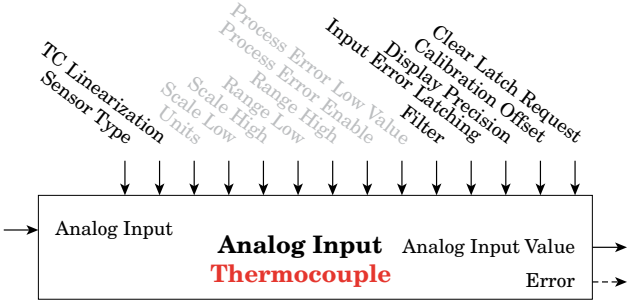

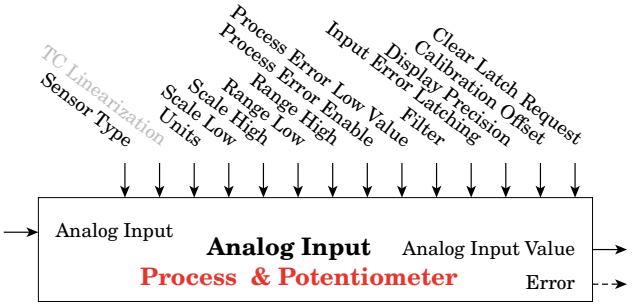

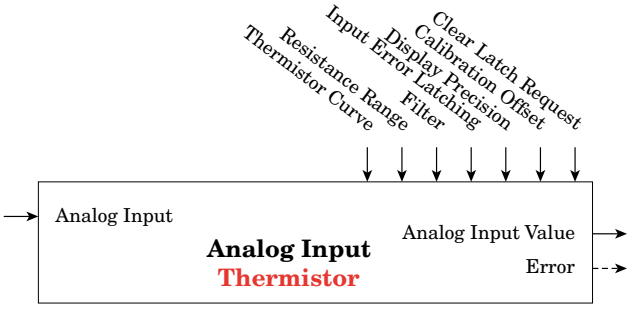

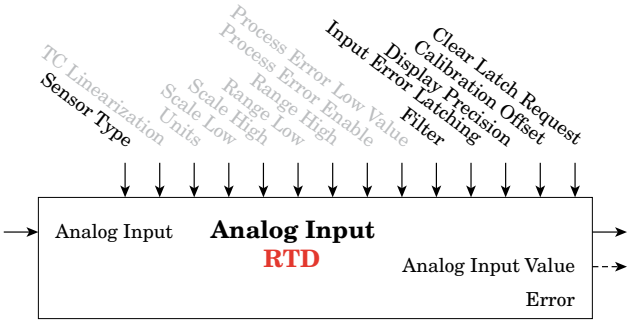

Process Value Function

The Process Value (PV) function block accepts multiple inputs and performs a programmed math function to derive an output value with Filter and Offset values applied. It is assumed that no input error conditions apply. Some PV operations must be performed in the user's units. Functions may combine multiple inputs. Those inputs may have incompatible units from a logical point of view. As a result, unless otherwise indicated, the presentation of the output value is the same as Source A. This accommodates temperatures being multiplied, divided and offset by constants and process inputs. Only inputs that have a source associated to them are used in the calculations.

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

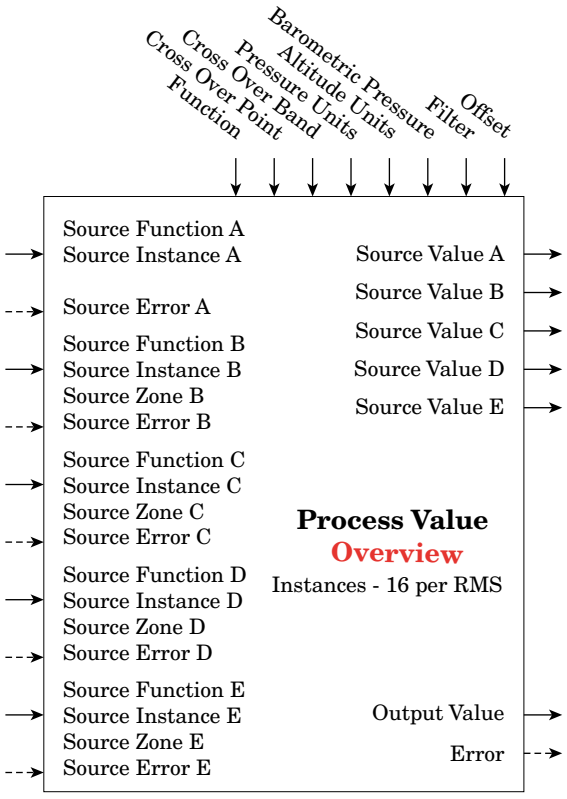

SEt Setup Page
Pu Process Value Menu

Fn Function : Off, Sensor Backup, Average, Crossover, Wet Bulb/Dry Bulb, Switch Over, Differential, Ratio, Add, Multiply, Absolute Difference, Minimum, Maximum, Square Root, Vaisala RH Compensation, Pressure to Altitude

SFnA Source Function A : Analog Input, Process Value

S iA Source Instance A : 1 to 16

S2A Source Zone A : 0 to 16

SFnb Source Function B : None, Analog Input, Linearization, Math, Process Value, Variable

S ib Source Instance B : 1 to 24

S2b Source Zone B : 0 to 16

SFnC Source Function C : None, Analog Input, Linearization, Math, Process Value, Variable

S iC Source Instance C : 1 to 24

S2C Source Zone C : 0 to 16

SFnd Source Function D : None, Analog Input, Linearization, Math, Process Value, Variable

S id Source Instance D : 1 to 24

S2d Source Zone D : 0 to 16

SFnE Source Function E : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Timer, Variable

S iE Source Instance E : 1 to 24

S2E Source Zone E : 0 to 16

CP Cross Over Point : -1,999.000 to 9,999.000

Cb Cross Over Band : -1,999.000 to 9,999.000

Punt Pressure Units : PSI, Torr, mBar, Atmosphere, Pascal

Aunt Altitude Units : Feet, Kilofeet

bPr Barometric Pressure : 10.0 to 16.0

F iL Filter : 0.0 to 60.0 seconds

oPEr Operation Page
Pu Process Value Menu

SuA Source Value A : -1,999.000 to 9,999.000

Sub Source Value B : -1,999.000 to 9,999.000

SuC Source Value C : -1,999.000 to 9,999.000

Sud Source Value D : -1,999.000 to 9,999.000

SuE Source Value E : Off, On

ou Output Value : -1,999.000 to 9,999.000

oFSt Offset : -1,999.000 to 9,999.000

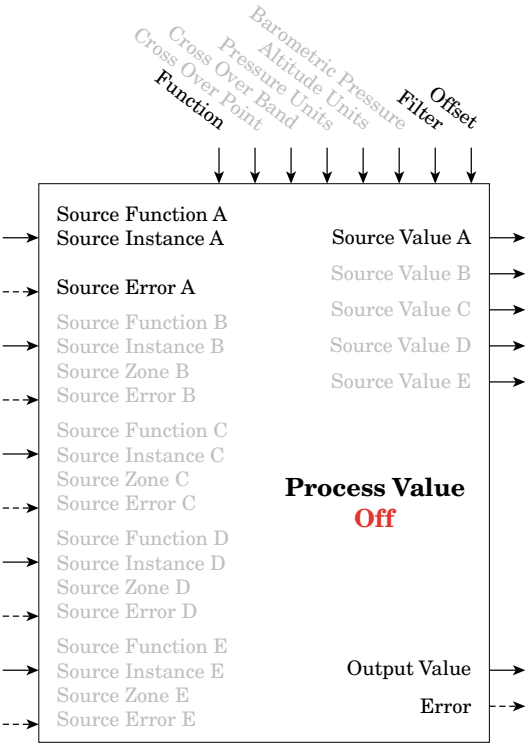

Output Value = Filter [A + Offset]
Display units follows Source A

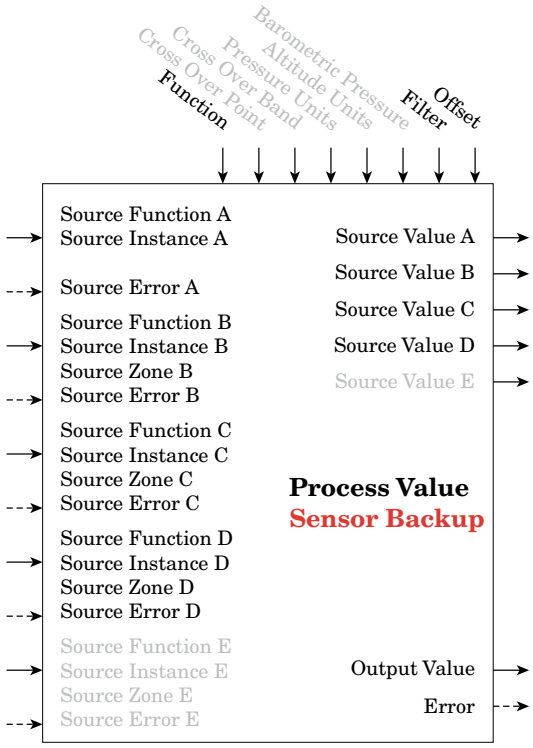

Output Value = Filter [first assigned Source without an error + Offset]

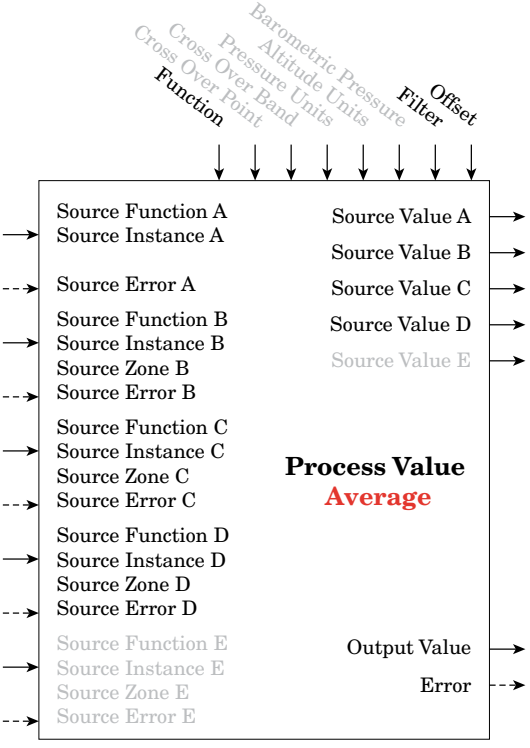

)utput Value = Filter [(Average (A + B + C + D)) + Offset]
)isplay units follows the last source that is temperature
lse follow Source A

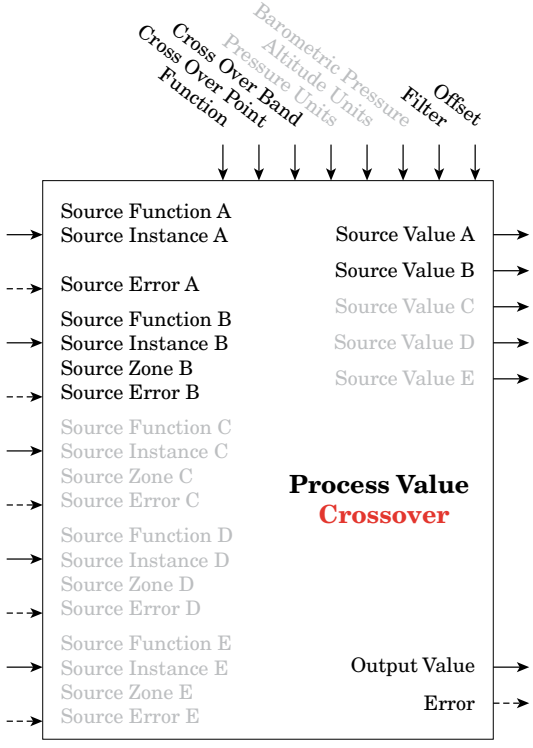

If A <= Cross Over Point - (Cross Over Band / 2) THEN
Output Value = Filter [(A + Offset)]
If A >= Cross Over Point + (Cross Over Band / 2) THEN
Output Value = Filter[(B + Offset)]
Output Value = Filter [((A * X) + (B * (1-X))) + Offset]
Where variable X = (Cross Over Point + (Cross Over Band / 2) - A) / Cross Over Band

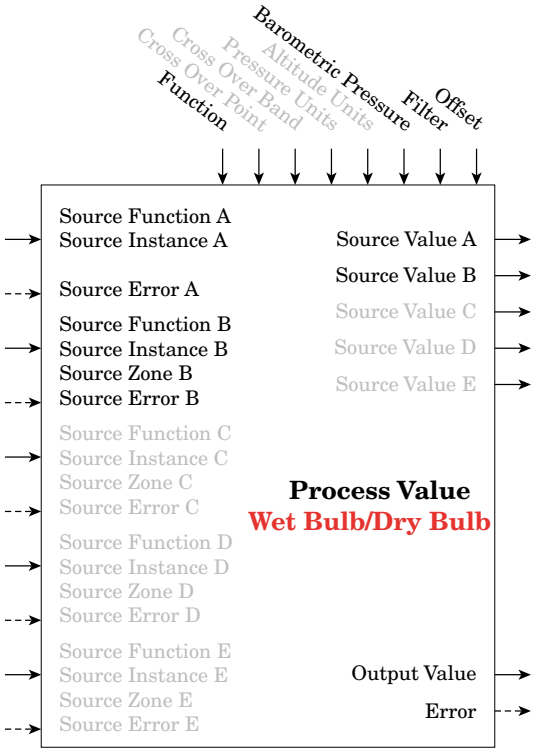

Output Value = Filter [Calculated Humidity + Offset] where Source A is the Dry Bulb and Source B is the Wet Bulb
Note: Wet/Dry bulb temperatures are in degrees F and pressures are in PSI. Output Value is % relative humidity. Useful temperature range is 10 to 350F

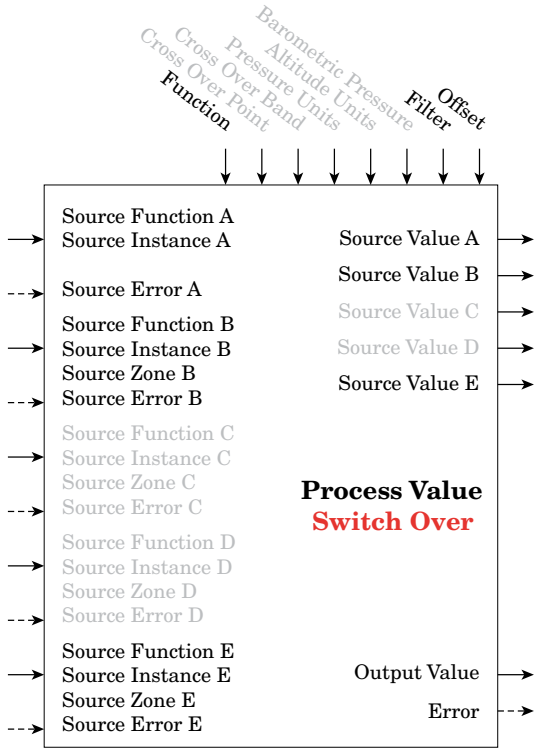

If E = OFF, Output Value = Filter [A + Offset]
If E = ON, Output Value = Filter [B + Offset]
Display units follows active source.

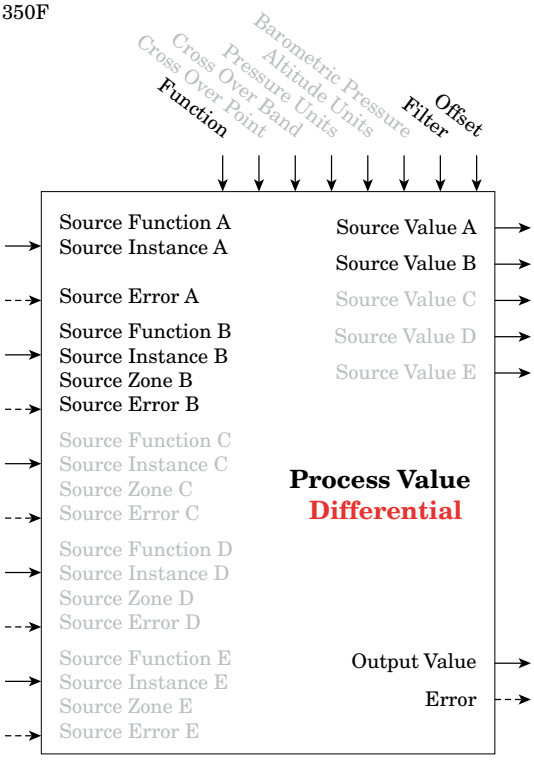

Output Value = Filter [(A - B) + Offset]
Display units follows Source A plus relative Source B

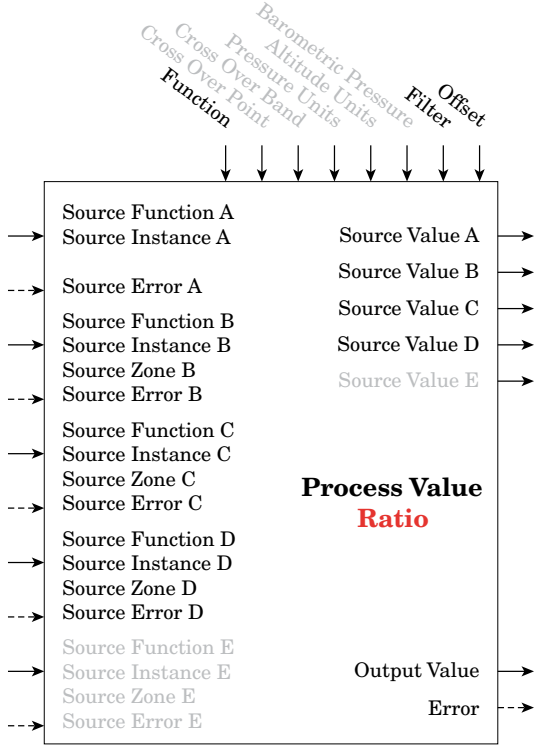

Output Value = Filter [(A / B) + Offset]
If display units of Source A = Source B, no display units on output value, else follow Source A

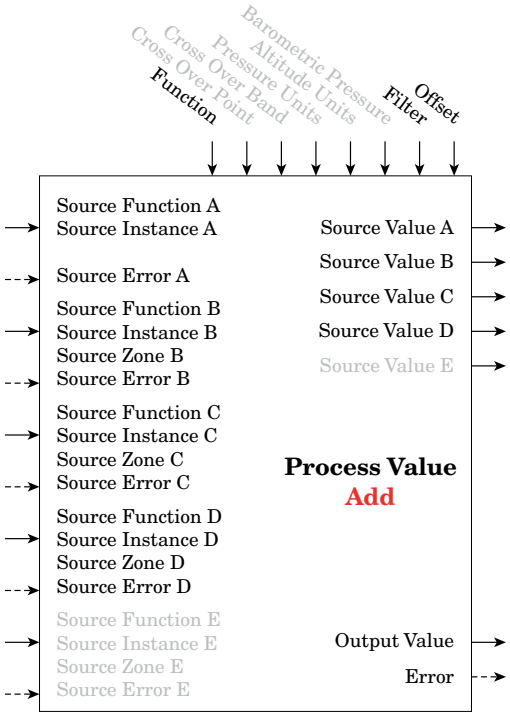

Output Value = Filter [(A + B + C + D) + Offset]
Display units follows last temperature source else follow Source A

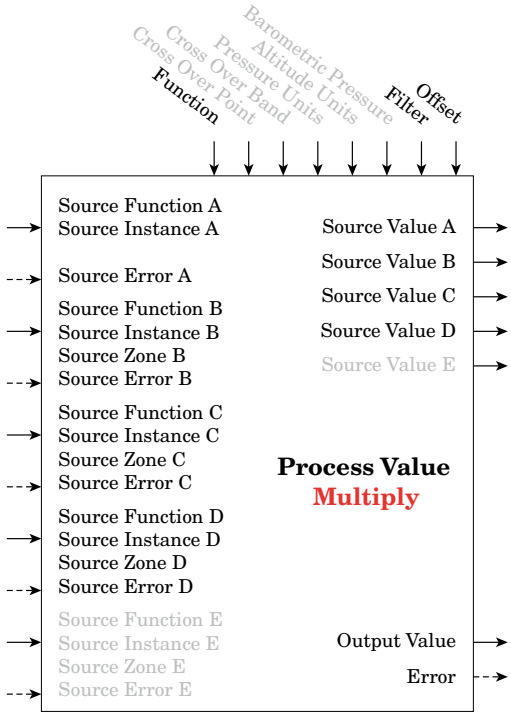

Output Value = Filter [(A * B * C * D) + Offset]
Display units follows last temperature source else follow Source A

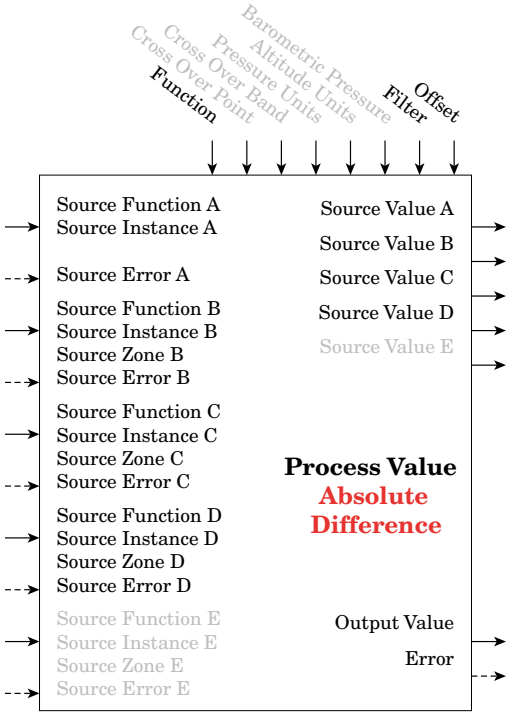

Output Value = Filter [| A - B | + Offset]
Display units follow Source A plus relative Source B

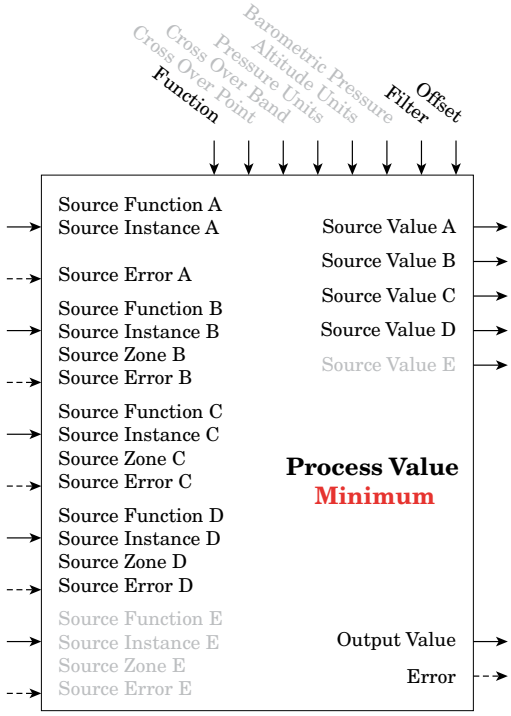

Output Value = Filter [Minimum Value (A : B : C : D) + Offset]
Display units follows Source with minimum value.

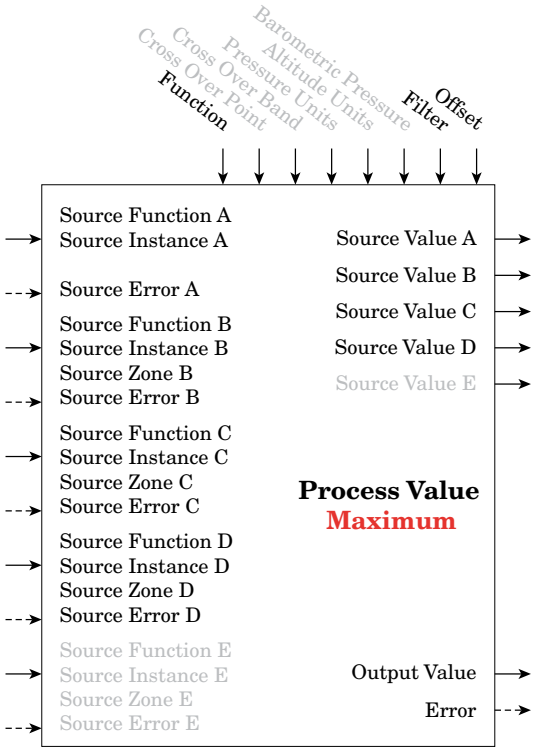

Output Value = Filter [Maximum Value (A : B : C : D) + Offset]
Display units follows Source with maximum value.

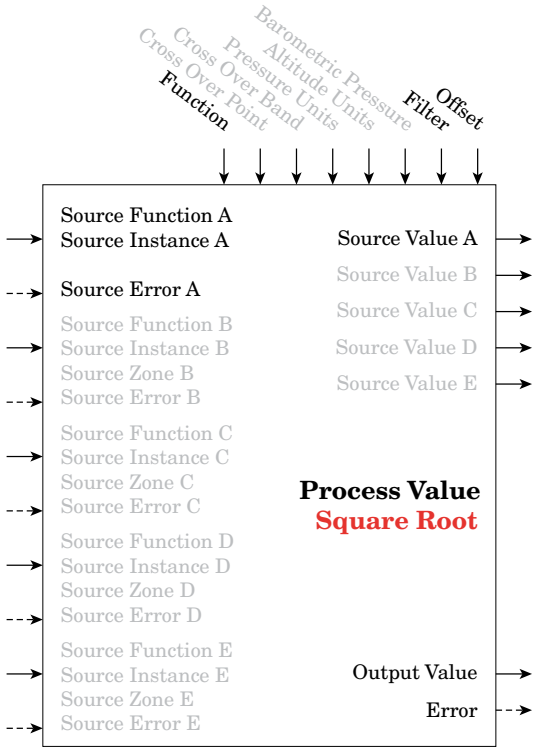

Output Value = Filter [Sqr Root A + Offset]
Display units follows Source A

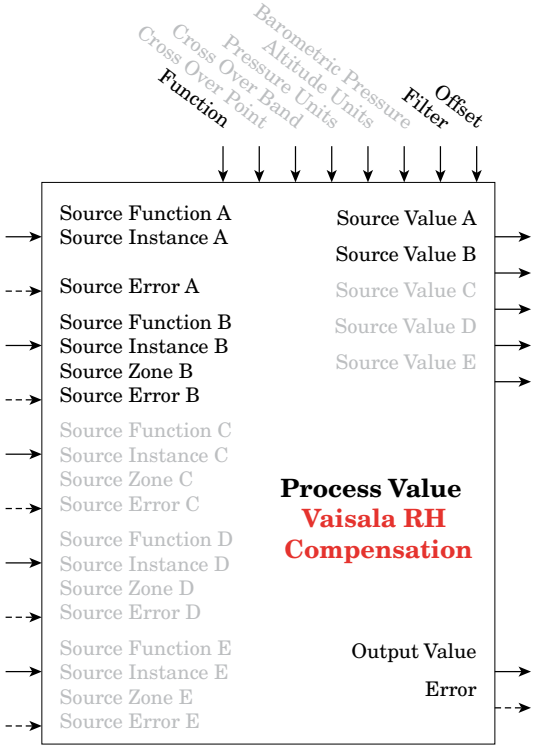

Output Value = Filter [Calculated RH compensated for temperature + Offset].
Note: Source A is RH measured value from an uncompensated Vaisala RH sensor. Source B is temperature of the RH sensor in degrees F. The result is a "corrected" RH measured value. This calculation is effective over the temperature range of -75F to 350F.

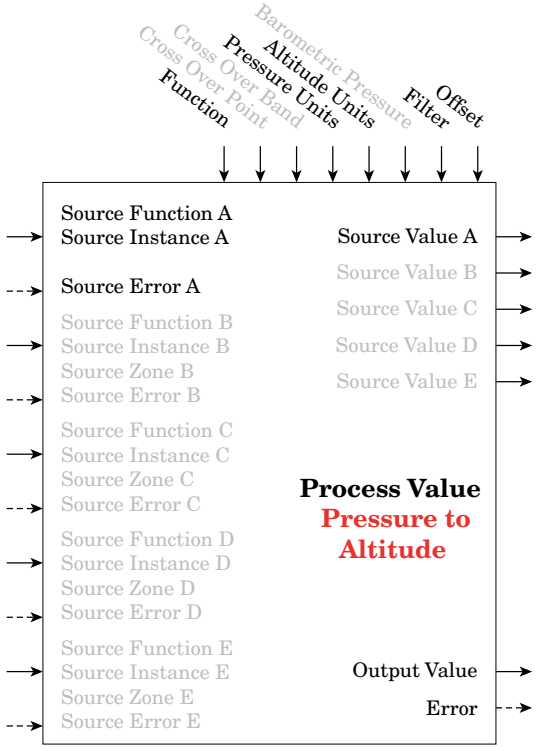

Output Value = Filter [Convert Source A in Pressure to Altitude + Offset]

Note: Pressure Altitude calculation is based on the International Standard Atmosphere 1976. Source A is a pressure signal and needs to be in PSI units for the calculation. The calculation is accurate from sea level to 90,000 feet. The standard is based on an altitude of 0 feet (sea level) pressure of 14.6967 PSI and a temperature of 59 degrees F. Result of calculation is in feet.

Linearization Function

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

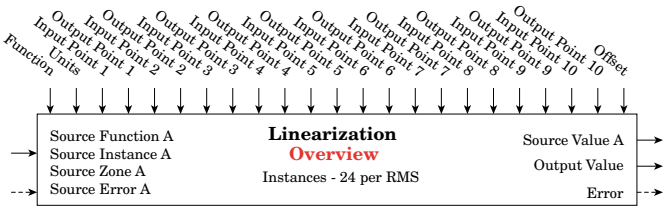

LnC Linearization
SEt Setup Page

Fn Function : Off, Interpolated, Stepped

SFnA Source Function A : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

SinA Source Instance A : 1 to 24

SZnA Source Zone A : 0 to 16

Un it Units : Source, None, Absolute Temperature, Relative Temperature, Power, Process, Relative Humidity

iP1 Input Point 1 : -1,999.000 to 9,999.000

oP1 Output Point 1 : -1,999.000 to 9,999.000

iP2 Input Point 2 : -1,999.000 to 9,999.000

oP2 Output Point 2 : -1,999.000 to 9,999.000

iP3 Input Point 3 : -1,999.000 to 9,999.000

oP3 Output Point 3 : -1,999.000 to 9,999.000

iP4 Input Point 4 : -1,999.000 to 9,999.000

oP4 Output Point 4 : -1,999.000 to 9,999.000

iP5 Input Point 5 : -1,999.000 to 9,999.000

oP5 Output Point 5 : -1,999.000 to 9,999.000

iP6 Input Point 6 : -1,999.000 to 9,999.000

oP6 Output Point 6 : -1,999.000 to 9,999.000

iP7 Input Point 7 : -1,999.000 to 9,999.000

oP7 Output Point 7 : -1,999.000 to 9,999.000

iP8 Input Point 8 : -1,999.000 to 9,999.000

oP8 Output Point 8 : -1,999.000 to 9,999.000

iP9 Input Point 9 : -1,999.000 to 9,999.000

oP9 Output Point 9 : -1,999.000 to 9,999.000

iP10 Input Point 10 : -1,999.000 to 9,999.000

oP10 Output Point 10 : -1,999.000 to 9,999.000

LnC Linearization Menu
oPEr Operation Page

SvA Source Value A : -1,999.000 to 9,999.000

oFSt Offset : -1,999.000 to 9,999.000

ou Output Value : -1,999.000 to 9,999.000

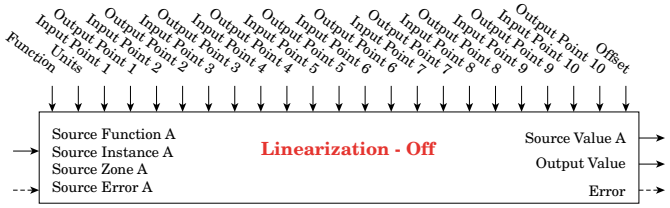

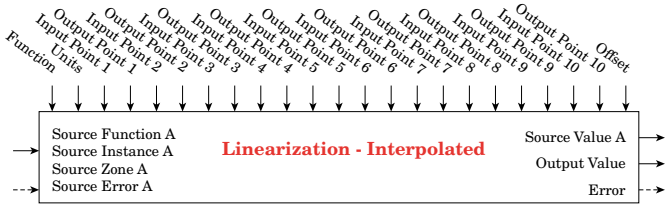

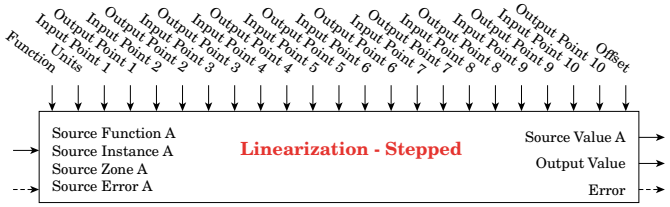

Output Function

This function configures and connects physical outputs to internal functions.

Note:
Digital Outputs not included on these sheets

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

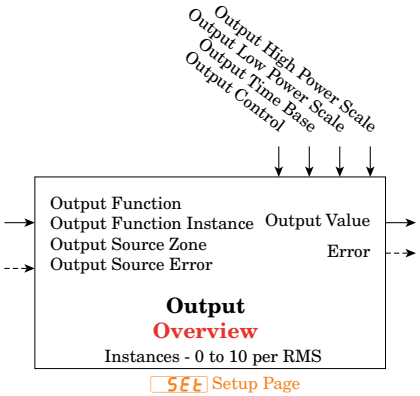

SEt Setup Page
oEPE Output Menu

Fn Output Function : Off, Analog Input, Alarm, Cool Power, Heat Power, Compare, Counter, Digital I/O. Profile Event Out A to H, Function Key, Logic, Linearization, Math, Process Value, Special Function Output 1 to 4, Timer, Variable, Limit

Fi Output Function Instance : 1 to 24

SZ Output Source Zone : 0 to 16

oCt Output Control : Fixed Time Base, Variable Time Base

otb Output Time Base : 0.1 to 60.0 seconds

olo Output Low Power Scale : 0 to 100 %

oh i Output High Power Scale : 0 to 100 %

ou Output Value : On, Off

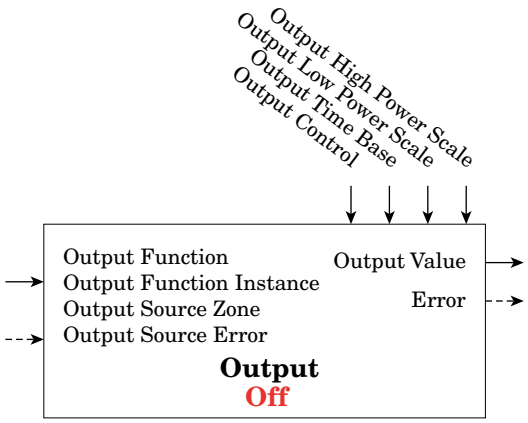

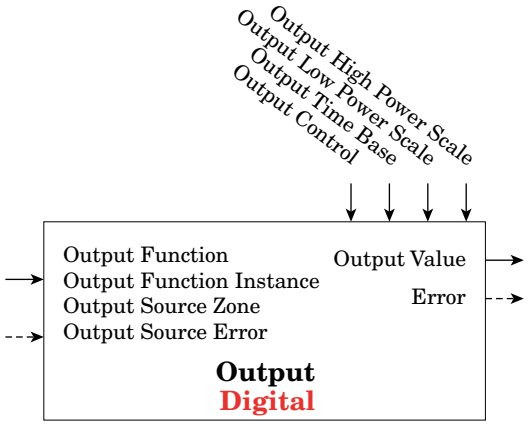

Alarm Function

This function causes outputs to change states when Alarm Source exceeds Alarm Set Points.

An error, when read, can indicate any of the following:

None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, Fail, Not Sourced

Silenced : No, Yes

Alarm Latched : No, Yes

Alarm Clearable : No, Yes

Alarm Working Process Value : -1,999.000 to 9,999.000

Alarm Working Set Point : -1,999.000 to 9,999.000

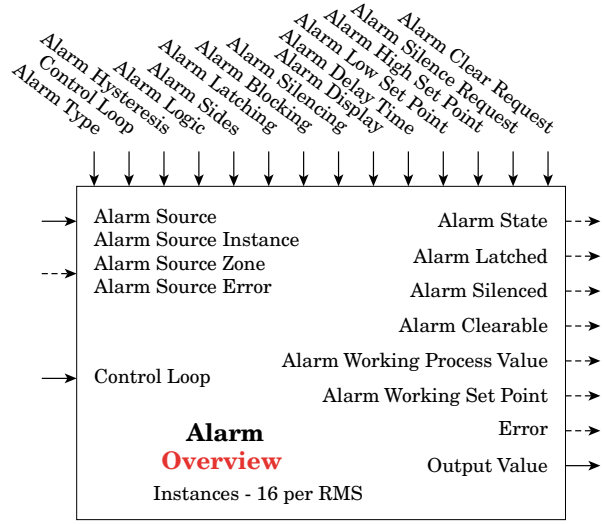

ALRM Alarm Menu
SEt Setup Page

- AtY Alarm Type : Off, Process
- SrA Alarm Source : Analog Input, Current, Power, Linearization, Math, Process Value, Variable
- iSA Alarm Source Instance : 1 to 24
- S2A Alarm Source Zone : 0 to 16
- LooP Control Loop : 1 to 16
- AhY Alarm Hysteresis : 0.001 to 9,999.000
- AL9 Alarm Logic : Close on Alarm, Open on Alarm
- ASd Alarm Sides : Both, High, Low
- ALo Alarm Low Set Point : -1,999.000 to 9,999.000
- Ah i Alarm High Set Point : -1,999.000 to 9,999.000
- ALA Alarm Latching : Non-Latching, Latching
- AbL Alarm Blocking : Off, Startup, Set Point, Both
- AS i Alarm Silencing : Off, On
- AdSP Alarm Display : Off, On
- AdL Alarm Delay Time : 0 to 9,999 seconds
- ACLr Alarm Clear Request : Ignore, Clear
- AS ir Alarm Silence Request : Ignore, Silence
- ASt Alarm State : Startup, None, Blocked, Alarm Low, Alarm High, Error

ALRM Alarm Menu
oPEr Operation Page

- ALo Alarm Low Set Point : -1,999.000 to 9,999.000
- Ah i Alarm High Set Point : -1,999.000 to 9,999.000
- ACLr Alarm Clear Request : Ignore, Clear
- AS ir Alarm Silence Request : Ignore, Silence
- ASt Alarm State : Startup, None, Blocked, Alarm Low, Alarm High, Error

The alarm function causes outputs to change state when Alarm Source exceeds alarm set points.

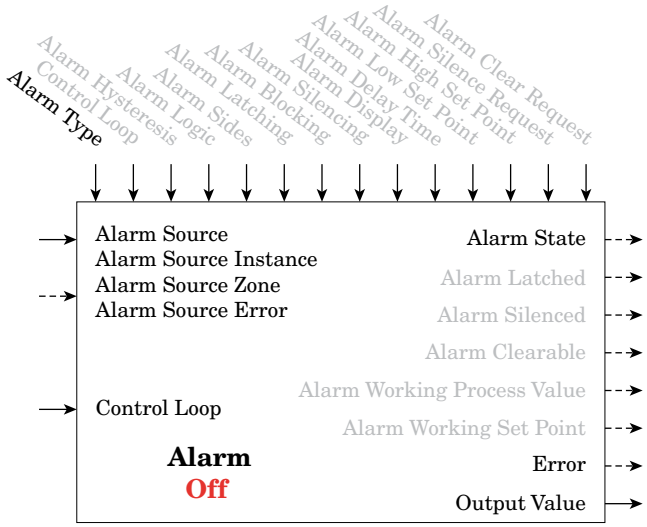

If Alarm Type = Off, Output Value = Off

If Alarm State = None, Alarm Indication = None

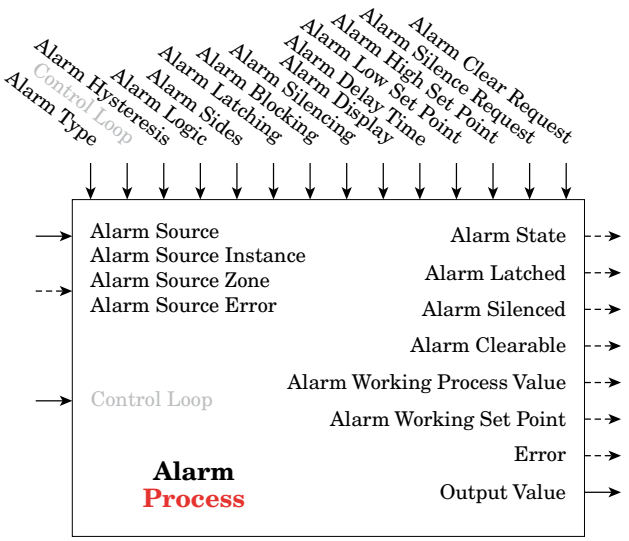

If Alarm Type = Process THEN Alarm Variable = Process Value

If Alarm Type = Deviation THEN Alarm Variable = Process Value - Closed Loop Set Point + Alarm Set Point

Digital Input/Output Function

Note:

Input Value is passed to either profile event inputs or action function blocks.

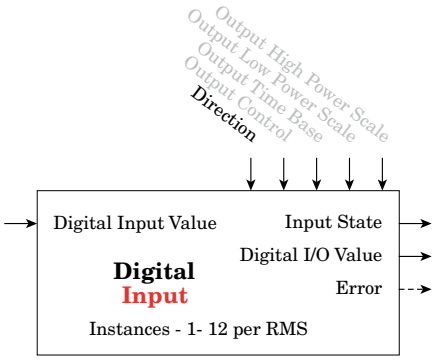

SEt Setup Page
d io Digital I/O Menu

- dir Direction : Input Voltage, Input Dry Contact
- Fn Output Function : Off, Analog Input, Alarm, Cool Power, Heat Power, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Linearization, Math, Process Value, Special Function Output 1 to 4, Timer, Variable, Limit
- F i Output Function Instance : 1 to 24
- SrcA Source Zone A : 0 to 16
- oCt Output Control : Fixed Time Base, Variable Time Base
- otb Output Time Base : 0.1 to 60.0 seconds
- oLo Output Low Power Scale : 0.0 to 100.0 %
- oh i Output High Power Scale : 0.0 to 100.0 %

oPEr Operation Page
d io Digital I/O Menu

- di.S Input State : On, Off
- do.S Output State : On, Off

Digital Input Value : On, Off

An error, when read, can indicate any of the following:

None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

Digital Input/Output Function (cont.)

Output Value is determined by Source A and Digital Output Function

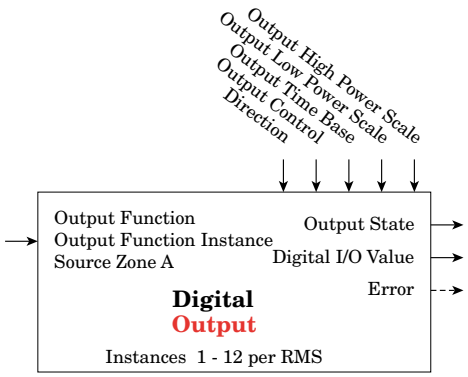

SEt Setup Page
d.io Digital I/O Menu

dir Direction : Output

Fn Output Function : Off, Analog Input, Alarm, Cool Power, Heat Power, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Linearization, Math, Process Value, Special Function Output 1 to 4, Timer, Variable, Limit

F.I Output Function Instance : 1 to 24

S2.A Source Zone A : 0 to 16

o.Ct Output Control : Fixed Time Base, Variable Time Base

o.tb Output Time Base : 0.1 to 60.0 seconds

o.Lo Output Low Power Scale : 0.0 to 100.0 %

o.hi Output High Power Scale : 0.0 to 100.0 %

oPEr Operation Page
d.io Digital I/O Menu

d.iS Input State : On, Off

do.S Output State : On, Off

Digital Output Value : On, Off

An error, when read, can indicate any of the following:

None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

Action Function

The Action Function selected will execute when Source Function A = ON and Active Level = High. Based on a given input (Digital, Event output, Logic function, etc..), the Action function can cause other functions to occur. To name a few, starting and stopping a profile, silencing alarms, turn control loops off and placing alarms in non-alarm state.

Note:

Action Function selection is module type and part number dependant.

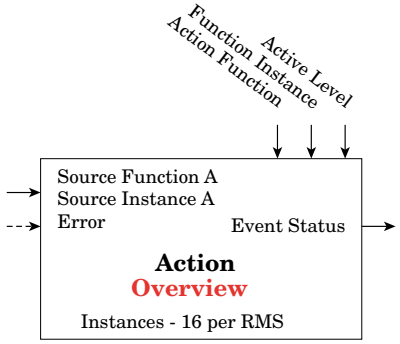

SEt Setup Page
ACt Action Menu

Fn Action Function : None, User Set Restore, Alarm, Silence Alarms, Control Loops Off and Alarms to Non-alarm State, Force Alarm to Occur, Idle Set Point, Tune, Manual, Switch Control Loop Off, Remote Set Point, TRU-TUNE+ Disable

F.I Function Instance : 0 to 25

SFn.A Source Function A : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Timer, Variable

S.iA Source Instance A : 1 to 24

S2.A Source Zone A : 0 to 16

LEv Active Level : High, Low

oPEr Operation Page
ACt Action Menu

E.iS Event Status : On, Off

Global Function

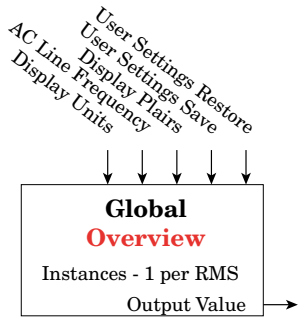

SEt Setup Page
gLbL Global Menu

- C_F Display Units : F, C
- ACLF AC Line Frequency : 50 Hz, 60 Hz
- dPrS Display Pairs : 1 to 15
- USrS User Settings Save : None, User Set 1, User Set 2
- USrr User Settings Restore : None, User Set 1, User Set 2, Factory

Logic Function

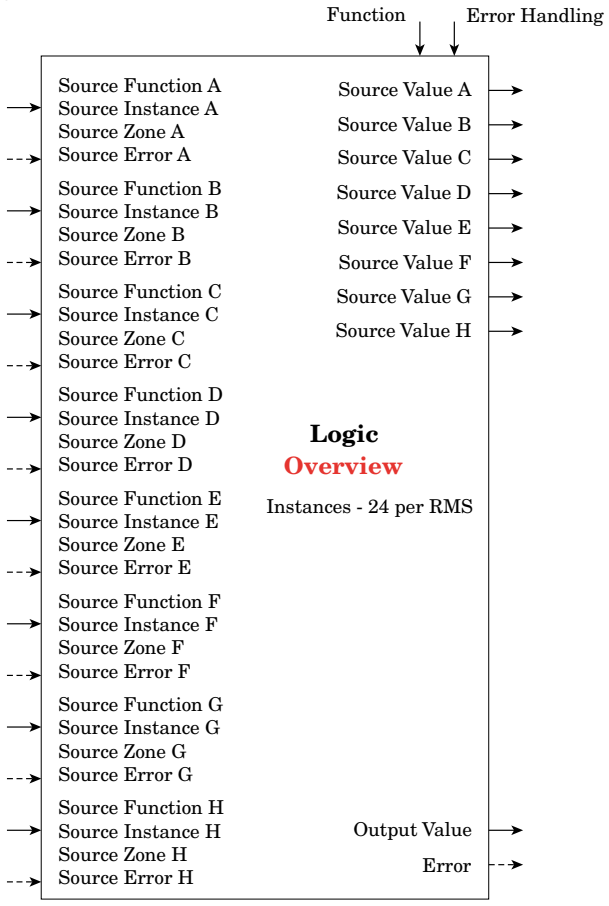

SEt Setup Page
LgC Logic Menu

- Fn Function : Off, AND, OR, Equal To, NAND, NOR, Not Equal To, Latch, RS Flip Flop
- SFnA Source Function A : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- SiA Source Instance A : 1 to 24
- SZnA Source Zone A : 0 to 16
- SFnb Source Function B : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- Sib Source Instance B : 1 to 24
- SZnb Source Zone B : 0 to 16
- SFnC Source Function C : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- SiC Source Instance C : 1 to 24
- SZnC Source Zone C : 0 to 16
- SFnd Source Function D : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- Sid Source Instance D : 1 to 24
- SZnd Source Zone D : 0 to 16
- SFnE Source Function E : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- SiE Source Instance E : 1 to 24
- SZnE Source Zone E : 0 to 16
- SFnF Source Function F : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- SiF Source Instance F : 1 to 24
- SZnF Source Zone F : 0 to 16
- SFng Source Function G : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Output 1 to 4, Timer, Variable
- Sig Source Instance G : 1 to 24
- SZng Source Zone G : 0 to 16
- SFnh Source Function H : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Limit, Logic, Special Function Out 1 to 4, Timer, Variable
- Sih Source Instance H : 1 to 24
- SZnh Source Zone H : 0 to 16
- Erh Error Handling : True Good, True Bad, False Good, False Bad

oPEr Operation Page
LgC Logic Menu

- SuA Source Value A : Off, On
- Sub Source Value B : Off, On
- SuC Source Value C : Off, On
- Sud Source Value D : Off, On
- SuE Source Value E : Off, On
- SuF Source Value F : Off, On
- Sug Source Value G : Off, On
- Suh Source Value H : Off, On
- ou Output Value : Off, On

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

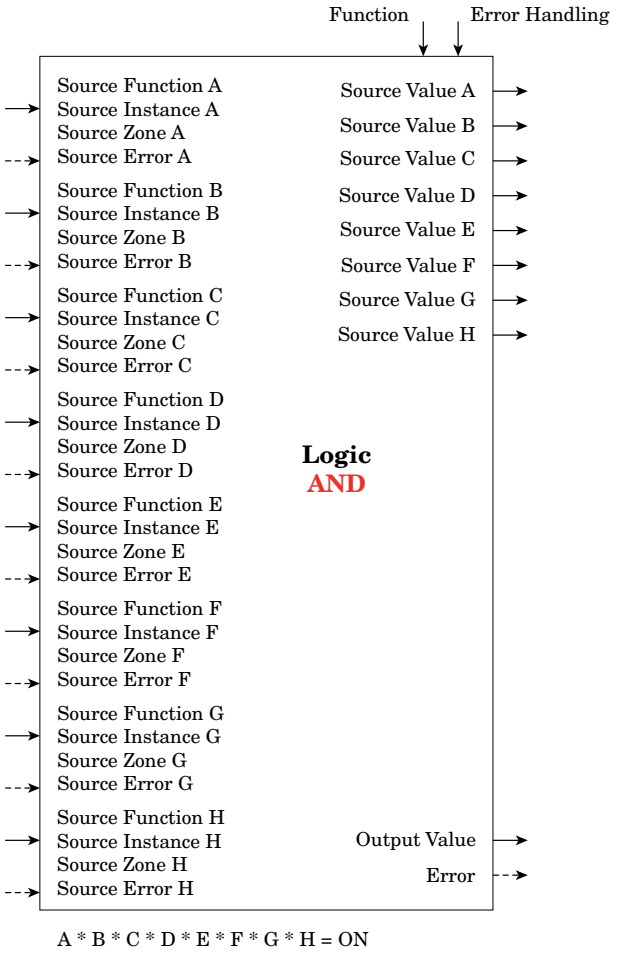

A * B * C * D * E * F * G * H = ON

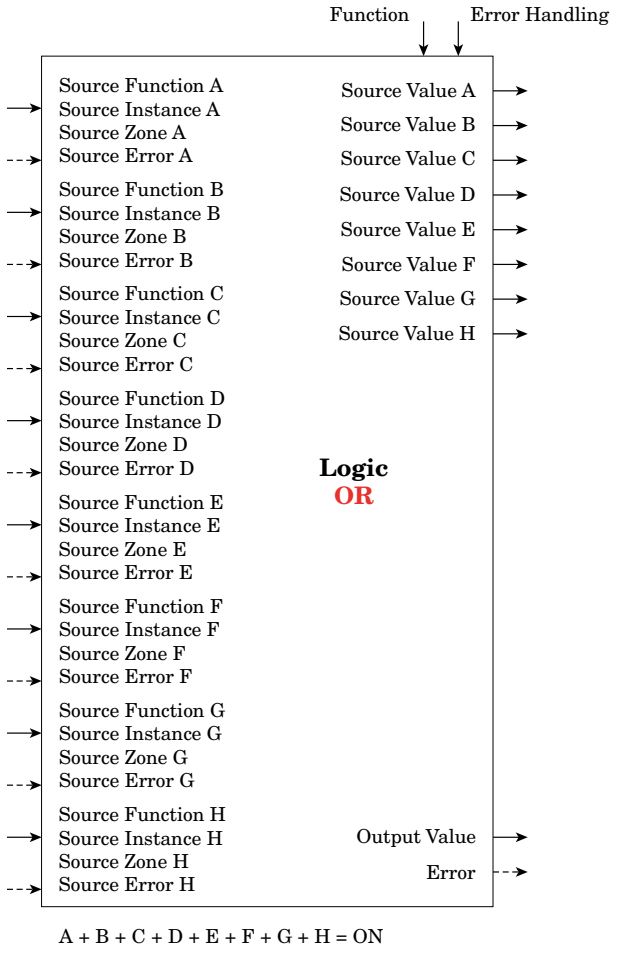

A + B + C + D + E + F + G + H = ON

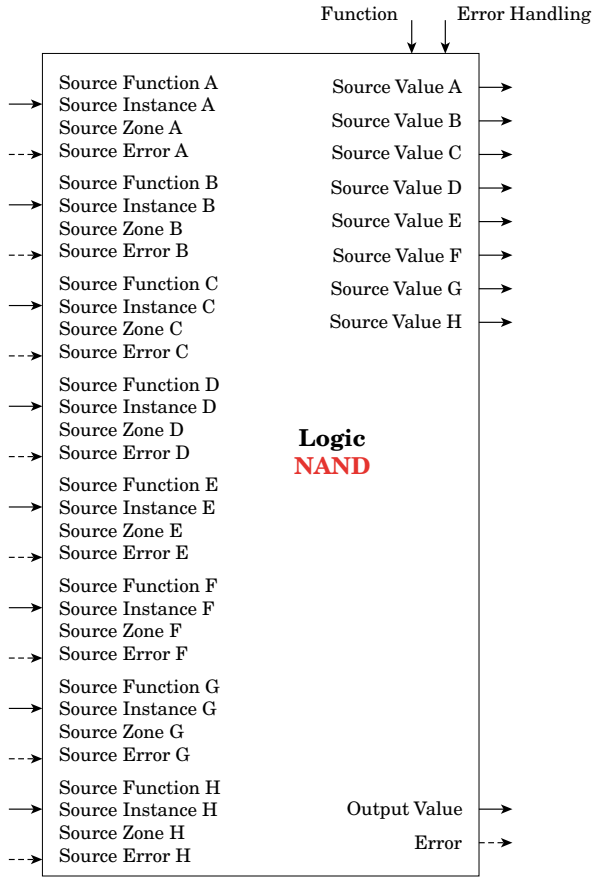

A * B * C * D * E * F * G * H = ON

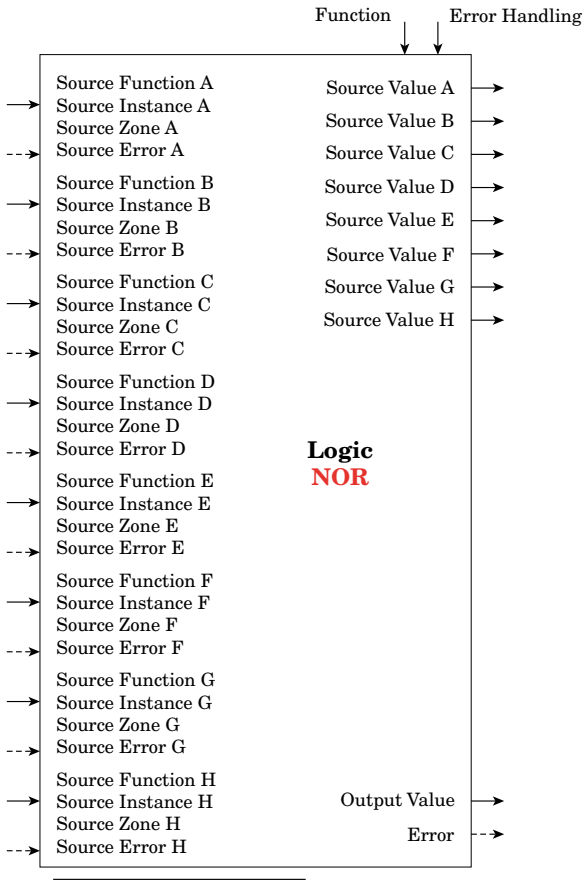

A + B + C + D + E + F + G + H = ON

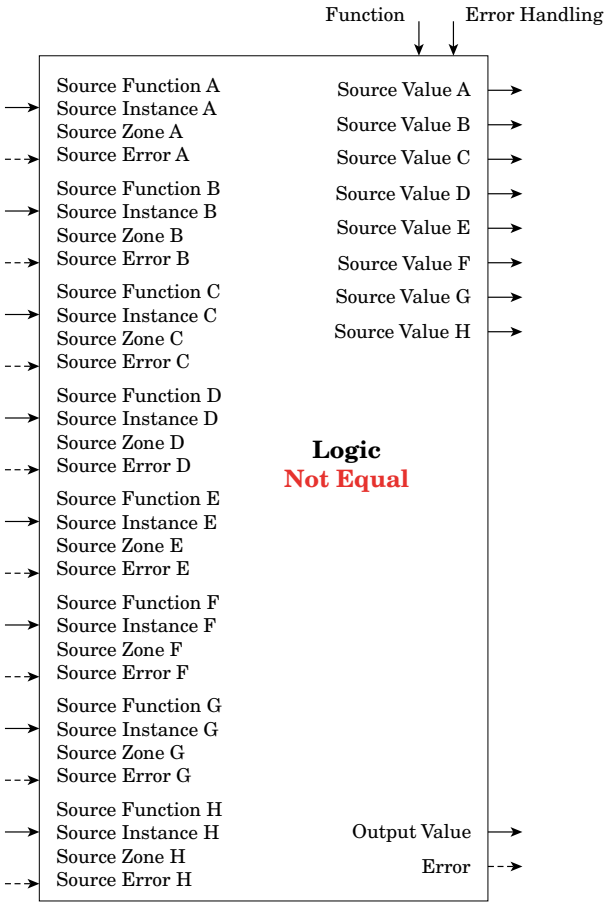

If A ≠ B ≠ C ≠ D ≠ E ≠ F ≠ G ≠ H then ON

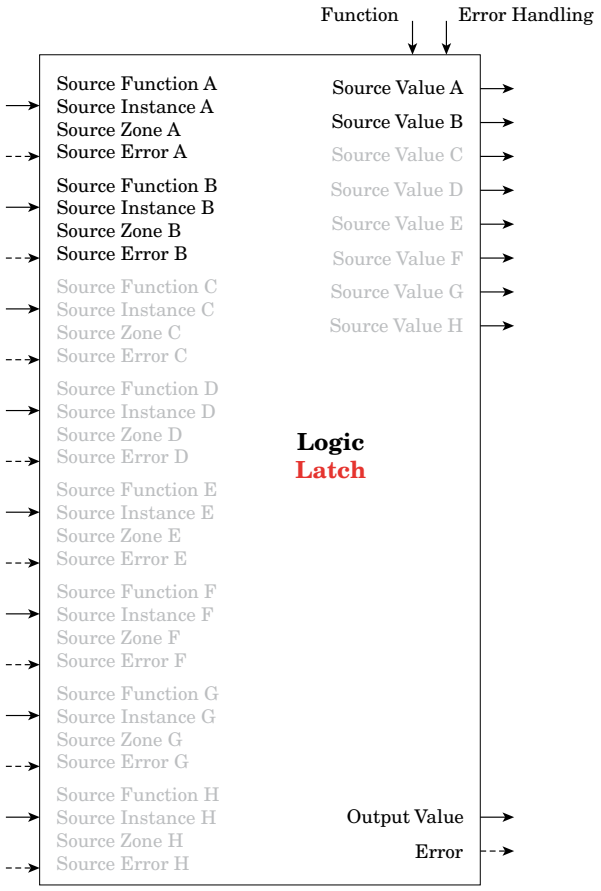

Output Value follows A, unless B = ON. When input B is on the the output will be latched on.

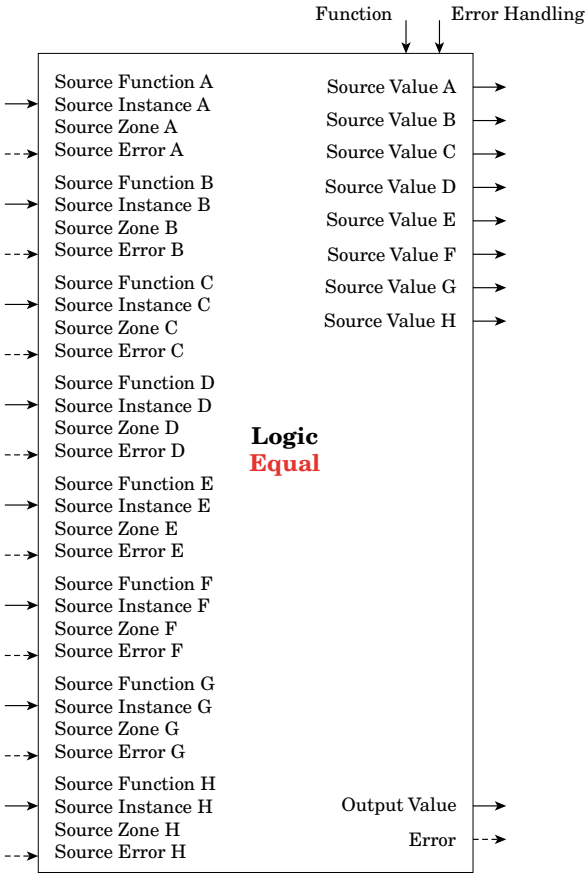

If A = B = C = D = E = F = G = H then ON

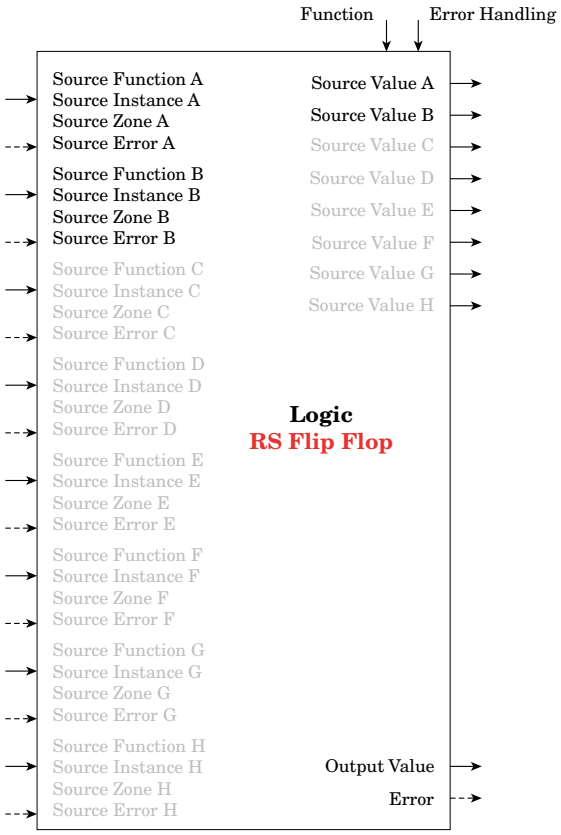

A negative to positive transistion on input A Sets Output Value ON and A negative to positive transistion on input B Resets Output Value OFF

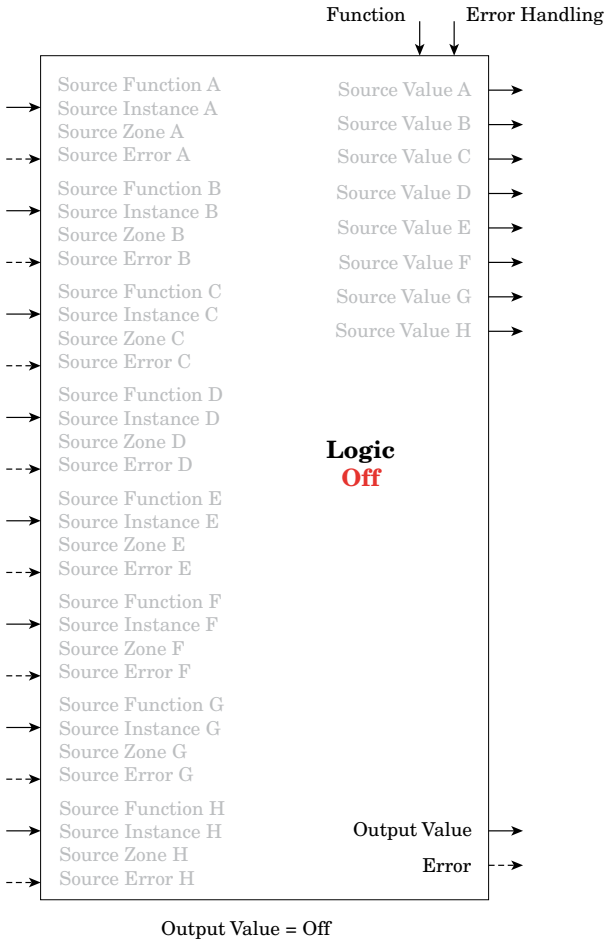

Output Value = Off

SEt Setup Page
MAtH Math Menu

Fn Function : Off, Average, Process Scale, Deviation Scale, Switch Over, Differential, Ratio, Add, Multiply, Absolute Difference, Minimum, Maximum, Square Root, Sample and Hold, Pressure to Altitude, Dewpoint

SFnA Source Function A : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

S iA Source Instance A : 1 to 24

S2A Source Zone A : 0 to 16

SFnb Source Function B : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Closed Loop Set Point, Open Loop Set Point, Variable

S ib Source Instance B : 1 to 24

S2b Source Zone B : 0 to 16

SFnC Source Function C : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

S iC Source Instance C : 1 to 24

S2C Source Zone C : 0 to 16

SFnd Source Function D : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

S id Source Instance D : 1 to 24

S2d Source Zone D : 0 to 16

SFnE Source Function E : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Timer, Variable

S iE Source Instance E : 1 to 24

S2E Source Zone E : 0 to 16

SLo Scale Low : -1,999.0 to 9,999.0

Sh i Scale High : -1,999.0 to 9,999.0

rLo Range Low : -1,999.0 to 9,999.0

rh i Range High : -1,999.0 to 9,999.0

Punt Pressure Units : PSI, Torr, mBar, Atmosphere, Pascal

Aunt Altitude Units : Feet, Kilofeet

F iL Filter : 0.0 to 60.0 seconds

Math Function

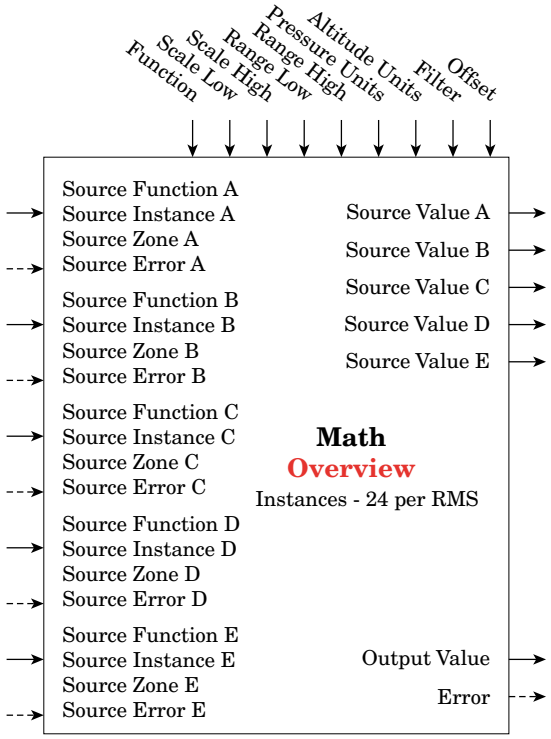

oPEr Operation Page
MAtH Math Menu

SuA Source Value A : -1,999.000 to 9,999.000

Sub Source Value B : -1,999.000 to 9,999.000

SuC Source Value C : -1,999.000 to 9,999.000

Sud Source Value D : -1,999.000 to 9,999.000

SuE Source Value E : Off, On

ou Output Value : -1,999.000 to 9,999.000

oFSt Offset : -1,999.000 to 9,999.000

The Math function block accepts multiple inputs and performs a programmed math function to derive an output value with Filter and Offset values applied. Some math operations must be performed in the user's units.

Functions may combine multiple inputs. Those inputs may have incompatible units from a logical point of view. As a result, unless otherwise indicated, the presentation of the output value is the same as Source A. This accommodates temperatures being multiplied, divided and offset by constants and process inputs.

Only inputs pointed to a source are used in the calculations.

An error, when read, can indicate any of the following:

None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

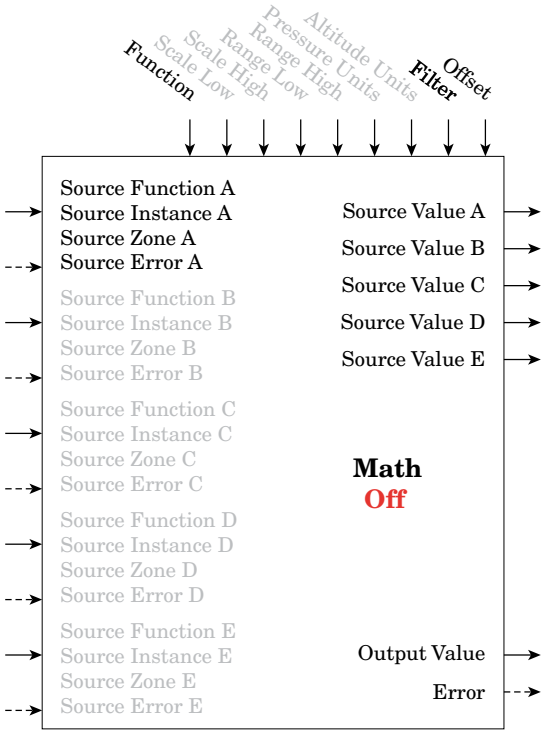

Output Value = Filter [A + Offset]
Display units follows Source A

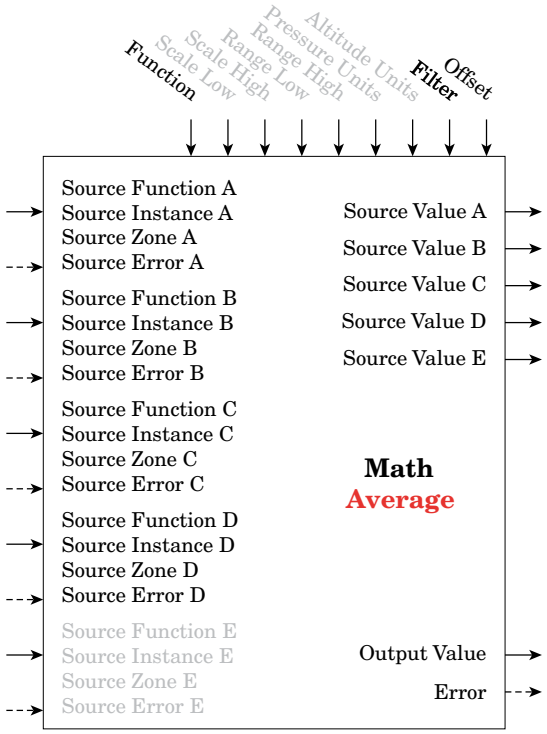

Output Value = Filter [(Average (A + B + C + D)) + Offset]
Display units follows the last source that is temperature otherwise, it will follow Source A

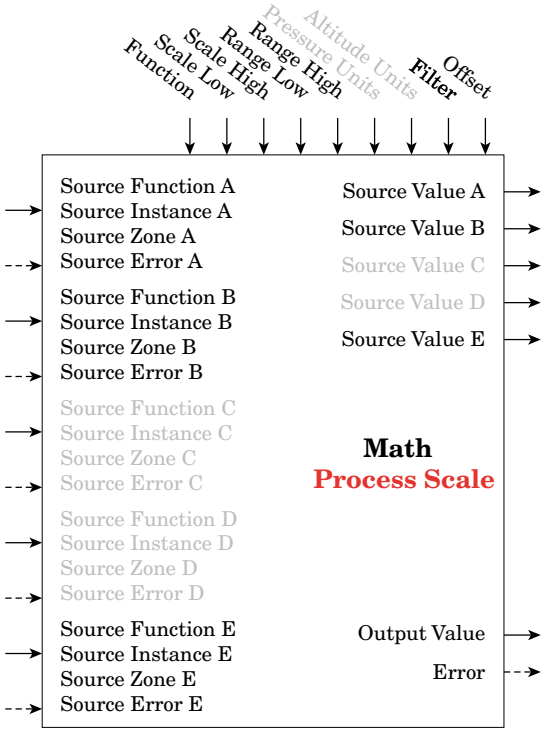

If E = OFF, Output Value = Filter [(Range High - Range Low) / (Scale High - Scale Low) * (A - Scale Low) + Range Low + Offset]
If E = ON, Output Value = Filter [B + Offset]

Scale Low/High and Range Low/High follows Source A display units.

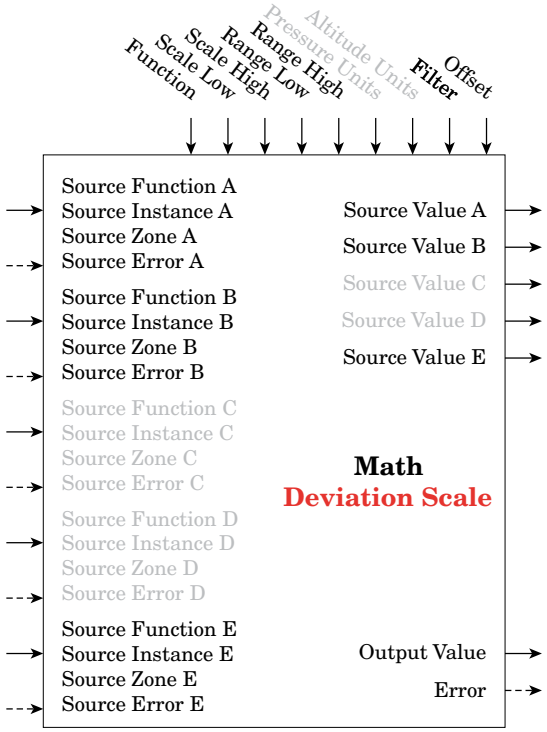

If E = OFF, Output Value = Filter [((Range High - Range Low) / (Scale High - Scale Low)) * (A - Scale Low) + Range Low + B + Offset]
If E = ON, Output Value = Filter [B + Offset]

Scale Low/High and Range Low/High follows Source A display units.

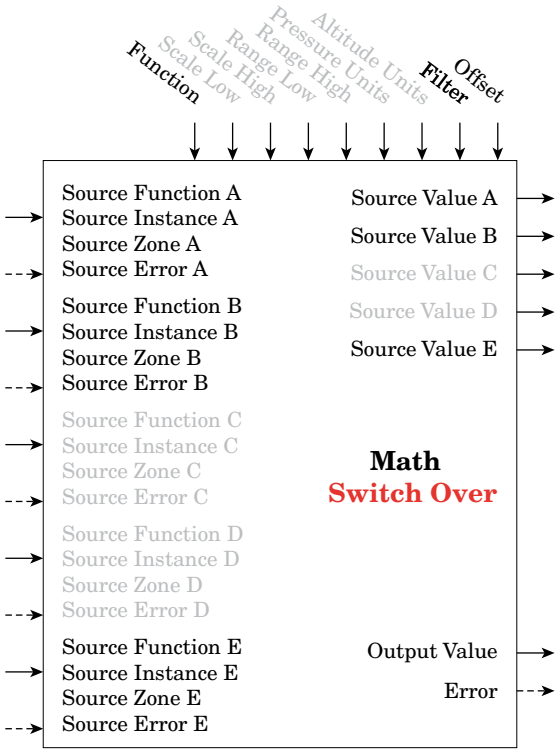

If E = OFF, Output Value = Filter [A + Offset]
If E = ON, Output Value = Filter [B + Offset]
Display units follows active source.

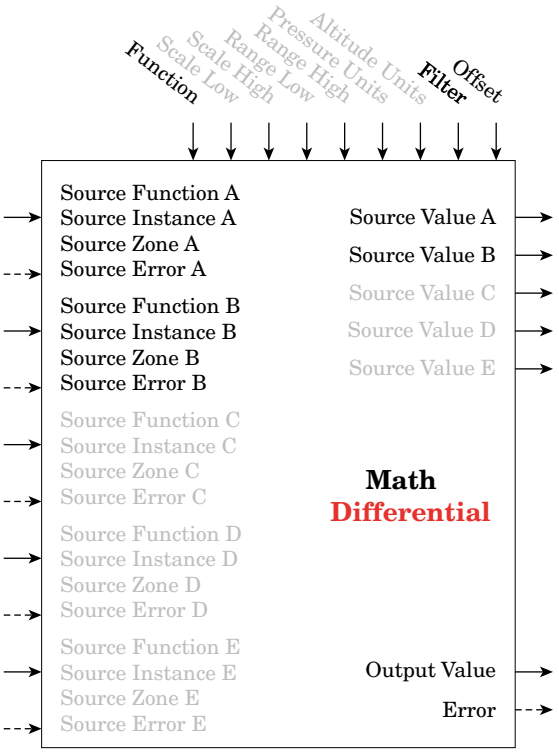

Output Value = Filter [(A - B) + Offset]
Display units follows Source A plus relative Source B

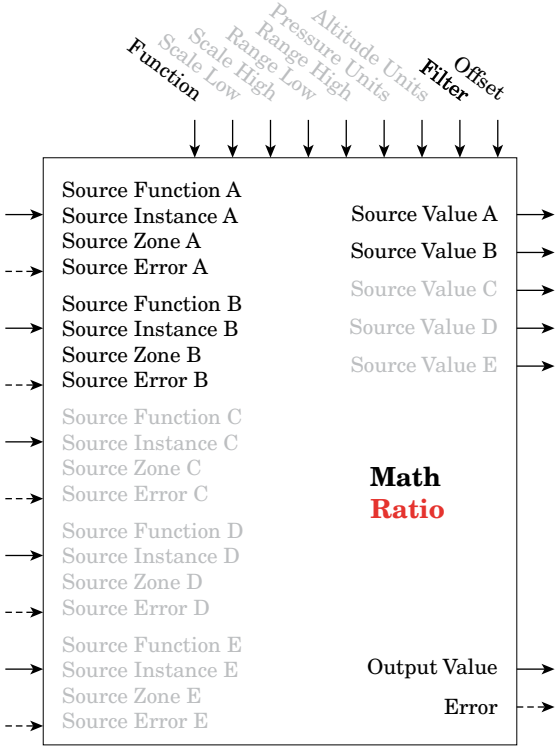

Output Value = Filter [(A / B) + Offset]
If display units of Source A = Source B, no display units on output value, else follow Source A

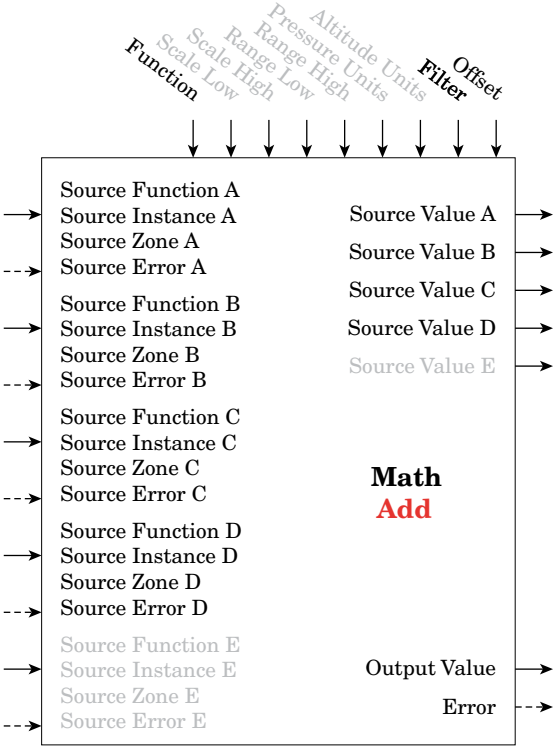

Output Value = Filter [(A + B + C + D) + Offset]
Display units follows last temperature source else follow Source A

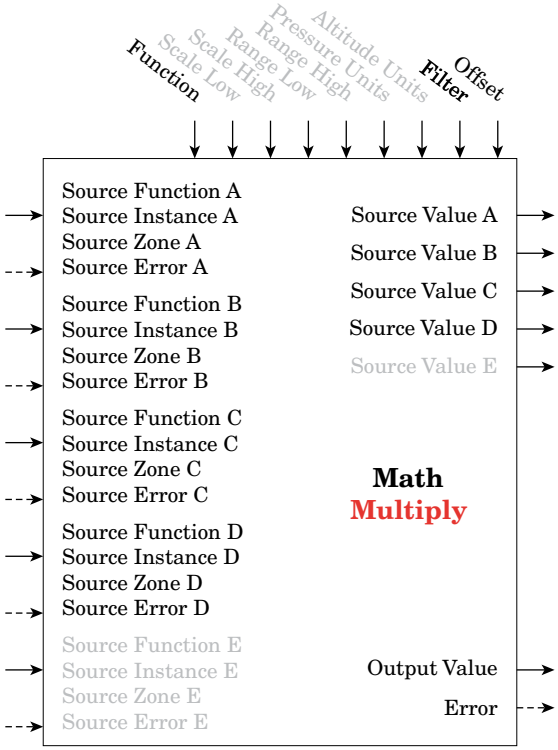

Output Value = Filter [(A * B * C * D) + Offset]
Display units follows last temperature source else follow Source A

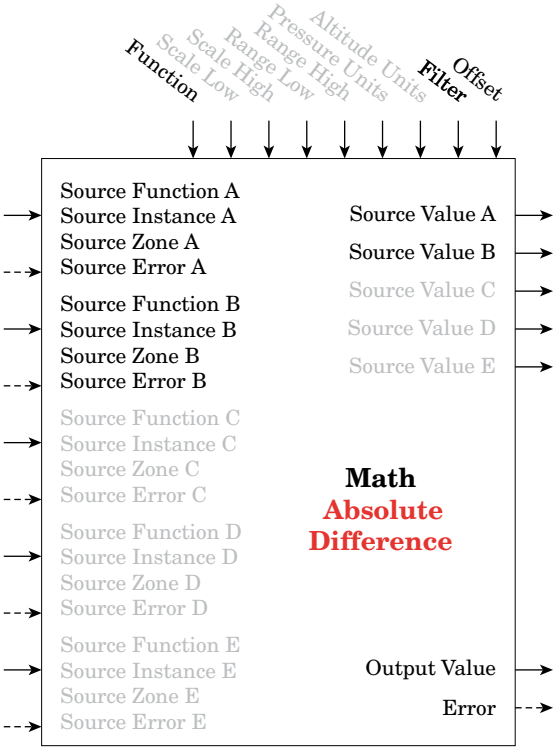

Output Value = Filter [| A - B | + Offset]
Display units follow Source A plus relative Source B

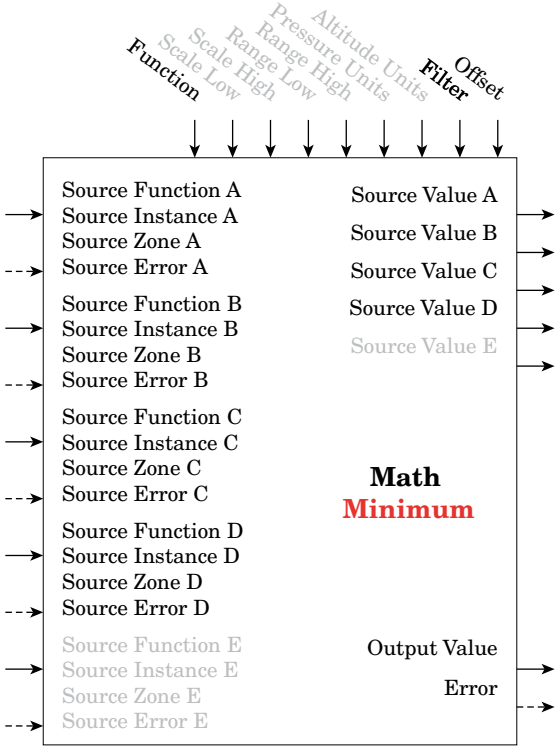

Output Value = Filter [Minimum Value (A : B : C : D) + Offset]
Display units follows Source with minimum value.

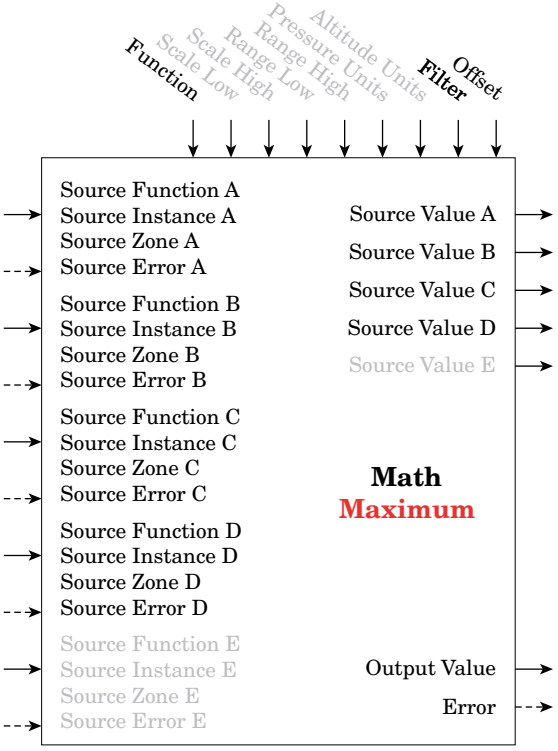

Output Value = Filter [Maximum Value (A : B : C : D) + Offset]
Display units follows Source with maximum value.

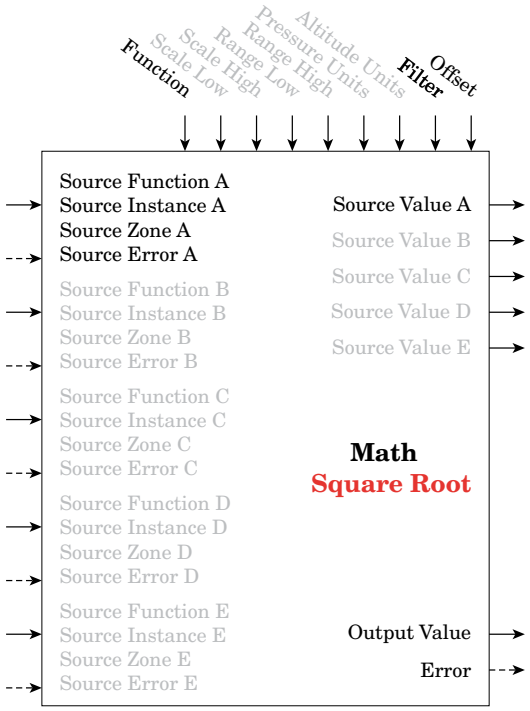

Output Value = Filter [SqrRoot A + Offset]
Display units follows Source A

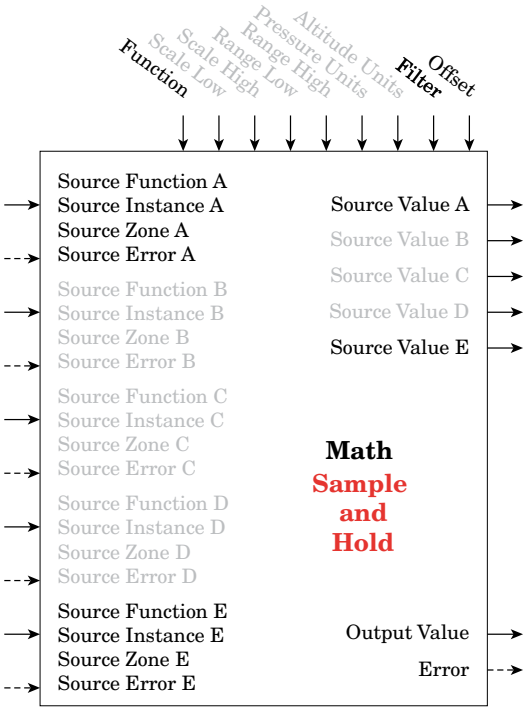

If E = OFF, Output Value = Filter [A + Offset]
If E = ON, Output Value = Filter [last value of A + Offset]
Display units follows Source A

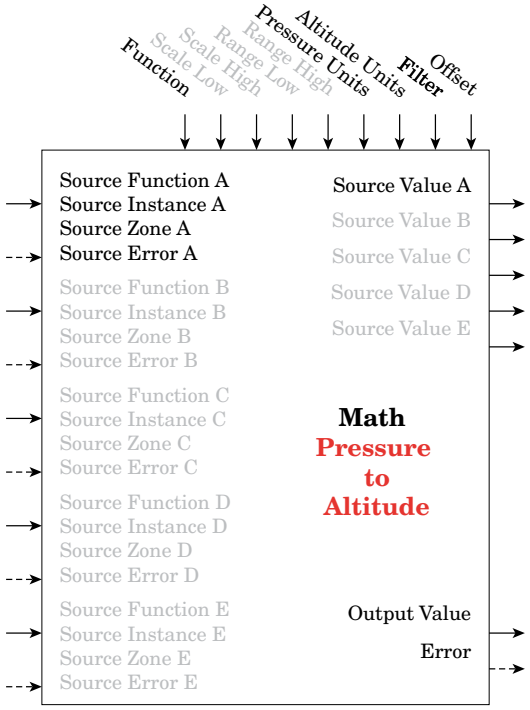

Note:
Pressure Altitude calculation is based on the International Standard Atmosphere 1976. Source A is a pressure signal and needs to be in PSI units for the calculation. The calculation is accurate from sea level to 90,000 feet. It can be used beyond this range in both directions, but with loss of accuracy. The standard is based on an altitude of 0 feet (sea level) pressure of 14.6967 PSI and a temperature of 59 degrees F. Result of calculation is in feet.

Output Value = Filter [Convert Source A in Pressure to Altitude + Offset]

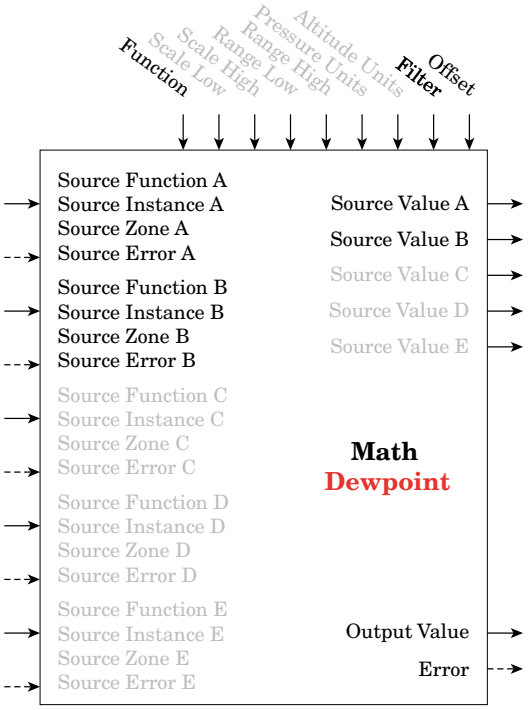

Output Value = Filter [427.26 * (CP * B / 8.8618) / (17.27- (CP * B / 8.8618)) +32 + Offset]

Source A is used for Calculated Pressure or CP ;

Note:
For dewpoint, Source A is temperature (F) and Source B is RH (%). Saturation pressure calculation is identical to that used in wet/dry bulb. Result is in degrees F.

Timer Function

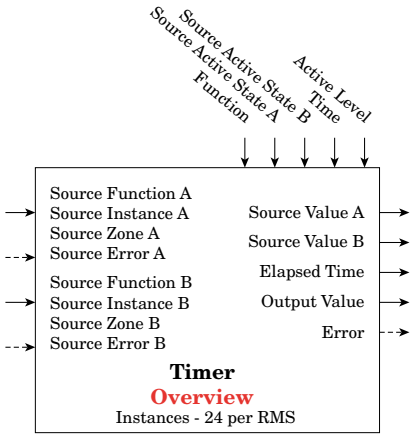

SEt Setup Page
tMr Timer Menu

Fn Function : Off, On Pulse, Delay, One Shot, Retentive

SFnA Source Function A (Timer Run) : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Special Function Output 1 to 4 , Timer, Variable

SiA Source Instance A : 1 to 24

SZA Source Zone A : 0 to 16

SASA Source Active State A (Timer Run) : High (rising), Low (falling)

SFnb Source Function B (Timer Reset) : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Special Function Output 1 to 4, Timer, Variable

Sib Source Instance B : 1 to 24

SZb Source Zone B : 0 to 16

SASb Source Active State B (Timer Reset) : High (rising), Low (falling)

t1 Time : 0 to 9,999 seconds

LEu Active Level : High, Low

oPEr Operation Page
tMr Timer Menu

SuA Source Value A : Off, On

Sub Source Value B : Off, On

Et Elapsed Time : 0.0 to 9,999.000 seconds

ou Output Value : Off, On

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

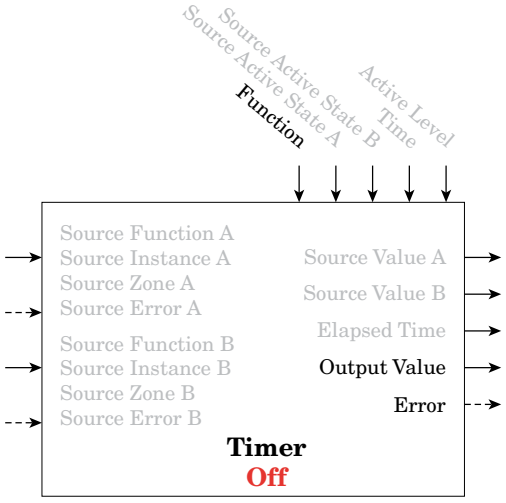

Output Value = OFF

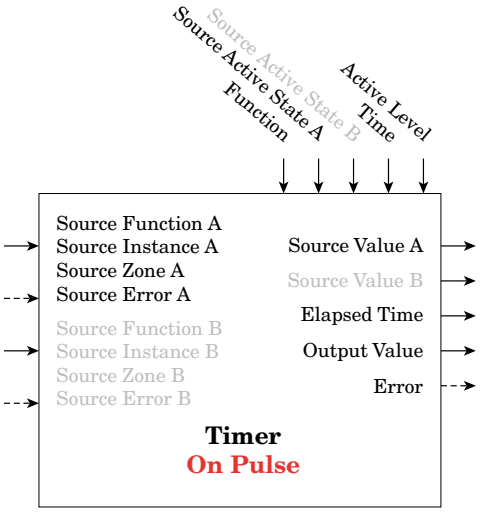

Timing Diagram of On Pulse with active state rising edge

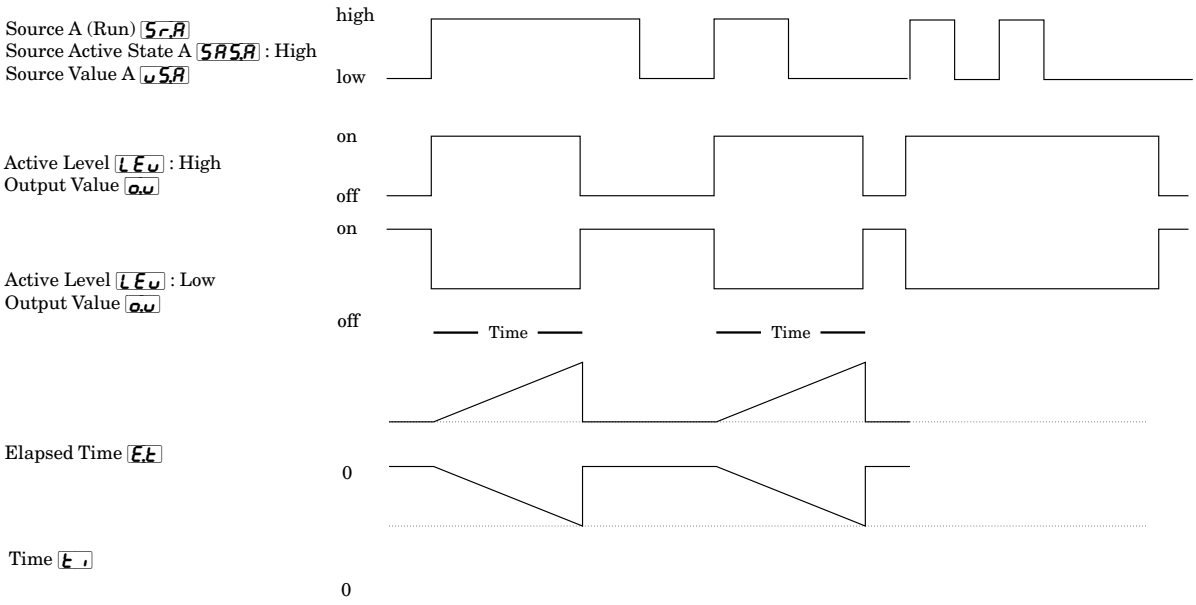

Timing Diagram of On Pulse with active state falling edge

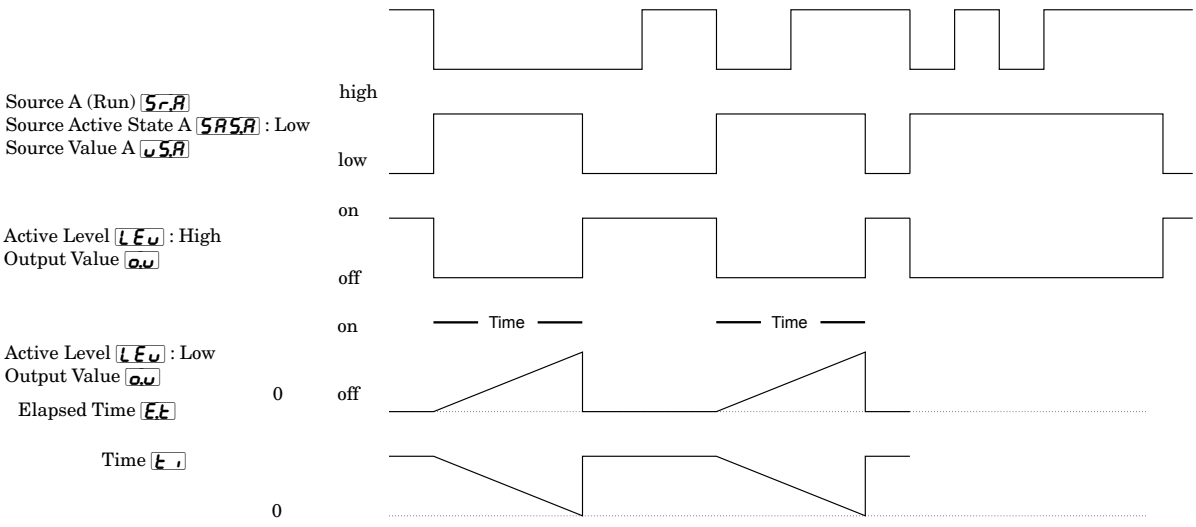

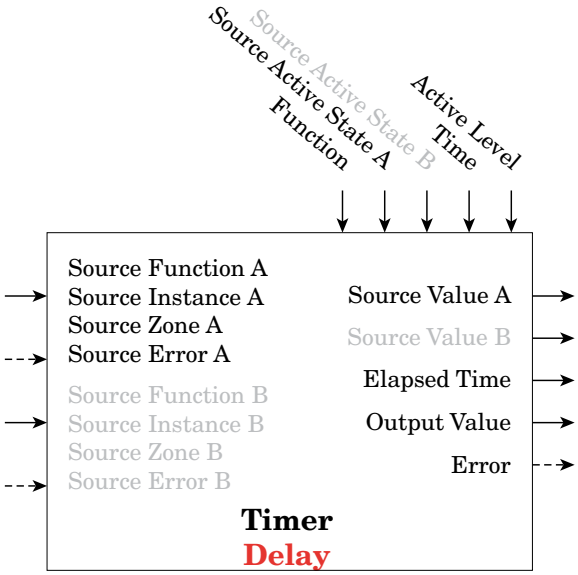

Source A

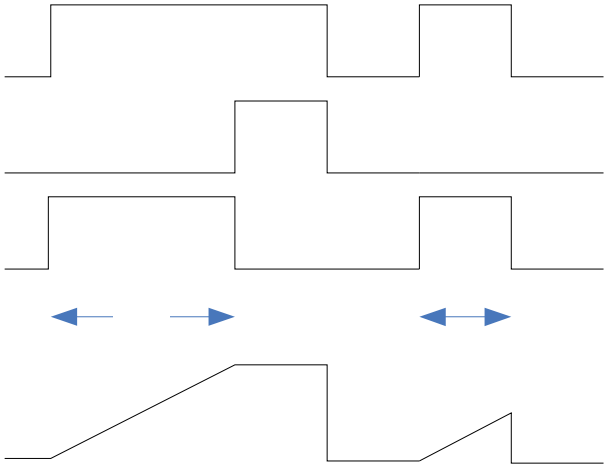

Source A

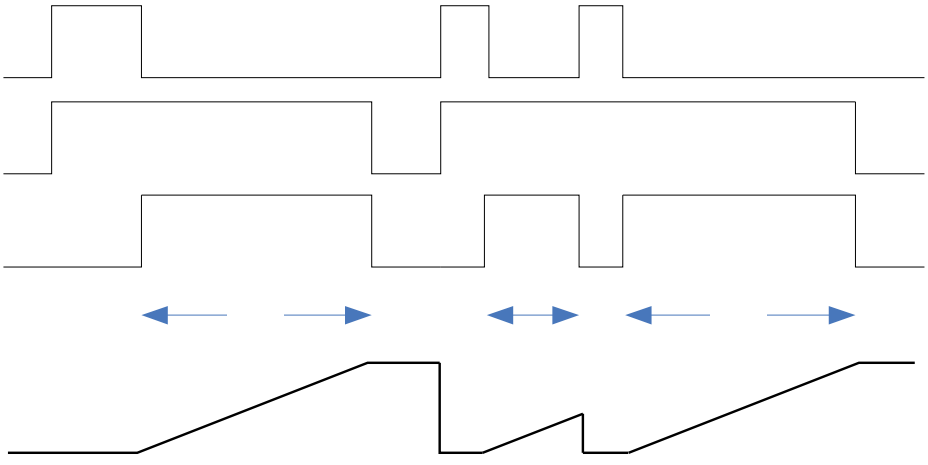

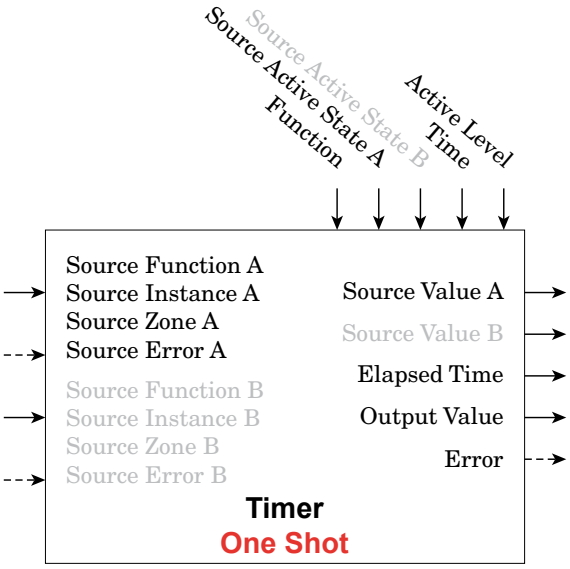
Source Active State A Function
Source Active State B
Active Level Time
Source Function A
Source Instance A
Source Zone A
Source Error A
Source Function B
Source Instance B
Source Zone B
Source Error B
Source Value A
Source Value B
Elapsed Time
Output Value
Error
Timer
One Shot

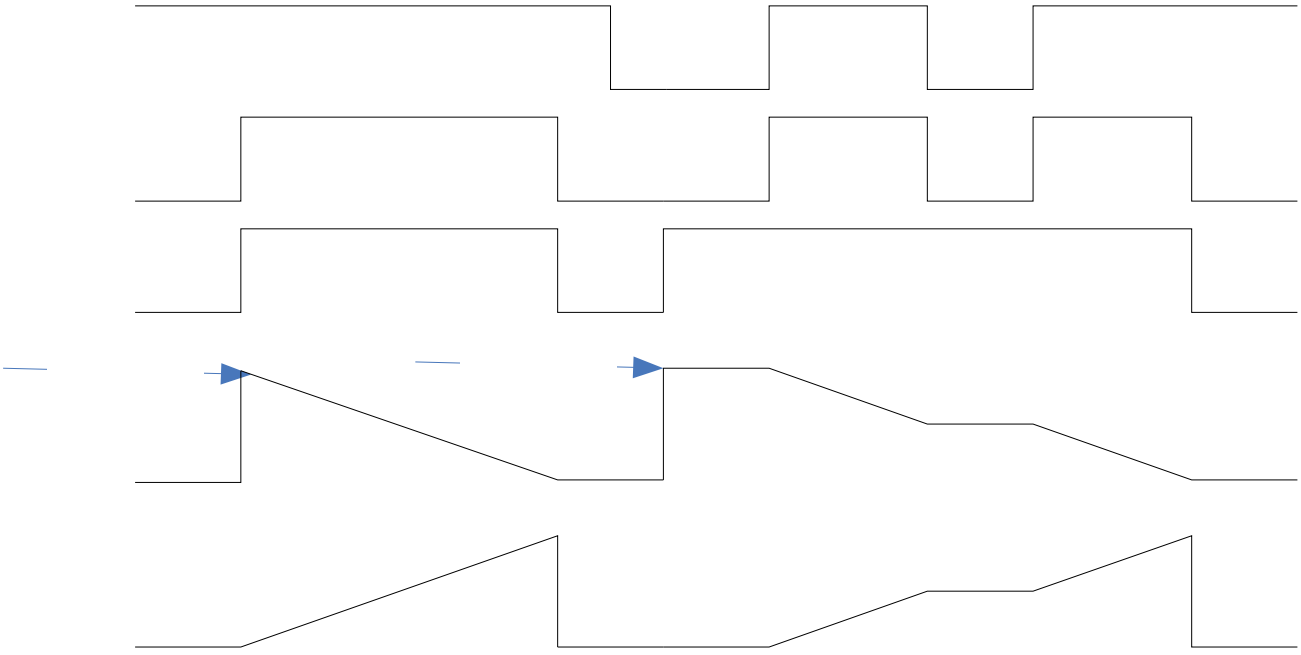

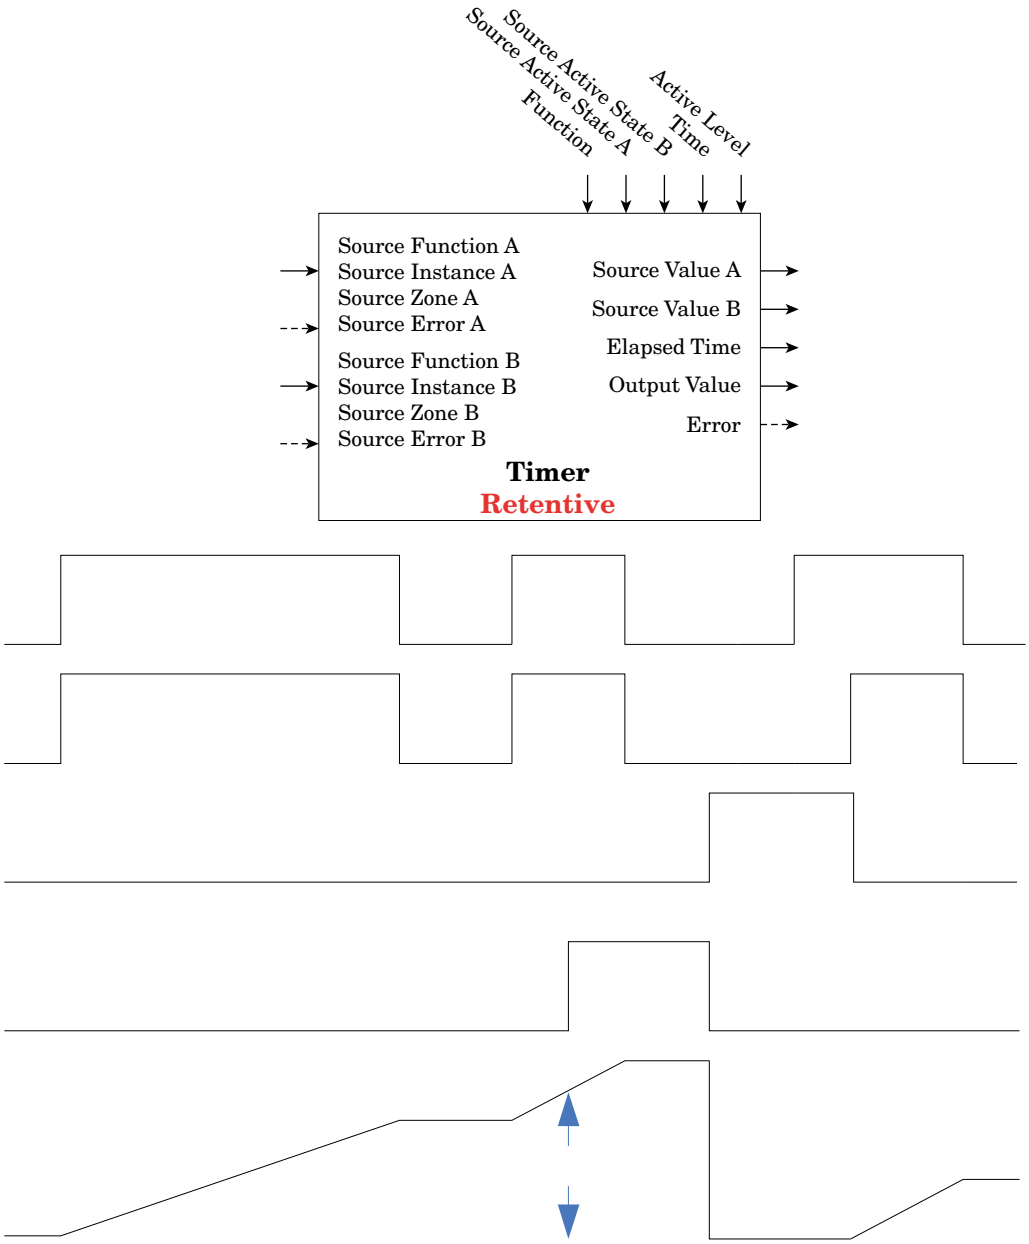
Source Active State A Function
Source Active State B
Active Level
Time
Source Function A
Source Instance A
Source Zone A
Source Error A
Source Function B
Source Instance B
Source Zone B
Source Error B
Source Value A
Source Value B
Elapsed Time
Output Value
Error
Timer
Retentive

Counter Function

Function counts up or down from Load Value and produces Output Value = On when Count = Target Value.

Note:

Count value clears on power loss.
Load Value restored on power up.

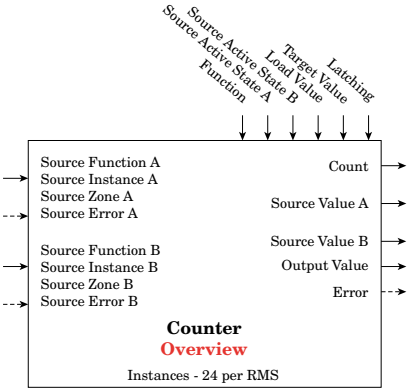

SEt Setup Page
CtR Counter Menu

- Fn Function : Up, Down
- SFnA Source Function A (Clock) : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Timer, Variable
- S iA Source Instance A : 1 to 24
- S2A Source Zone A : 0 to 16
- SASA Source Active State A (Active State Clock) : High (rising), Low (falling), Both (rising & falling)
- SFnb Source Function B (Load) : None, Alarm, Compare, Counter, Digital I/O, Profile Event Out A to H, Function Key, Logic, Timer, Variable
- S ib Source Instance B : 1 to 24
- S2b Source Zone B : 0 to 16
- SASb Source Active State B (Active State Load) : High, Low
- LoAd Load Value : 0 to 9,999
- trGt Target Value : 0 to 9,999
- LAt Latching : No, Yes

SEt Operation Page
CtR Counter Menu

- Cnt Count : 0 to 9,999
- SwA Source Value A : Off, On
- Swb Source Value B : Off, On
- ou Output Value : Off, On

Counter Operation:

Whenever a prescribed clock transition occurs without an error on source B the count will be equal to the Load Value.

Up Counter:

Whenever a prescribed clock transition occurs without an error on Source B the count will increment by +1. If the count is equal to 9,999 when the transition occurs count will be 1 after transition.

Down Counter:

Whenever a prescribed clock transition occurs without an error on Source B the count will decrement by -1. If the count is equal to 0 when the transition occurs the count will be 9,999 after transition.

An error, when read, can indicate any of the following:

None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

Variable Function

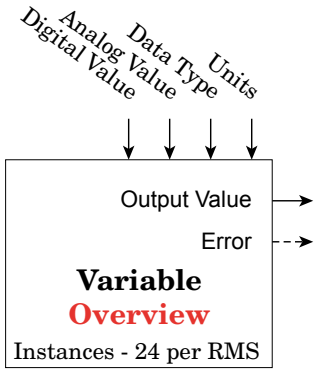

SEt Setup Page
uAr Variable Menu

- tYPE Data Type : Analog, Digital
- d iG Digital Value : On, Off
- AnLG Analog Value : -1,999.000 to 9,999.000
- Un it Units : None, Absolute Temperature, Relative Temperature, Power, Process, Relative Humidity

ou Output Value : -1,999.000 to 9,999.000 or On or Off

Function passes stored value to output.

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

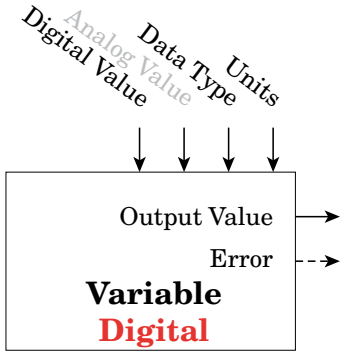

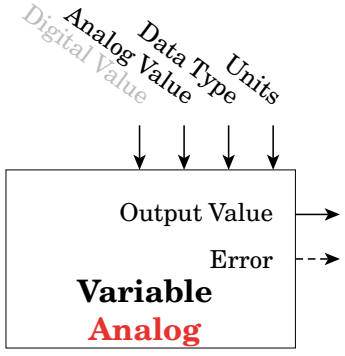

Compare Function

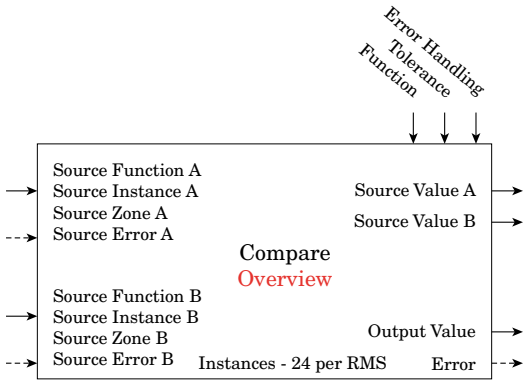

SEt Setup Page
CPE Compare Menu

Fn Function : Off, Greater Than, Less Than, Equal To, Not Equal To, Greater or Equal , Less or Equal

tol Tolerance : 0.0 to 9,999.000 units or F

SFnA Source Function A : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

SiA Source Instance A : 1 to 24

SZnA Source Zone A : 0 to 16

SFnb Source Function B : None, Analog Input, Current, Cool Power, Heat Power, Power, Linearization, Math, Process Value, Set Point Closed, Set Point Open, Variable

Sinb Source Instance B : 1 to 24

SZnb Source Zone B : 0 to 16

Erh Error Handling : False Bad, False Good, True Bad, True Good

oPEr Operation Page
CPE Compare Menu

SuA Source Value A : -1,999.000 to 9,999.000 units or F

Sub Source Value B : -1,999.000 to 9,999.000 units or F

ou Output Value : Off, On

Tolerance is expressed in same units as Source A
Requires Source A and Source B to be without errors for function to work.

An error, when read, can indicate any of the following: None, Open, Shorted, Measurement Error, Bad Cal Data, Ambient Error, RTD Error, Fail, Math Error, Not Sourced, Stale

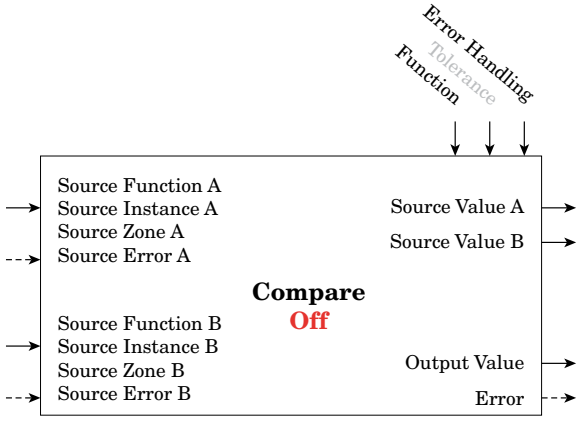

No Compare, Output Value = OFF

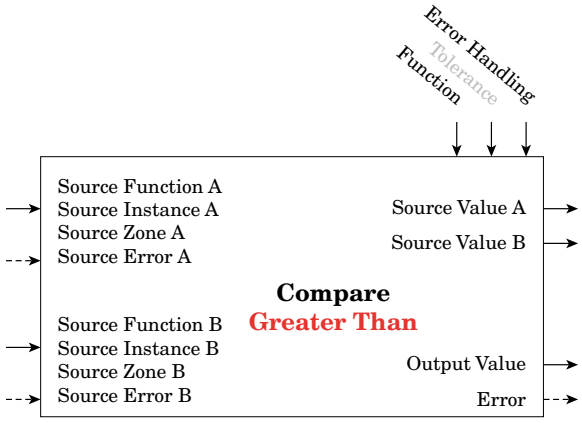

A>B, Output Value = ON

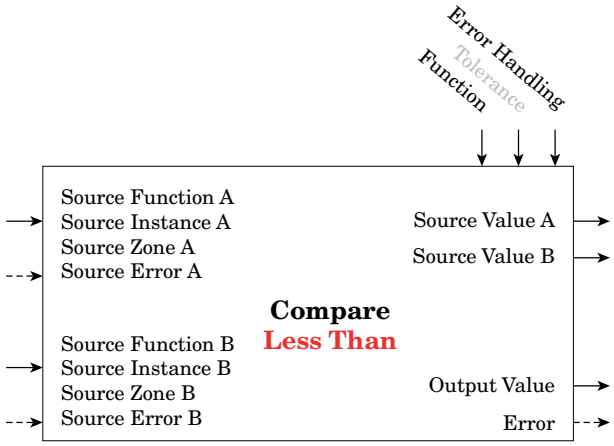

A<B, Output Value = ON

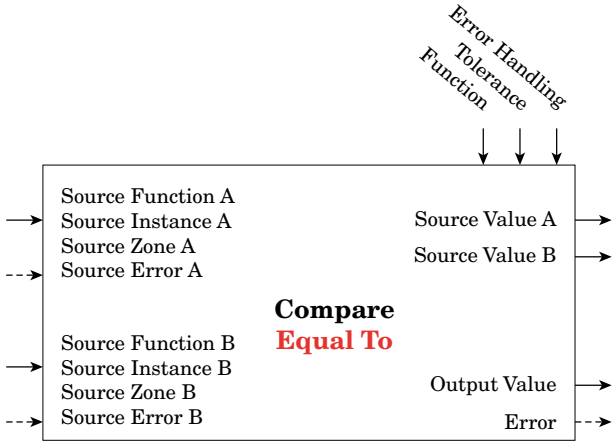

A=B, Output Value = ON

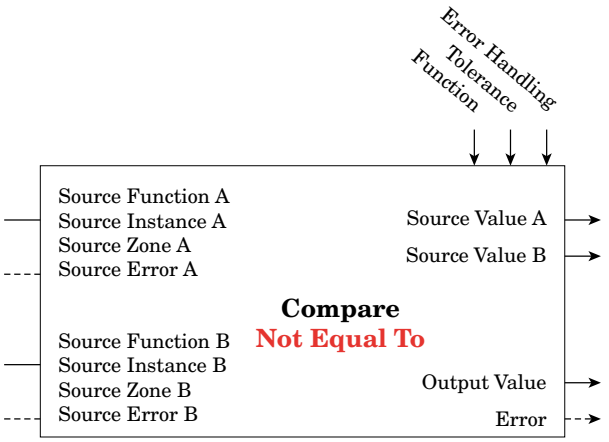

A not equal B, Output Value = ON

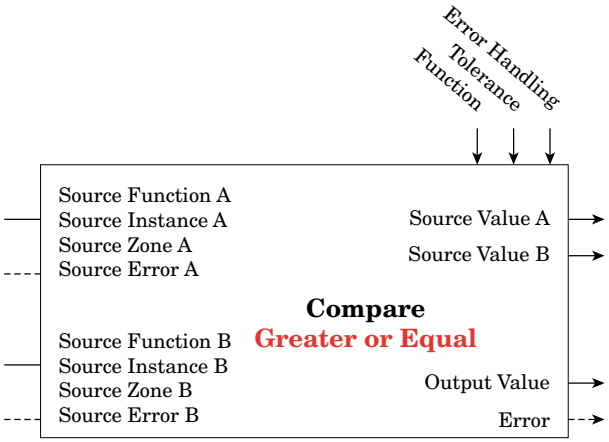

A>=B, Output Value = ON

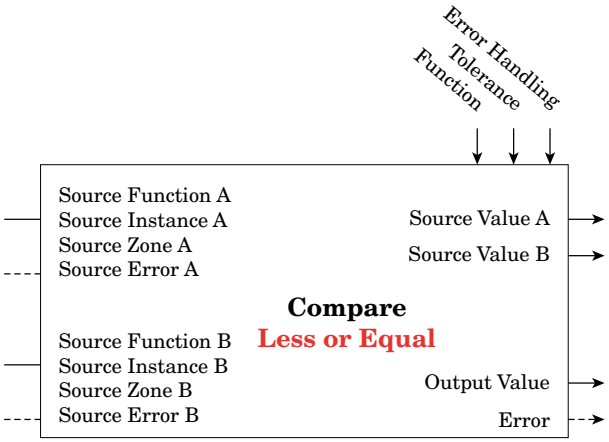

A<=B, Output Value = ON

Custom Function

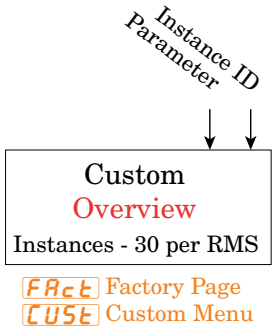
Instance ID
Parameter
Custom
Overview
Instances - 30 per RMS
FAct Factory Page
CUSt Custom Menu
PAr Parameter : None, Process, Calibration Offset, Display Units, User Settings Restore, Alarm Low Set Point, Alarm High Set Point, Alarm Hysteresis and Custom

Security Function

Note:
Set on a Zone by Zone basis. This is independent of the RUI Security Setting.

If the Password is enabled, the user must enter the Password to get to menus that have been blocked due to lock level settings. Rolling passwords require a new password each time the power has been cycled to the controller. It will be different for every controller. The administrator password is required to change the security settings even if the user enters their password to override the security settings.

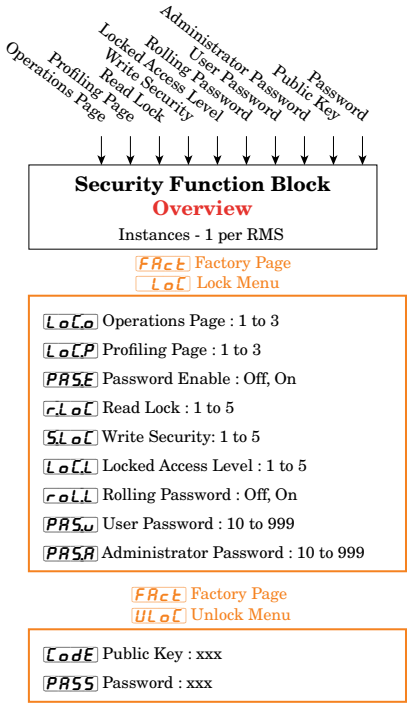
Operations Page
Profiling Page
Read Lock
Write Security
Locked Access Level
Rolling Password
User Password
Administrator Password
Public Key
Password
Security Function Block
Overview
Instances - 1 per RMS
FAct Factory Page
LoC Lock Menu
LoCo Operations Page : 1 to 3
LoCP Profiling Page : 1 to 3
PASE Password Enable : Off, On
rLoC Read Lock : 1 to 5
SLoC Write Security: 1 to 5
LoCL Locked Access Level : 1 to 5
roLL Rolling Password : Off, On
PASu User Password : 10 to 999
PASA Administrator Password : 10 to 999
FAct Factory Page
ULoC Unlock Menu
CodE Public Key : xxx
PASS Password : xxx

Diagnostic Function

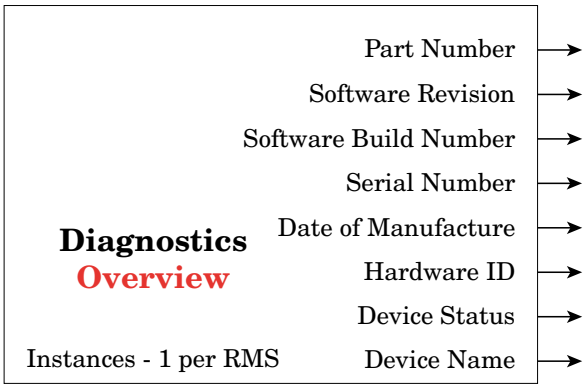

FACt Factory Page
d iAG Diagnostics Menu

Pn Part Number: scrolls on display

rEv Software Revision: 4.00, ...

S.bLd Software Build Number : 0, 1, 2, ...

Sn Serial Number : xxxxxx

dAtE Date of Manufacture : YWW format

Hardware ID : 115 (RMS)

Device Status : OK, Fail

Device Name : EZ-ZONE RM

7 Chapter 7: Appendix

Modbus - Programmable Memory Blocks

Assembly Definition Address and Assembly Working Addresses

Definition Addresses	Working Addresses	Definition Addresses	Working Addresses
40 & 41	200 & 201	120 & 121	280 & 281
42 & 43	202 & 203	122 & 123	282 & 283
44 & 45	204 & 205	124 & 125	284 & 285
46 & 47	206 & 207	126 & 127	286 & 287
48 & 49	208 & 209	128 & 129	288 & 289
50 & 51	210 & 211	130 & 131	290 & 291
52 & 53	212 & 213	132 & 133	292 & 293
54 & 55	214 & 215	134 & 135	294 & 295
56 & 57	216 & 217	136 & 137	296 & 297
58 & 59	218 & 219	138 & 139	296 & 299
60 & 61	220 & 221	140 & 141	300 & 301
62 & 63	222 & 223	142 & 143	302 & 303
64 & 65	224 & 225	144 & 145	304 & 305
66 & 67	226 & 227	146 & 147	306 & 307
68 & 69	228 & 229	148 & 149	308 & 309
70 & 71	230 & 231	150 & 151	310 & 311
72 & 73	232 & 233	152 & 153	312 & 313
74 & 75	234 & 235	154 & 155	314 & 315
76 & 77	236 & 237	156 & 157	316 & 317
78 & 79	238 & 239	158 & 159	318 & 319
80 & 81	240 & 241	160 & 161	320 & 321
82 & 83	242 & 243	162 & 163	322 & 323
84 & 85	244 & 245	164 & 165	324 & 325
86 & 87	246 & 247	166 & 167	326 & 327
88 & 89	248 & 249	168 & 169	328 & 329
90 & 91	250 & 251	170 & 171	330 & 331
92 & 93	252 & 253	172 & 173	332 & 333
94 & 95	254 & 255	174 & 175	334 & 335
96 & 97	256 & 257	176 & 177	336 & 337
98 & 99	256 & 259	178 & 179	338 & 339
100 & 101	260 & 261	180 & 181	340 & 341
102 & 103	262 & 263	182 & 183	342 & 343
104 & 105	264 & 265	184 & 185	344 & 345
106 & 107	266 & 267	186 & 187	346 & 347
108 & 109	268 & 269	188 & 189	348 & 349
110 & 111	270 & 271	190 & 191	350 & 351
112 & 113	272 & 273	192 & 193	352 & 353
114 & 115	274 & 275	194 & 195	354 & 355
116 & 117	276 & 277	196 & 197	356 & 357
118 & 119	278 & 279	198 & 199	358 & 359

Modbus Default Assembly Structure 40-119

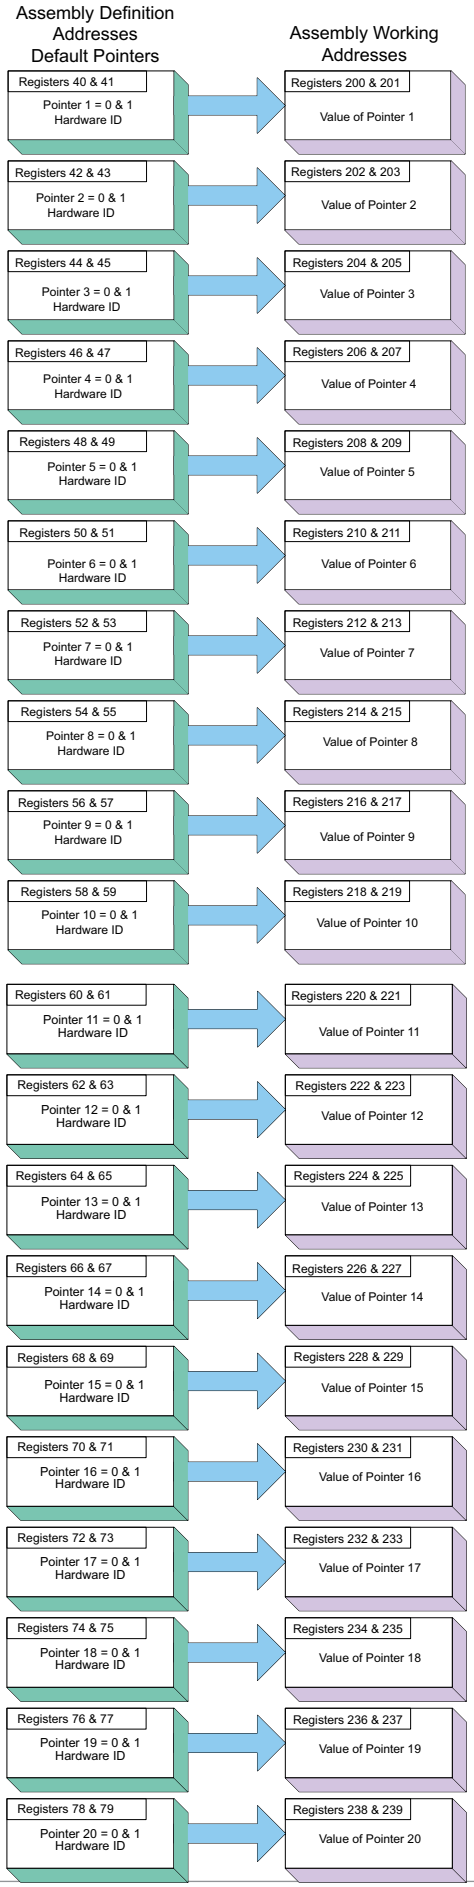
Assembly Definition Addresses Default Pointers
Assembly Working Addresses
Registers 40 & 41
Pointer 1 = 0 & 1 Hardware ID
Registers 200 & 201
Value of Pointer 1
Registers 42 & 43
Pointer 2 = 0 & 1 Hardware ID
Registers 202 & 203
Value of Pointer 2
Registers 44 & 45
Pointer 3 = 0 & 1 Hardware ID
Registers 204 & 205
Value of Pointer 3
Registers 46 & 47
Pointer 4 = 0 & 1 Hardware ID
Registers 206 & 207
Value of Pointer 4
Registers 48 & 49
Pointer 5 = 0 & 1 Hardware ID
Registers 208 & 209
Value of Pointer 5
Registers 50 & 51
Pointer 6 = 0 & 1 Hardware ID
Registers 210 & 211
Value of Pointer 6
Registers 52 & 53
Pointer 7 = 0 & 1 Hardware ID
Registers 212 & 213
Value of Pointer 7
Registers 54 & 55
Pointer 8 = 0 & 1 Hardware ID
Registers 214 & 215
Value of Pointer 8
Registers 56 & 57
Pointer 9 = 0 & 1 Hardware ID
Registers 216 & 217
Value of Pointer 9
Registers 58 & 59
Pointer 10 = 0 & 1 Hardware ID
Registers 218 & 219
Value of Pointer 10
Registers 60 & 61
Pointer 11 = 0 & 1 Hardware ID
Registers 220 & 221
Value of Pointer 11
Registers 62 & 63
Pointer 12 = 0 & 1 Hardware ID
Registers 222 & 223
Value of Pointer 12
Registers 64 & 65
Pointer 13 = 0 & 1 Hardware ID
Registers 224 & 225
Value of Pointer 13
Registers 66 & 67
Pointer 14 = 0 & 1 Hardware ID
Registers 226 & 227
Value of Pointer 14
Registers 68 & 69
Pointer 15 = 0 & 1 Hardware ID
Registers 228 & 229
Value of Pointer 15
Registers 70 & 71
Pointer 16 = 0 & 1 Hardware ID
Registers 230 & 231
Value of Pointer 16
Registers 72 & 73
Pointer 17 = 0 & 1 Hardware ID
Registers 232 & 233
Value of Pointer 17
Registers 74 & 75
Pointer 18 = 0 & 1 Hardware ID
Registers 234 & 235
Value of Pointer 18
Registers 76 & 77
Pointer 19 = 0 & 1 Hardware ID
Registers 236 & 237
Value of Pointer 19
Registers 78 & 79
Pointer 20 = 0 & 1 Hardware ID
Registers 238 & 239
Value of Pointer 20

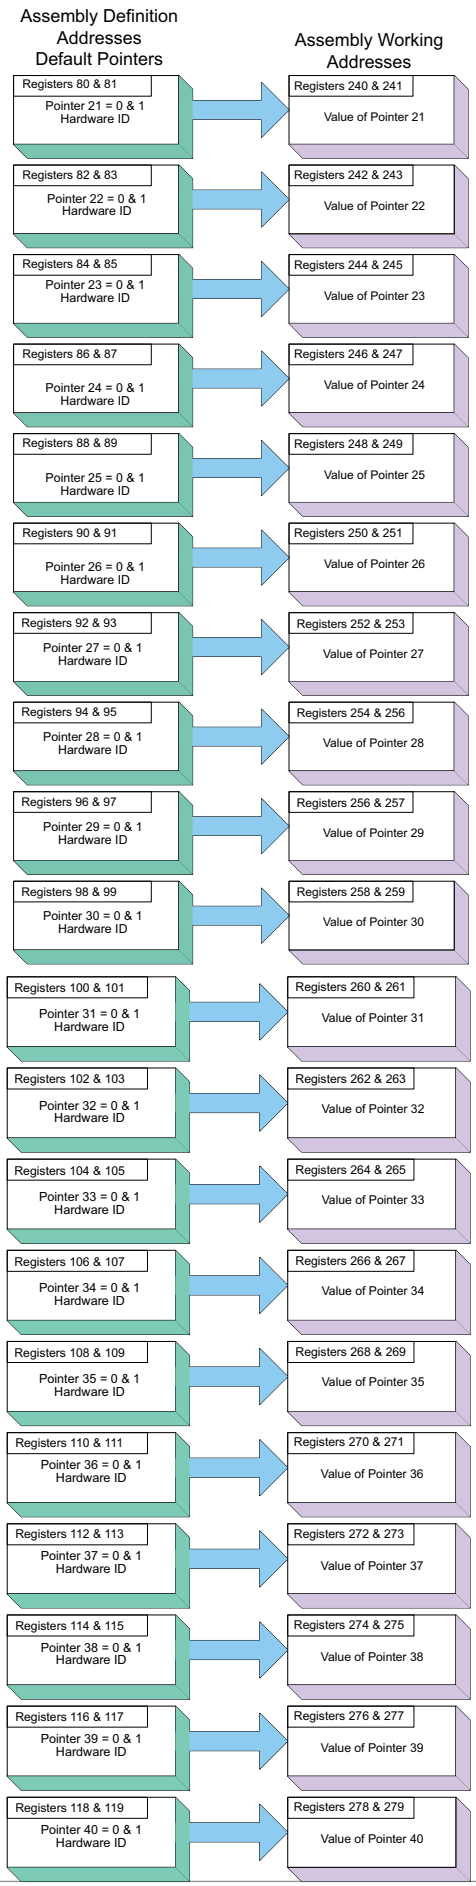
Assembly Definition Addresses Default Pointers
Assembly Working Addresses
Registers 80 & 81
Pointer 21 = 0 & 1 Hardware ID
Registers 240 & 241
Value of Pointer 21
Registers 82 & 83
Pointer 22 = 0 & 1 Hardware ID
Registers 242 & 243
Value of Pointer 22
Registers 84 & 85
Pointer 23 = 0 & 1 Hardware ID
Registers 244 & 245
Value of Pointer 23
Registers 86 & 87
Pointer 24 = 0 & 1 Hardware ID
Registers 246 & 247
Value of Pointer 24
Registers 88 & 89
Pointer 25 = 0 & 1 Hardware ID
Registers 248 & 249
Value of Pointer 25
Registers 90 & 91
Pointer 26 = 0 & 1 Hardware ID
Registers 250 & 251
Value of Pointer 26
Registers 92 & 93
Pointer 27 = 0 & 1 Hardware ID
Registers 252 & 253
Value of Pointer 27
Registers 94 & 95
Pointer 28 = 0 & 1 Hardware ID
Registers 254 & 256
Value of Pointer 28
Registers 96 & 97
Pointer 29 = 0 & 1 Hardware ID
Registers 256 & 257
Value of Pointer 29
Registers 98 & 99
Pointer 30 = 0 & 1 Hardware ID
Registers 258 & 259
Value of Pointer 30
Registers 100 & 101
Pointer 31 = 0 & 1 Hardware ID
Registers 260 & 261
Value of Pointer 31
Registers 102 & 103
Pointer 32 = 0 & 1 Hardware ID
Registers 262 & 263
Value of Pointer 32
Registers 104 & 105
Pointer 33 = 0 & 1 Hardware ID
Registers 264 & 265
Value of Pointer 33
Registers 106 & 107
Pointer 34 = 0 & 1 Hardware ID
Registers 266 & 267
Value of Pointer 34
Registers 108 & 109
Pointer 35 = 0 & 1 Hardware ID
Registers 268 & 269
Value of Pointer 35
Registers 110 & 111
Pointer 36 = 0 & 1 Hardware ID
Registers 270 & 271
Value of Pointer 36
Registers 112 & 113
Pointer 37 = 0 & 1 Hardware ID
Registers 272 & 273
Value of Pointer 37
Registers 114 & 115
Pointer 38 = 0 & 1 Hardware ID
Registers 274 & 275
Value of Pointer 38
Registers 116 & 117
Pointer 39 = 0 & 1 Hardware ID
Registers 276 & 277
Value of Pointer 39
Registers 118 & 119
Pointer 40 = 0 & 1 Hardware ID
Registers 278 & 279
Value of Pointer 40

Modbus Default Assembly Structure 120-199

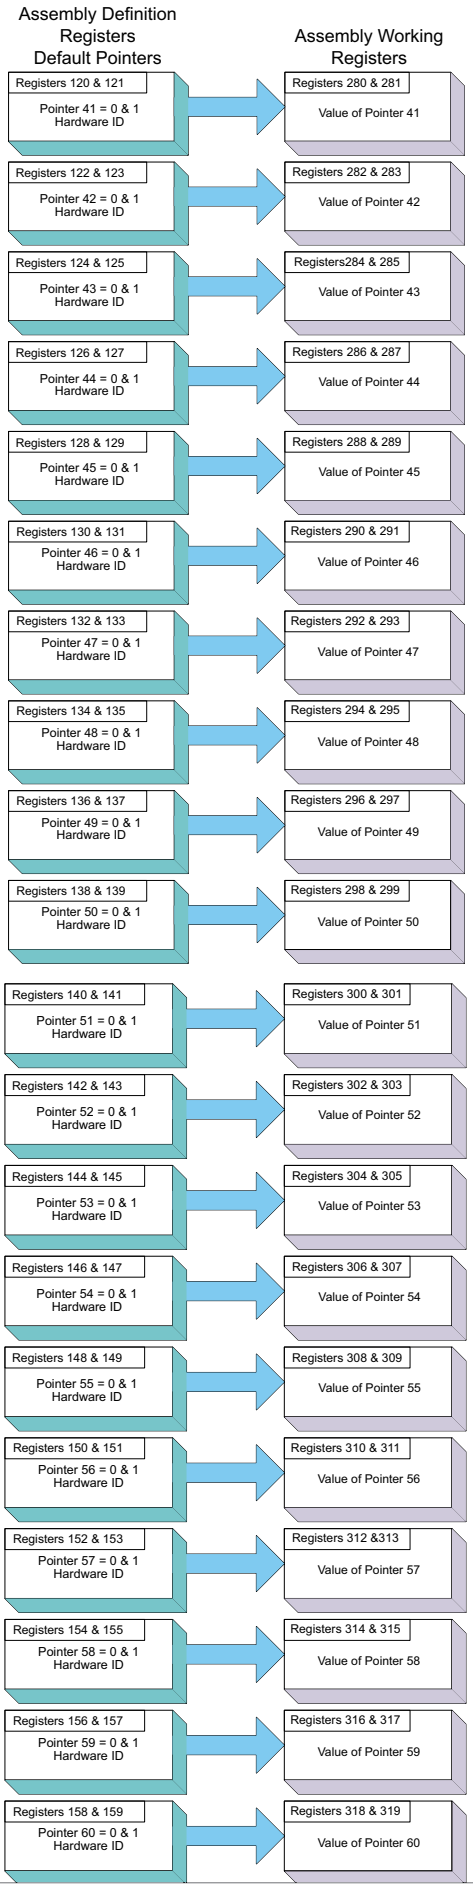

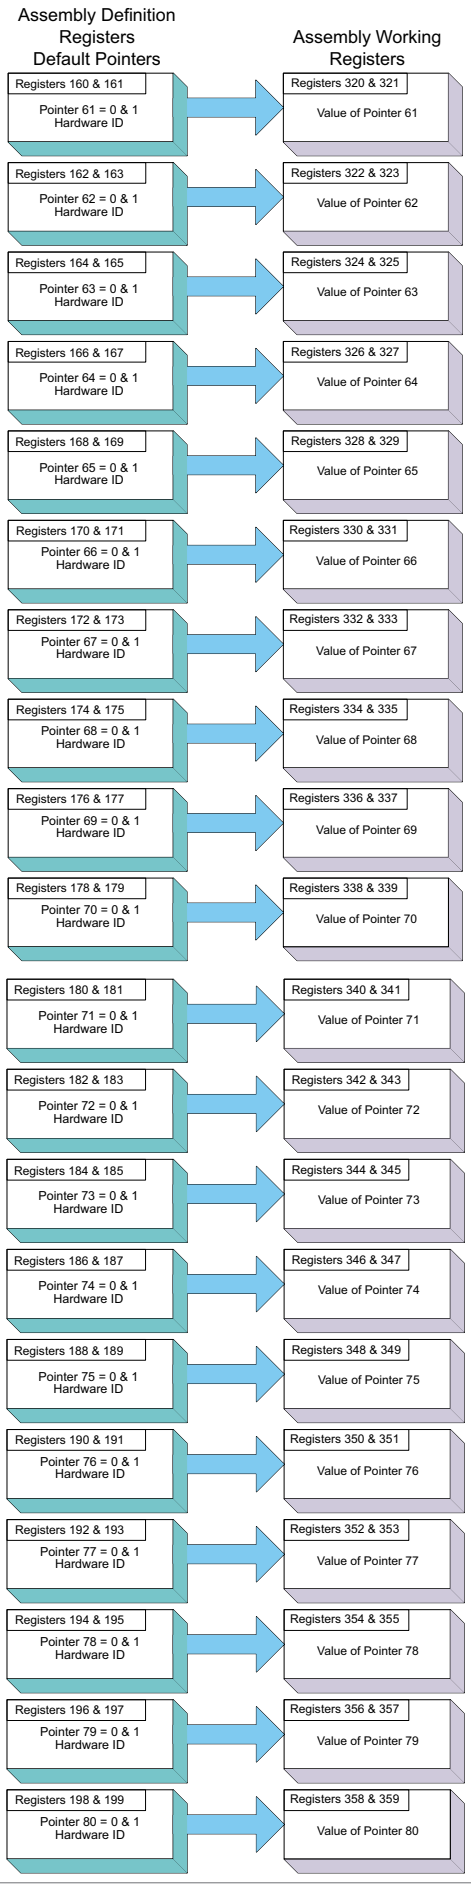

RMS Specifications

Line Voltage/Power

- 20.4 to 30.8V≂ (ac/dc), 50/60Hz, ±5 percent
- Power consumption: 7 W, 14VA
- Any external power supply used should comply with a class 2 or SELV rating.
- Data retention upon power failure via nonvolatile memory
- Compliant with Semi F47-0200, Figure R1-1 voltage sag requirements

Environment

- 0 to 149°F (-18 to 65°C) operating temperature
- -40 to 185°F (-40 to 85°C) storage temperature
- 0 to 90 percent RH, non-condensing
- Rail Mount modules are considered to be open type equipment needing to be installed in a fire and shock protection enclosure, such as a NEMA Type 1 enclosure; unless all circuit connections are Class 2 or SELV (Saftey Extra Low Voltage)

Accuracy

- Calibration accuracy and sensor conformity: ±0.1% of span, ±1°C @ the calibrated ambient temperature and rated line voltage
- Types R, S, B; 0.2%
- Type T below -50°C; 0.2%
- Calibration ambient temperature @ 77 ±5°F (25±3°C)
- Accuracy span :1000 °F (540°C) min.
- Temperature stability: ±0.1 °F/°F (±0.1°C/°C) rise in ambient max.

Agency Approvals

- UL®/EN 61010 listed; c-UL C22.2 #61010 File E185611 QUYX, QUYX7
- ANSI/ISA 12.12.01-2007 Hazardous Locations Class 1, Div. 2-Group A, B, C, D Temperature code T4 (optional) File E184390 QUZW, QUZW7
- EN 60529 IP20; RM modules
- UL® 50, Type 4X indoor use, EN 60529 IP66; 1/16 DIN RUI, NEMA 4X
- RoHS by design, W.E.E.E.
- CE

Serial Communications

- All modules ship with isolated Standard Bus protocol for configuration and communication connection to all other EZ-ZONE products. As an optional feature Modbus RTU can also be ordered.

Optional User Interface (RUI)

- 1⁄16 DIN
- Dual 4 digit, 7-segment LED displays
- Seven-segment address LED, programmed via push-button switch
- Keys: Advance, infinity, up, down keys, plus an EZ-KEY programmable function key
- Typical display update rate 1Hz

Maximum RMS Configuration

- Up to 16 scanner channels per module with a maximum of 16 modules

Mounting

- DIN-rail specification EN50022, 35 x 7.5 mm (1.38 x 0.30 in.)
- Can be DIN-rail mounted or chassis mounted with customer-supplied fasteners

Wiring Termination—Touch-Safe Terminals

- Right angle and front screw type terminal blocks (slots A, B, D, E)
  - Input, power and controller output terminals, touch-safe removable 12 to 30 AWG
- Wire strip length 7.6 mm (0.30 in.)
- Torque 0.8Nm (7.0 lb.-in.) right angle, 0.5Nm (4.51lb-in) front terminal block
- Use solid or stranded copper conductors only

Connector	Dimension “A” (mm/in.)
Standard	148 (5.80)
Straight	155 (6.10)

Optional Accessories

Power Supplies

- AC/DC Power supply converter 90-264V~ (ac) to 24V⎓ (dc) volts.
- P/N 0847-0299-0000: 31 W
- P/N 0847-0300-0000: 60 W
- P/N 0847-0301-0000: 91 W

EZ-ZONE RM Product Documentation

- User Manual, printed hard copy, P/N 0600-0071-0000
- Watlow Support Tools CD, P/N 0601-0001-0000

Universal Input

- Thermocouple, grounded or ungrounded sensors
- >20MΩ input impedance
- 3µA open sensor detection
- Max. of 2KΩ source resistance
- RTD 2 wire, platinum, 100Ω and 1000Ω @ 0°C calibration to DIN curve (0.00385Ω/Ω/°C)
- Process, 0-20mA @ 100Ω ,or 0-10V ⎓(dc) @ 20kΩ input impedance; scalable, 0-50mV, 0-1000Ω

Voltage Input Ranges
- Accuracy ±10mV ±1 LSD at standard conditions
- Temperature stability ±100 PPM/°C maximum

Milliamp Input Ranges
- Accuracy ±20µA ±1 LSD at standard conditions
- Temperature stability ±100 PPM/°C maximum

Resolution Input Ranges
- 0 to 10V: 200 µV nominal
- 0 to 20 mA: 0.5 mA nominal

•Potentiometer: 0 to 1,200Ω

Input Type	Max Error @ 25 Deg C	Accuracy Range Low	Accuracy Range High	Units
J	±1.75	0	750	Deg C
K	±2.45	-200	1250	Deg C
T	±1.55	-50	350	Deg C
T	±2.10	-200	-50	Deg C
N	±2.25	0	1250	Deg C
E	±2.10	-200	900	Deg C
R	±3.90	0	1450	Deg C
S	±3.90	0	1450	Deg C
B	±2.66	870	1700	Deg C
C	±3.32	0	2315	Deg C
D	±3.32	0	2315	Deg C
F (PTII)	±2.39	0	1343	Deg C
RTD, 100 ohm	±2.00	-200	800	Deg C
RTD, 1000 ohm	±2.00	-200	800	DegC
mV	±0.05	-50	50	mV
Volts	±0.01	0	10	Volts
mA dc	±0.02	0	20	mAmps DC
mA ac	±5	0	50	mAmps AC
Potentiometer, 1K range	±1	0	1000	Ohms

Operating Range		
Input Type	**Range Low**	**Range High**
J	-210	1200
K	-270	1371
T	-270	400
N	-270	1300
E	-270	1000
R	-50	1767
S	-50	1767
B	-50	1816
C	0	2315
D	0	2315
F (PTII)	0	1343
RTD (100 ohm)	-200	800
RTD (1000 ohm)	-200	800
mV	0	50
Volts	0	10
mAdc	0	20
mAac	0	50
Resistance, 5K range	0	5000
Resistance, 10K range	0	10000
Resistance, 20K range	0	20000
Resistance, 40K range	0	40000
Resistance, 40K range	0	40000
Potentiometer, 1K range	0	1200

Thermistor Input				
Input Type	**Max Error @ 25 Deg C**	**Accuracy Range Low**	**Accuracy Range High**	**Units**
Thermistor, 5K range	±5	0	5000	Ohms
Thermistor, 10K range	±10	0	10000	Ohms
Thermistor, 20K range	±20	0	20000	Ohms
Thermistor, 40K range	±40	0	40000	Ohms

- 0 to 40KΩ, 0 to 20KΩ, 0 to 10KΩ, 0 to 5KΩ
- 2.252KΩ and 10KΩ base at 25°C
- Linearization curves built in
- Third party Thermistor compatibility requirements

Base R @ 25C	Alpha Techniques	Beta THERM	YSI	Prompt tHEr
2.252K	Curve A	2.2K3A	004	A
10K	Curve A	10K3A	016	B
10K	Curve C	10K4A	006	C

Digital Input

- Update rate 10Hz
- DC voltage
  - Max. input 36V at 3mA
  - Min. high state 3V at 0.25mA
  - Max. low state 2V

Dry Contact

- Update rate 10Hz
- Min. open resistance 10KΩ
- Max. closed resistance 50Ω

Output Hardware

- Electromechanical relay, Form A, 5A, 24 to 240V~ (ac) or 30V⎓ (dc) max., resistive load, 100,000 cycles at rated load. Requires a min. load of 20mA at 24V, 125VA pilot duty
- Digital outputs
  - Update rate 10Hz
  - Switched DC
    - Output voltage 20V⎓ (dc)
    - Max. supply current source 40mA at 20V⎓ (dc) and 80mA at 12V⎓ (dc)
  - Open Collector
    - Switched voltage max.: 32V⎓ (dc)
    - Max. switched current per output: 1.5A
    - Max. switched current for all 6 outputs combined: 8A

Programmable Application Blocks

Actions (events) 16 total

Alarms 16 total

Compare 24 total

Off, greater than, less than, equal, not equal, greater than or equal, less than or equal

Counters 24 total

Counts up or down loads, predetermined value on load signal. Output is active when count value equals predetermined target value

Logic 24 total

Off, and, nand, or, nor, equal, not equal, Latch

Linearization 24 total

Interpolated or stepped relationship

Math 24 total

Off, average, process scale, deviation scale, differential (subtraction), ratio (divide), add, multiply, absolute difference, min., max., square root, sample and hold

Process Value 16 total

Off, sensor backup, average, crossover, wet/dry bulb, switch over, differential (subtraction), ratio (divide), add, multiply, absolute difference, min., max., square root

Timers 24 total

On Pulse produces output of fixed time on active edge of timer run signal

Delay output is a delayed start of timer run, off at same time

One Shot oven timer

Retentive measures timer run signal, output on when accumulated time exceeds target

Variable 24 total

User value for digital or analog variable

Note:

These specifications are subject to change without prior notice.

EZ-ZONE Rail-Mount Scanner Module Ordering Information

The Scanner module requires a Class 2 or SELV power supply 20.4 to 30.8 V ~(ac) / ⎓(dc), communication port provided for configuration with EZ-ZONE Configurator software.

Code Number

①② EZ-ZONE Rail Mount	③ High Density Module	④ Connector Style/ Custom Product		⑤ Slot A	⑥ Slot B	⑦ Slot D	⑧ Slot E		⑨ Future Options	⑩ Enhanced Options	⑪⑫ Additional Options
RM	S		-					-	A		

Connector Style/Custom Product - Digit ④

A	=	Right angle screw connector (standard)
F	=	Front screw connector
S	=	Custom

Slot A - Digit ⑤

R	=	4 Universal inputs (t/c, 2-wire RTD, 0-10Vdc, 0-20mA, 1K pot-entiometer) without control loops
P	=	4 Thermistor inputs without control loops

Slot B - Digit ⑥

A	=	None
R	=	4 Universal inputs (t/c, 2-wire RTD, 0-10Vdc, 0-20mA, 1K pot-entiometer) without control loops
P	=	4 Thermistor inputs without control loops

Slot D - Digit ⑦

A	=	None
R	=	4 Universal inputs (t/c, 2-wire RTD, 0-10Vdc, 0-20mA, 1K pot-entiometer) without control loops
P	=	4 Thermistor inputs without control loops
J	=	4 Mechanical relay 5A, Form A
C	=	6 Digital I/O

Slot E - Digit ⑧

A	=	None
R	=	4 Universal inputs (t/c, 2-wire RTD, 0-10Vdc, 0-20mA, 1K pot-entiometer) without control loops
P	=	4 Thermistor inputs without control loops
J	=	4 Mechanical relay 5A, Form A
C	=	6 Digital I/O
B	=	1 Digital I/O and 2 - 5A Mechanical relays (1 Form A and 1 Form C)

Future Options - Digit ⑨

A	=	Standard

Enhanced Options - Digit ⑩

A	=	Standard Bus
1	=	Standard Bus and Modbus RTU 485 (selectable via switch)

Additional Options - Digits ⑪ ⑫

Firmware, Overlays, Parameter Settings

AA	=	Standard
AB	=	Replacement connectors hardware only, for the entered model number
12	=	Class 1 Div 2 (not available with mechanical relays)
XX	=	Custom (consult factory)

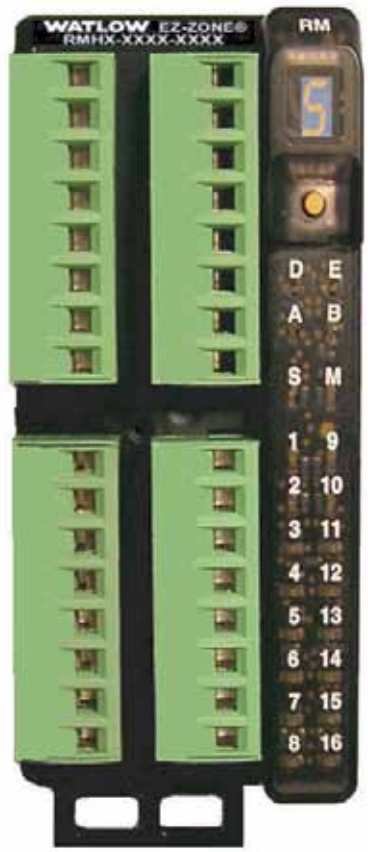

Watlow ®, EZ-ZONE ® and TRU-TUNE ® are registered trademarks of Watlow Electric Manufacturing Company.
UL® is a registered trademark of Underwriter's Laboratories, Inc.
Modbus ® is a registered trademark of Schneider Automation Incorporated.

Index

A.bL Alarm Blocking 56, 88
AC.LF AC Line Frequency 78
A.CLr Alarm Clear Request 57
ACt Action Menu 35, 52
A.dSP Alarm Display 57
A.h 1 Alarm High Set Point 36, 56, 57, 87
A.hY Alarm Hysteresis 56, 87
A 1 Analog Input Menu 34, 45
A.1S Alarm Source Instance 55
A.LA Alarm Latching 56, 87
A.LG Alarm Logic 56
ALM Alarm Menu 36, 55
A.Lo Alarm Low Set Point 36, 56, 87
A.Sd Alarm Sides 56
A.S 1 Alarm Silencing 56, 88
A.S ir Alarm Silence Request 57
A.St Alarm State 57
Attn Attention 87, 88
A.tY Alarm Type 55, 87
A.unt Altitude Units 44, 50, 77
bAUd Baud Rate 79
b.Pr Barometric Pressure 50
C_F Display Units 78
CodE Public Key 82
CoM Communications Menu 79
CPE Compare Menu 38, 60
Ctr Counter Menu 39, 64
CUSt Custom Setup 81
dAtE Date of Manufacture 83
dEC Decimal 46
dEwJ Dewpoint 74
d iAG Diagnostics Menu 83
d io Digital Input/Output Menu 35, 50
d ir Direction 50
do.S Digital Output State 35
d.PrS Display Pairs 44, 78
E 1.S Event Input Status 35
EL 1.o Electrical Input Offset 83, 85
EL 1.S Electrical Input Slope 83, 85
F 1 Digital Output Function Instance 51
F 1 Output Function Instance 54
F 1L Filter 46
Fn Function 47
Fn Output Function 54
GLbL Global Menu 78
1.CA Calibration Offset 34, 46, 85–86
1.Er Input Error Latching 46
1.Er Input Error Status 34, 46
1.P.F4 IP Fixed Address Part 4 78
LGC Logic Menu 40, 66
L in Linearization 45
Lnr Linearization Menu 37, 57
LoC Security Setting Menu 81, 82
LoC.L Locked Access Level 82
LoC.o Lock Operations Page 81, 88
LoC.P Lock Profiling Page 81, 82, 88
MATt Math Menu 41, 74
M.hL Modbus Word Order 79
Mu Electrical Measurement 83, 85
nUS Non-volatile Save 79
o.Ct Output Control 52, 55
oFSt PV Offset 35
o.h 1 Output High Power Scale 52, 55
o.Lo Output Low Power Scale 52, 55
o.tb Output Time Base 52, 55
otPt Output Menu 54
PAr Parity 79
PAS.A Administrator Password 82
PAS.E Password Enable 81
PASS Password 82
PAS.u User Password 82
P.EE Process Error Enable 45
P.EL Process Error Low 46
Pn Part Number 83
P.unt Pressure Units 44, 50
Pu Process Value Menu 47
rEv Software Revision 83
r.h 1 Range High 45, 86
r.Lo Range Low 45, 86
rLoC Read Lockout Security 81, 88
roLL Rolling Password 82
rt.L RTD Leads 45
S.bLd Software Build 83
SEn Sensor Type 45, 86
SFn.A Source Function A 55
S.h 1 Scale High 45, 86
S.Lo Scale Low 45, 86
SLoC Set Lockout Security 82, 88
Sn Serial Number 83
Su.A Source Value A 34
Su.b Source Value B 34, 35
tMr Timer Menu 38, 61
ULoC Unlock 80
USr.r User Restore Set 78, 85
USr.S User Save Set 78, 85
uAr Variable Menu 78

A

AC Line Frequency 78
Action Function 103
Action Menu 35, 52
Address Standard Bus 79
Administrator Password 82
agency approvals 3
alarm blocking 88
Alarm Clear Request 57
Alarm Function 101
Alarm Menu 36, 55
alarms
  Blocking 56, 88
  deviation 87
  Display 57
  Hysteresis 56, 87
  Latching 56, 87
  Logic 56
  process 87
  set points 87
  Sides 56
  Silencing 56, 88
  Source 55
  Type 55
Alarm Silence Request 57
Alarm State 57
Altitude Units 43, 44, 77
Analog Input Function 94
Analog Input Menu 34, 45
Assembly Definition Addresses 90
Assembly Working Addresses 90

B

Barometric Pressure 43
Baud Rate 79
Blocking 56, 88

C

calibrating an analog input 85
Calibration Offset 34, 46, 85–86
CIP (Common Industrial Protocol) 31
Clear Request 57
Communications Menu 79
  Setup Page 33, 43
Compare Function 118
Compare Menu 38, 60
connecting and wiring the modules 30
Control 52, 55
Control Function 104
Control Module Menus
  Factory Page
    Custom Setup Menu 81
    Diagnostics Menu 83
    Security Setting Menu 81, 82
  Operations Page
    Action Menu 35
    Alarm Menu 36
    Analog Input Menu 34
    Compare Menu 38
    Counter Menu 39

Digital Input/Output Menu 35
Linearization Menu 37
Logic Menu 40
Math Menu 41
Process Value Menu 34
Timer Menu 38
Setup Page
Action Menu 52
Alarm Menu 55
Analog Input Menu 45
Communications Menu 79
Compare Menu 60
Counter Menu 64
Digital Input/Output Menu 50
Global Menu 78
Linearization Menu 57
Logic Menu 66
Math Menu 74
Output Menu 54
Process Value 47
Timer Menu 61
Variable Menu 78
Counter Function 117
Counter Menu 39, 64
current measurement 124
current sensing 88
Current Sensing 88
Custom Function 119
Custom Setup Menu 81

D

Date of Manufacture 83
Decimal 46
deviation alarms 87
Dewpoint 74
Diagnostic Function 120
Diagnostics Menu 83
Digital Input/Output Function 102
Digital Input/Output Menu 35, 50
digital input specifications 124
Direction 50
Display 57
Display Pairs 44, 78
Display Units 78

E

Electrical Gain 85
Electrical Input Offset 83
Electrical Input Slope 83
Electrical Measurement 83, 85
Electrical Offset 85
Electrical Slope 86
environment 124

F

Factory Page
Control Module 80
Filter Time 46, 86
filter time constant 86
Function 43
Function Instance 51

G

Global Function 104
Global Menu 78
Setup Page 33, 43

H

High Power Scale 52, 55
high range 86
high scale 86
High Set Point
Alarm 36, 37, 56, 57, 87
Hysteresis 56, 87

I

Input Error Latching 46
Input Error Status 34, 46
inputs 4
installation 16
IP Fixed Address Part 4 78
isolation blocks 21

J

K

L

Latching 56, 87
Linearization 45
Linearization Function 100
Linearization Menu 37, 57
line voltage/power 124
Locked Access Level 82
Lock Operations Page 88
Lockout Menu 88
Lock Profiling Page 88
Logic 56
Logic Function 104
Logic Menu 40, 66
Low Power Scale 52, 55
low range 86
low scale 86
Low Set Point
Alarm 36, 56, 87

M

Math Function 107
Math Menu 41, 74
Modbus Default Assembly Structure 80-119 122, 123
Modbus - Using Programmable Memory Blocks 90
Modbus Word Order 79

N

navigating
Factory Page 80
Setup Page 33, 43
network wiring 29
Non-volatile Save 44, 79

O

Operations Page
Control Module 33
operator interface 124
ordering information
integrated controller models 126
Output Menu 54
outputs 4
Output State 35

P

P3T armor sealing system 3
Parameter 1 to 20 81
Parameter ID 31
Parity 79
Part Number 83
Password 80, 82
Peltier Delay 44
Potentiometer 23
power supplies 15
Pressure Units 43, 44
process alarms 87
Process Error Enable 45
Process Error Low 46
Process Value 34, 43, 46, 47
Process Value Function 95
Process Value Menu 34
Profibus 32
Profibus Index 31
programming the Home Page 85
Public Key 80, 82

Q

R

Range High 45, 86
Range Low 45, 86
Read Lockout Security 88
receiving a remote set point 86
restoring user settings 85
Rolling Password 82

S

saving user settings 85
Scale High 45, 86
Scale Low 45, 86
secure settings 88, 89
Security Function 119
Security Setting 81, 82
sensor backup 86
sensor selection 86
Sensor Type 45, 86
serial communications 124
Serial Number 83
Set Lockout Security 88
set point low limit 86
Setup Page
Control Module 43

Sides
Alarm 56
Silence Request 57
Silencing 56, 88
Software Build 83
Software Configuration 91
Software Revision 83
Source 55
Specifications 124
standard connector, all modules 20
State 57
System Security 89

T

Ten Point Linearization 86
Time Base 52, 55
Timer Function 112
Timer Menu 38, 61
tuning the PID parameters 85
Type 55, 87

U

User Password 82
User Restore Set 78, 85
User Save Set 78, 85
Using EZ-ZONE® Configurator Software 91
using the software 88

V

Variable Function 117
Variable Menu 78
variable time base 87

W

wiring
output 1 mechanical relay, form C 26
wiring a network 29, 30
wiring a serial EIA-485 network 29
wiring, Controller Module
mechanical relay, form A output 2, 4, 6 or 8 26
RTD input 1 to 4 23
thermocouple input 1 to 4 22
wiring termination, touch-safe terminals 124

X

Y

Z

Declaration of Conformity

EZ Zone Series RM

CE

WATLOW
1241 Bundy Blvd.
Winona, MN 55987 USA

an ISO 9001 approved facility since 1996.

Declares that the following Series RM (Rail Mount) products:

Model Numbers:	**RM** followed by additional letters or numbers describing use of up to four module options of various inputs and outputs or communications.
Classification:	Temperature control, Installation Category II, Pollution degree 2
Voltage and Frequency:	SELV 24 to 28 V□ ac 50/60 Hz or dc
Power Consumption:	RMA models 4 Watts, any other RM model 7 Watts
Environmental Rating:	IP20

Meet the essential requirements of the following European Union Directives by using the relevant standards show below to indicate compliance.

2004/108/EC Electromagnetic Compatibility Directive

EN 61326-1	**2006**		**Electrical equipment for measurement, control and laboratory use – EMC requirements, Industrial Immunity, Class A Emissions (*Not for use in a Class B environment without additional filtering).***
EN 61000-4-2	1996	A1, A2, 2001	Electrostatic Discharge Immunity
EN 61000-4-3	2006		Radiated Field Immunity
EN 61000-4-4	2004		Electrical Fast-Transient / Burst Immunity
EN 61000-4-5	2006		Surge Immunity
EN 61000-4-6	1996	A1, A2, A3, 2005	Conducted Immunity
EN 61000-4-11	2004		Voltage Dips, Short Interruptions and Voltage Variations Immunity
EN 61000-3-2	2005		Harmonic Current Emissions
EN 61000-3-3[2]	2005		Voltage Fluctuations and Flicker
SEMI F47	2000		Specification for Semiconductor Sag Immunity Figure R1-1

[2]NOTE 1: To comply with flicker requirements cycle time may need to be up to 160 seconds if load current is at 15A, or the maximum source impedance needs to be < 0.13Ω. Control power input of RM models comply with 61000-3-3 requirements.

2006/95/EC Low-Voltage Directive

EN 61010-1	**2001**	**Safety Requirements of electrical equipment for measurement, control and laboratory use. Part 1: General requirements**

Compliant with 2002/95/EC RoHS Directive

Per 2002/96/EC W.E.E.E Directive *Please Recycle Properly*

Raymond D. Feller III	Winona, Minnesota, USA	March 2010
Name of Authorized Representative	Place of Issue	Date of Issue

General Manager

Raymond D. Feller, III

Title of Authorized Representative Signature of Authorized Representative

How to Reach Us

Corporate Headquarters

Watlow Electric Manufacturing Company
12001 Lackland Road
St. Louis, MO 63146
Sales: 1-800-WATLOW2
Manufacturing Support: 1-800-4WATLOW
Email: info@watlow.com
Website: www.watlow.com
From outside the USA and Canada:
Tel: +1 (314) 878-4600
Fax: +1 (314) 878-6814

Latin America

Watlow de México S.A. de C.V.
Av. Fundición No. 5
Col. Parques Industriales
Querétaro, Qro. CP-76130
Mexico
Tel: +52 442 217-6235
Fax: +52 442 217-6403

Europe

Watlow France
Tour d'Asnières.
4 Avenue Laurent Cély
92600 Asnières sur Seine
France
Tél: + 33 (0)1 41 32 79 70
Télécopie: + 33(0)1 47 33 36 57
Email: info@watlow.fr
Website: www.watlow.fr

Watlow GmbH
Postfach 11 65, Lauchwasenstr. 1
D-76709 Kronau
Germany
Tel: +49 (0) 7253 9400-0
Fax: +49 (0) 7253 9400-900
Email: info@watlow.de
Website: www.watlow.de

Watlow Italy S.r.l.
Viale Italia 52/54
20094 Corsico MI
Italy
Tel: +39 024588841
Fax: +39 0245869954
Email: italyinfo@watlow.com
Website: www.watlow.it

Watlow Ibérica, S.L.U.
C/Marte 12, Posterior, Local 9
E-28850 Torrejón de Ardoz
Madrid - Spain
T. +34 91 675 12 92
F. +34 91 648 73 80
Email: info@watlow.es
Website: www.watlow.es

Watlow UK Ltd.
Linby Industrial Estate
Linby, Nottingham, NG15 8AA
United Kingdom
Telephone: (0) 115 964 0777
Fax: (0) 115 964 0071
Email: info@watlow.co.uk
Website: www.watlow.co.uk
From outside The United Kingdom:
Tel: +44 115 964 0777
Fax: +44 115 964 0071

Asia and Pacific

Watlow Singapore Pte Ltd.
16 Ayer Rajah Crescent,
#06-03/04,
Singapore 139965
Tel: +65 6773 9488 Fax: +65 6778 0323
Email: info@watlow.com.sg Website: www.watlow.com.sg

Watlow Australia Pty., Ltd.
4/57 Sharps Road
Tullamarine, VIC 3043
Australia
Tel: +61 3 9335 6449
Fax: +61 3 9330 3566
Website: www.watlow.com

Watlow Electric Manufacturing Company (Shanghai) Co. Ltd.
Room 501, Building 10, KIC Plaza
290 Songhu Road, Yangpu District
Shanghai, China 200433
China
Phone
Local: 4006 Watlow (4006 928569)
International: +86 21 3381 0188
Fax: +86 21 6106 1423
Email: info@watlow.cn
Website: www.watlow.cn

ワトロー・ジャパン株式会社
〒101-0047 東京都千代田区内神田1-14-4
四国ビル別館9階
Tel: 03-3518-6630 Fax: 03-3518-6632
Email: infoj@watlow.com Website: www.watlow.co.jp

Watlow Japan Ltd.
1-14-4 Uchikanda, Chiyoda-Ku
Tokyo 101-0047
Japan
Tel: +81-3-3518-6630 Fax: +81-3-3518-6632
Email: infoj@watlow.com Website: www.watlow.co.jp

Watlow Korea Co., Ltd.
#1406, E&C Dream Tower, 46, Yangpyeongdong-3ga
Yeongdeungpo-gu, Seoul 150-103
Republic of Korea
Tel: +82 (2) 2628-5770 Fax: +82 (2) 2628-5771
Website: www.watlow.co.kr

Watlow Malaysia Sdn Bhd
1F-17, IOI Business Park
No.1, Persiaran Puchong Jaya Selatan
Bandar Puchong Jaya
47100 Puchong, Selangor D.E.
Malaysia
Tel: +60 3 8076 8745 Fax: +60 3 8076 7186
Email: vlee@watlow.com
Website: www.watlow.com

瓦特龍電機股份有限公司
80143 高雄市前金區七賢二路189號 10樓之一
電話: 07-2885168 傳真: 07-2885568

Watlow Electric Taiwan Corporation
10F-1 No.189 Chi-Shen 2nd Road Kaohsiung 80143
Taiwan
Tel: +886-7-2885168 Fax: +886-7-2885568

Your Authorized Watlow Distributor

TOTAL CUSTOMER SATISFACTION
3 Year Warranty